

Method of Ring Gear Adjustment

The ring gear is bolted to the differential carrier and is positioned in the housing by spacer rings placed on either side of the differential carrier. The amount of spacers required is determined from the measurement made on the assembled housing and re-checked by measuring the backlash of the assembled unit after the pinion gear has been adjusted.

To determine the thickness of the spacer rings "S₁" and "S₂" the following dimensions must be measured:

| Example | Nominal |
|------------------------------------|-----------|
| "J" Total depth of housing | 145.21 mm |
| "L" Length of differential carrier | 138.00 mm |

All dimensions should be measured with an accuracy of 0.01 mm (.0004 in.).

The preload on the differential carrier bearings should be 0.13 to 0.17 mm.

