

# User Manual - VERDE

---

## Equipment

- WiFi
  - Air conditioning
  - Heating
  - Electrical panel
  - Coffee machine
  - Induction hob
  - Dishwasher
- 

## WiFi

- **Network name:** Portapalace
  - **Password:** portapalaceamarena
- 

## Air Conditioning

- **Location:** Bedroom
- Turn on using the ON/OFF button.
- Adjust the temperature with the +/- buttons on the remote control.
- Adjust fan speed with the FAN button.
- For heating, select the “sun” symbol using the “Mode” button.



---

## Heating

- **Type:** Independent with thermostatic valves.
- To adjust the temperature, use the thermostatic valves on the radiators.



---

## Electrical Panel

- **Location:** Wall to the left of the entrance.



## Coffee Machine

- **Nespresso:** Turn on the coffee machine by pressing the cup button near the water tank.
- When the blinking stops, the machine is ready to dispense coffee.
- Place the cup under the spout and press the cup button to dispense coffee.
- It stops automatically.



---

## Induction Hob

- Turn on the hob by pressing the power button.
- Place a pot or pan on one of the flat burners to activate the heat.
- When the coils detect the pot, only the surrounding area will heat up.
- Select the heat level.
- If a cooking zone is turned on without a pot, or if the pot is unsuitable or the wrong size, the power level indicator will flash. To avoid this, use a suitable pan.
- If the controls are not working and the cooktop is locked, try unplugging the power for 30 minutes, then turn it back on and try again.
- **Child Lock Warning (Padlock Symbol):** To activate or deactivate the child safety lock, press and hold the padlock button for about 4 seconds; when the lock is active, the symbol will appear on the display.



---

## Dishwasher

- **Location:** Lower level of the kitchen.
- The switch is located to the right of the sink.

