

# MCAL Configuration Verification Manual for Crc

## 32-bit TriCore™ AURIX™ TC3xx microcontroller family

### About this document

#### Scope and purpose

This Configuration Data Reference document is applicable to all TC3xx devices in the TriCore™ AURIX™ family of 32-bit microcontrollers.

The purpose of this document is to facilitate the integrator to verify the generated code based on the input configuration parameters. This document describes details of structures, defines, macros and variables generated from the configuration parameters.

#### Intended audience

This document is intended for integrators who need to understand the logic of the generated configuration code of AURIX™ AUTOSAR MCAL.

#### Reference documents

This document should be read in conjunction with the following documents:

- AURIX™ TC3xx MCAL User Manual Crc

## Table of contents

## Table of contents

About this document.....	1
Table of contents.....	2
Crc module .....	4
1.1 File: Crc_Cfg.h.....	4
1.1.1 Macro: CRC_AR_RELEASE_MAJOR_VERSION.....	4
1.1.2 Macro: CRC_AR_RELEASE_MINOR_VERSION .....	4
1.1.3 Macro: CRC_AR_RELEASE_REVISION_VERSION.....	4
1.1.4 Macro: CRC_SW_MAJOR_VERSION.....	5
1.1.5 Macro: CRC_SW_MINOR_VERSION .....	5
1.1.6 Macro: CRC_SW_PATCH_VERSION .....	5
1.1.7 Macro: CRC_SAFETYENABLE .....	6
1.1.8 Macro: CRC_RUNTIME_API_MODE .....	6
1.1.9 Macro: CRC_VERSION_INFO_API .....	7
1.1.10 Macro: CRC_16ARC_MODE.....	7
1.1.11 Macro: CRC_16_MODE .....	7
1.1.12 Macro: CRC_32_MODE .....	8
1.1.13 Macro: CRC_32P4_MODE .....	9
1.1.14 Macro: CRC_8_MODE .....	9
1.1.15 Macro: CRC_8H2F_MODE.....	10
1.1.16 Macro: CRC_64_MODE .....	10
1.1.17 Macro: CRC_8_DMAMODE .....	11
1.1.18 Macro: CRC_16_DMAMODE .....	11
1.1.19 Macro: CRC_32_DMAMODE .....	12
1.1.20 Macro: CRC_32P4_DMAMODE.....	12
1.1.21 Macro: CRC_DMA_MAX_CHANNELS.....	13
1.1.22 Macro: CRC_CONFIGURED_CORE[x].....	13
1.1.23 Macro: CRC_16ARC_CONFIGERROR_VAL .....	13
1.1.24 Macro: CRC_8_CONFIGERROR_VAL .....	14
1.1.25 Macro: CRC_8H2F_CONFIGERROR_VAL .....	14
1.1.26 Macro: CRC_16_CONFIGERROR_VAL .....	14
1.1.27 Macro: CRC_32_CONFIGERROR_VAL .....	15
1.1.28 Macro: CRC_32P4_CONFIGERROR_VAL.....	15
1.1.29 Macro: CRC_64_CONFIGERROR_VAL .....	16
1.2 File: Crc_Cfg.c .....	16
1.2.1 Structure: Crc_ChannelConfig_Core<x> .....	16
1.2.1.1 Member: Fce_Channel .....	17
1.2.1.2 Member: Dma_Channel .....	17
1.2.1.3 Member: ResNotificationPtr .....	18
1.2.1.4 Member: ErrNotificationPtr .....	18
1.2.2 Array: Crc_ChannelConfig[x].....	18
1.2.3 Array: Crc_Table32P4[CRC_TABLE_LENGTH] .....	19
1.2.4 Array: Crc_Table64 [CRC_TABLE_LENGTH].....	20
Revision history.....	21



## Crc module

This chapter describes the details of the configuration data generated from the CRC library.

### 1.1 File: Crc\_Cfg.h

The generated header file contains all pre-compile configuration parameters. Pre-compile time configuration allows decoupling of the static configuration from implementation. The file is generated in 'inc' folder.

#### 1.1.1 Macro: CRC\_AR\_RELEASE\_MAJOR\_VERSION

**Table 1 CRC\_AR\_RELEASE\_MAJOR\_VERSION**

<b>Name</b>	CRC_AR_RELEASE_MAJOR_VERSION	
<b>Description</b>	Major version number of AUTOSAR release on which the Crc implementation is based on.	
<b>Verification method</b>	The macro is generated with the value present in 'CommonPublishedInformation/ArMajorVersion'.  <i>Note: The macro is not user configurable.</i>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Generate Crc_Cfg.h file with ArMajorVersion 4	#define CRC_AR_RELEASE_MAJOR_VERSION (4U)

#### 1.1.2 Macro: CRC\_AR\_RELEASE\_MINOR\_VERSION

**Table 2 CRC\_AR\_RELEASE\_MINOR\_VERSION**

<b>Name</b>	CRC_AR_RELEASE_MINOR_VERSION	
<b>Description</b>	Minor version number of AUTOSAR release on which the Crc implementation is based on.	
<b>Verification method</b>	The macro is generated with the value present in 'CommonPublishedInformation/ArMinorVersion'.  <i>Note: The macro is not user configurable.</i>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Generate Crc_Cfg.h file with ArMinorVersion 2	#define CRC_AR_RELEASE_MINOR_VERSION (2U)

#### 1.1.3 Macro: CRC\_AR\_RELEASE\_REVISION\_VERSION

**Table 3 CRC\_AR\_RELEASE\_REVISION\_VERSION**

<b>Name</b>	CRC_AR_RELEASE_REVISION_VERSION
-------------	---------------------------------

## Crc module

<b>Description</b>	Revision version number of AUTOSAR release on which the Crc implementation is based on.	
<b>Verification method</b>	The macro is generated with the value present in 'CommonPublishedInformation/ArPatchVersion'.  <i>Note: The macro is not user configurable.</i>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Generate Crc_Cfg.h file with ArPatchVersion 2	#define CRC_AR_RELEASE_REVISION_VERSION (2U)

**1.1.4 Macro: CRC\_SW\_MAJOR\_VERSION**

Table 4 CRC\_SW\_MAJOR\_VERSION

<b>Name</b>	CRC_SW_MAJOR_VERSION	
<b>Description</b>	Major version number of the Crc module.	
<b>Verification method</b>	The macro is generated with the value present in 'CommonPublishedInformation/SwMajorVersion'.  <i>Note: The macro is not user configurable.</i>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Generate Crc_Cfg.h file with SwMajorVersion 10	#define CRC_SW_MAJOR_VERSION (10U)

**1.1.5 Macro: CRC\_SW\_MINOR\_VERSION**

Table 5 CRC\_SW\_MINOR\_VERSION

<b>Name</b>	CRC_SW_MINOR_VERSION	
<b>Description</b>	Minor version number of the Crc module.	
<b>Verification method</b>	The macro is generated with the value present in 'CommonPublishedInformation/SwMinorVersion'.  <i>Note: The macro is not user configurable.</i>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Generate Crc_Cfg.h file with SwMinorVersion 10	#define CRC_SW_MINOR_VERSION (10U)

**1.1.6 Macro: CRC\_SW\_PATCH\_VERSION**

Table 6 CRC\_SW\_PATCH\_VERSION

<b>Name</b>	CRC_SW_PATCH_VERSION	
<b>Description</b>	Patch level version number of the Crc module.	

**Crc module**

<b>Verification method</b>	The macro is generated with the value present in 'CommonPublishedInformation/SwPatchVersion'.	
	<i>Note: The macro is not user configurable.</i>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Generate Crc_Cfg.h file with SwPatchVersion 0	#define CRC_SW_PATCH_VERSION (0U)

### 1.1.7 Macro: CRC\_SAFETYENABLE

**Table 7 CRC\_SAFETYENABLE**

<b>Name</b>	CRC_SAFETYENABLE	
<b>Description</b>	Enables/disables safety features.	
<b>Verification method</b>	The macro is generated as STD_ON if 'CrcGeneral/CrcSafetyEnable' configuration parameter is set to 'True' else the macro is generated as STD_OFF.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	CrcSafetyEnable = True	#define CRC_SAFETYENABLE (STD_ON)
	CrcSafetyEnable = False	#define CRC_SAFETYENABLE (STD_OFF)

### 1.1.8 Macro: CRC\_RUNTIME\_API\_MODE

**Table 8 CRC\_RUNTIME\_API\_MODE**

<b>Name</b>	CRC_RUNTIME_API_MODE	
<b>Description</b>	Decides the mode of execution of Run Time API's.	
<b>Verification method</b>	The macro is generated as: <ul style="list-style-type: none"> <li>- CRC_MCAL_SUPERVISOR if 'CrcGeneral/CrcRuntimeApiMode' configuration parameter is set to 'CRC_MCAL_SUPERVISOR'</li> <li>- CRC_MCAL_USER1 if 'CrcGeneral/CrcRuntimeApiMode' configuration parameter is set to 'CRC_MCAL_USER1'</li> </ul>	
	<i>Note: CrcRuntimeApiMode will be available only when at least one of the DMA based APIs is enabled, otherwise the parameter is editable false.</i>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	CrcRuntimeApiMode = CRC_MCAL_SUPERVISOR	#define CRC_RUNTIME_API_MODE (CRC_MCAL_SUPERVISOR)
	CrcRuntimeApiMode = CRC_MCAL_USER1	#define CRC_RUNTIME_API_MODE (CRC_MCAL_USER1)

## Crc module

## 1.1.9 Macro: CRC\_VERSION\_INFO\_API

Table 9 CRC\_VERSION\_INFO\_API

<b>Name</b>	CRC_VERSION_INFO_API	
<b>Description</b>	Enables/disables Crc_GetVersionInfo API.	
<b>Verification method</b>	The macro is generated as STD_ON if 'CrcGeneral/CrcVersionInfoApi' configuration parameter is set to 'True' else the macro is generated as STD_OFF.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	CrcVersionInfoApi = True	#define CRC_VERSION_INFO_API (STD_ON)
	CrcVersionInfoApi = False	#define CRC_VERSION_INFO_API (STD_OFF)

## 1.1.10 Macro: CRC\_16ARC\_MODE

Table 10 CRC\_16ARC\_MODE

<b>Name</b>	CRC_16ARC_MODE	
<b>Description</b>	Switch to select one of the available CRC 16-bit (0x8005h) calculation methods.	
<b>Verification method</b>	The macro is generated as: <ul style="list-style-type: none"> <li>- CRC_HARDWARE_MODE if 'Crc16ARCMODE' configuration container is set to CRC_16_ARC_HARDWARE</li> <li>- Else generated as CRC_RUNTIME_MODE if 'Crc16ARCMODE' configuration container is set to CRC_16_ARC_RUNTIME</li> <li>- Else generated as CRC_TABLE_MODE if 'Crc16ARCMODE' configuration container is set to CRC_16_TABLE</li> <li>- Else the macro is generated as STD_OFF.</li> </ul>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Container Crc16ARCMODE= CRC_16_ARC_HARDWARE	#define CRC_16ARC_MODE (CRC_HARDWARE_MODE)
	Container Crc16ARCMODE= CRC_16_ARC_RUNTIME	#define CRC_16ARC_MODE (CRC_RUNTIME_MODE)
	Container Crc16ARCMODE= CRC_16_ARC_TABLE	#define CRC_16ARC_MODE (CRC_TABLE_MODE)
	Container Crc16ARCMODE= empty	#define CRC_16ARC_MODE (STD_OFF)

## 1.1.11 Macro: CRC\_16\_MODE

Table 11 CRC\_16\_MODE

**Crc module**

<b>Name</b>	CRC_16_MODE	
<b>Description</b>	Selection of 16 bit CRC method (based on CCITT-FALSE CRC16 0x1021 Polynomial).	
<b>Verification method</b>	The macro is generated as : <ul style="list-style-type: none"> <li>- CRC_HARDWARE_MODE if 'Crc16Mode' configuration container is set to CRC_16_HARDWARE</li> <li>- Else generated as CRC_RUNTIME_MODE if 'Crc16Mode' configuration container is set to CRC_16_RUNTIME</li> <li>- Else generated as CRC_TABLE_MODE if 'Crc16Mode' configuration container is set to CRC_16_TABLE</li> <li>- Else the macro is generated as STD_OFF.</li> </ul>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Container Crc16Mode = CRC_16_HARDWARE	#define CRC_16_MODE (CRC_HARDWARE_MODE)
	Container Crc16Mode = CRC_16_RUNTIME	#define CRC_16_MODE (CRC_RUNTIME_MODE)
	Container Crc16Mode = CRC_16_TABLE	#define CRC_16_MODE (CRC_TABLE_MODE)
	Container Crc16Mode = empty	#define CRC_16_MODE (STD_OFF)

**1.1.12 Macro: CRC\_32\_MODE**
**Table 12 CRC\_32\_MODE**

<b>Name</b>	CRC_32_MODE	
<b>Description</b>	Selection of 32 bit CRC method (based on IEEE-802.3 CRC32 0x04C11DB7 Polynomial).	
<b>Verification method</b>	The macro is generated as: <ul style="list-style-type: none"> <li>- CRC_HARDWARE_MODE if 'Crc32Mode' configuration container is set to CRC_32_HARDWARE</li> <li>- Else generated as CRC_RUNTIME_MODE if 'Crc32Mode' configuration container is set to CRC_32_RUNTIME</li> <li>- Else generated as CRC_TABLE_MODE if 'Crc32Mode' configuration container is set to CRC_32_TABLE</li> <li>- Else the macro is generated as STD_OFF.</li> </ul>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Container Crc32Mode = CRC_32_RUNTIME	#define CRC_32_MODE (CRC_RUNTIME_MODE)
	Container Crc32Mode = CRC_32_TABLE	#define CRC_32_MODE (CRC_TABLE_MODE)
	Container Crc32Mode = empty	#define CRC_32_MODE (STD_OFF)



## Crc module

## 1.1.13 Macro: CRC\_32P4\_MODE

Table 13 CRC\_32P4\_MODE

<b>Name</b>	CRC_32P4_MODE	
<b>Description</b>	Selection of 32 bit CRCP4 method (based on 0xF4ACFB13 Polynomial).	
<b>Verification method</b>	The macro is generated as : <ul style="list-style-type: none"> <li>- CRC_RUNTIME_MODE if 'Crc32P4Mode' configuration container is set to CRC_32P4_RUNTIME</li> <li>- Else generated as CRC_TABLE_MODE if 'Crc32P4Mode' configuration container is set to CRC_32P4_TABLE</li> <li>- Else the macro is generated as STD_OFF.</li> </ul>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Container Crc32P4Mode = CRC_32P4_RUNTIME	#define CRC_32P4_MODE (CRC_RUNTIME_MODE)
	Container Crc32P4Mode = CRC_32P4_TABLE	#define CRC_32P4_MODE (CRC_TABLE_MODE)
	Container Crc32P4Mode = empty	#define CRC_32P4_MODE (STD_OFF)

## 1.1.14 Macro: CRC\_8\_MODE

Table14 CRC\_8\_MODE

<b>Name</b>	CRC_8_MODE	
<b>Description</b>	Selection of 8 bit CRC method (based on SAE-J1850 CRC8 0x1D Polynomial).	
<b>Verification method</b>	The macro is generated as: <ul style="list-style-type: none"> <li>- CRC_HARDWARE_MODE if 'Crc8Mode' configuration container is set to CRC_8_HARDWARE</li> <li>- Else generated as CRC_RUNTIME_MODE if 'Crc8Mode' configuration container is set to CRC_8_RUNTIME</li> <li>- Else generated as CRC_TABLE_MODE if 'Crc8Mode' configuration container is set to CRC_8_TABLE</li> <li>- Else the macro is generated as STD_OFF.</li> </ul>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Container Crc8Mode = CRC_8_HARDWARE	#define CRC_8_MODE (CRC_HARDWARE_MODE)
	Container Crc8Mode = CRC_8_RUNTIME	#define CRC_8_MODE (CRC_RUNTIME_MODE)
	Container Crc8Mode = CRC_8_TABLE	#define CRC_8_MODE (CRC_TABLE_MODE)

## Crc module

Container Crc8Mode = empty	#define CRC_8_MODE (STD_OFF)
----------------------------	------------------------------

## 1.1.15 Macro: CRC\_8H2F\_MODE

Table 15 CRC\_8H2F\_MODE

Name	CRC_8H2F_MODE	
Description	Selection of 8 bit CRC method (based on 0x2F Polynomial).	
Verification method	The macro is generated as: <ul style="list-style-type: none"> <li>- CRC_HARDWARE_MODE if 'Crc8H2FMode' configuration container is set to CRC_8H2F_HARDWARE</li> <li>- Else generated as CRC_RUNTIME_MODE if 'Crc8H2FMode' configuration container is set to CRC_8H2F_RUNTIME</li> <li>- Else generated as CRC_TABLE_MODE if 'Crc8H2FMode' configuration container is set to CRC_8H2F_TABLE</li> <li>- Else the macro is generated as STD_OFF.</li> </ul>	
Example(s)	Action	Generated output
	Container Crc8H2FMode = CRC_8H2F_HARDWARE	#define CRC_8H2F_MODE (CRC_HARDWARE_MODE)
	Container Crc8H2FMode = CRC_8H2F_RUNTIME	#define CRC_8H2F_MODE (CRC_RUNTIME_MODE)
	Container Crc8H2FMode = CRC_8H2F_TABLE	#define CRC_8H2F_MODE (CRC_TABLE_MODE)
	Container Crc8H2FMode = empty	#define CRC_8H2F_MODE (STD_OFF)

## 1.1.16 Macro: CRC\_64\_MODE

Table 16 CRC\_64\_MODE

Name	CRC_64_MODE	
Description	Switch to select one of the available CRC 64-bit calculation methods.  <i>Note: CRC64 does not support CRC calculation in the hardware mode (CRC_64_HARDWARE) as the current FCE engine does not provide the kernel for CRC64.</i>	
Verification method	The macro is generated as: <ul style="list-style-type: none"> <li>- CRC_64_RUNTIME if 'Crc64Mode' configuration container is set to CRC_64_RUNTIME</li> <li>- Else generated as CRC_TABLE_MODE if 'Crc64Mode' configuration container is set to CRC_64_TABLE</li> <li>- Else the macro is generated as STD_OFF.</li> </ul>	
Example(s)	Action	Generated output

## Crc module

Container Crc64Mode = CRC_64_RUNTIME	#define CRC_64_MODE (CRC_RUNTIME_MODE)
Container Crc64Mode = CRC_64_TABLE	#define CRC_64_MODE (CRC_TABLE_MODE)
Container Crc64Mode = empty	#define CRC_64_MODE (STD_OFF)

### 1.1.17 Macro: CRC\_8\_DMAMODE

**Table 17 CRC\_8\_DMAMODE**

<b>Name</b>	CRC_8_DMAMODE	
<b>Description</b>	Pre-processor switch to enable / disable CrcDma8bitApi for the polynomial CRC8. True: Crc_DmaCalculateCRC8 API enable. False: Crc_DmaCalculateCRC8 API disable. The optional APIs are disabled by default to minimize the executable code size.	
<b>Verification method</b>	The macro is generated as: - STD_ON if 'CrcDma8bitApi' configuration is enabled - Else generated as STD_OFF if 'CrcDma8bitApi' configuration is disabled.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Container CrcDma8bitApi = True	#define CRC_8_DMAMODE (STD_ON)
	Container CrcDma8bitApi = False	#define CRC_8_DMAMODE (STD_OFF)

### 1.1.18 Macro: CRC\_16\_DMAMODE

**Table 18 CRC\_16\_DMAMODE**

<b>Name</b>	CRC_16_DMAMODE	
<b>Description</b>	Pre-processor switch to enable / disable CrcDma16bitApi for the polynomial CRC16. True: Crc_DmaCalculateCRC16 API enable. False: Crc_DmaCalculateCRC16 API disable. The optional APIs are disabled by default to minimize the executable code size.	
<b>Verification method</b>	The macro is generated as: - STD_ON if 'CrcDma16bitApi' configuration is enabled - Else generated as STD_OFF if 'CrcDma16bitApi' configuration is disabled.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Container CrcDma16bitApi = True	#define CRC_16_DMAMODE (STD_ON)
	Container CrcDma16bitApi = False	#define CRC_16_DMAMODE (STD_OFF)

## Crc module

## 1.1.19 Macro: CRC\_32\_DMAMODE

Table 19 CRC\_32\_DMAMODE

<b>Name</b>	CRC_32_DMAMODE	
<b>Description</b>	Pre-processor switch to enable / disable CrcDma32bitApi for the polynomial CRC32. True: Crc_DmaCalculateCRC32 API enable. False: Crc_DmaCalculateCRC32 API disable. The optional APIs are disabled by default to minimize the executable code size.	
<b>Verification method</b>	The macro is generated as: - STD_ON if 'CrcDma32bitApi' configuration is enabled - Else generated as STD_OFF if 'CrcDma32bitApi' configuration is disabled.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Container CrcDma32bitApi = True	#define CRC_32_DMAMODE (STD_ON)
	Container CrcDma32bitApi = False	#define CRC_32_DMAMODE (STD_OFF)

## 1.1.20 Macro: CRC\_32P4\_DMAMODE

Table 20 CRC\_32P4\_DMAMODE

<b>Name</b>	CRC_32P4_DMAMODE	
<b>Description</b>	Pre-processor switch to enable / disable CrcDma32P4bitApi for the polynomial CRC16. True: Crc_DmaCalculateCRC32P4 API enable. False: Crc_DmaCalculateCRC32P4 API disable. The optional APIs are disabled by default to minimize the executable code size.	
<b>Verification method</b>	The macro is generated as: - STD_ON if 'CrcDma32P4bitApi' configuration is enabled - Else generated as STD_OFF if 'CrcDma32P4bitApi' configuration is disabled.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Container CrcDma32P4bitApi = True	#define CRC_32P4_DMAMODE (STD_ON)
	Container CrcDma32P4bitApi = False	#define CRC_32P4_DMAMODE (STD_OFF)

## Crc module

## 1.1.21 Macro: CRC\_DMA\_MAX\_CHANNELS

Table 21 CRC\_DMA\_MAX\_CHANNELS

<b>Name</b>	CRC_DMA_MAX_CHANNELS	
<b>Description</b>	The maximum number of the DMA channels configured in the CRC module	
<b>Verification method</b>	The macro is generated as a numeric value which corresponds to the total number of DMA channels configured.  <i>Note: The macro is not user configurable.</i>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Three cores are allocated with the DMA resources.	#define CRC_DMA_MAX_CHANNELS (3U)

## 1.1.22 Macro: CRC\_CONFIGURED\_CORE[x]

Table 22 CRC\_CONFIGURED\_CORE[x]

<b>Name</b>	CRC_CONFIGURED_CORE[x]	
<b>Description</b>	This parameter provides the configured COREs. x represent the core number.	
<b>Verification method</b>	The macro is generated as: - STD_ON if the core[x] is assigned with the FCE and DMA resources. Else generated as STD_OFF if the core[x] is not assigned with any resources.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Core0 is assigned with the resources	#define CRC_CONFIGURED_CORE0 (STD_ON)
	Core3 is not assigned with any resources	#define CRC_CONFIGURED_CORE3 (STD_OFF)

## 1.1.23 Macro: CRC\_16ARC\_CONFIGERROR\_VAL

Table 23 CRC\_16ARC\_CONFIGERROR\_VAL

<b>Name</b>	CRC_16ARC_CONFIGERROR_VAL	
<b>Description</b>	16 bit error return value for Crc_CalculateCRC16ARC API.	
<b>Verification method</b>	The macro is generated as a numeric value set in the configuration parameter 'CrcGeneral/Crc16ARCReturnErrorValue'.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Set Crc16ARCReturnErrorValue as 0	#define CRC_16_CONFIGERROR_VAL (0U)

## Crc module

Set Crc16ARCReturnErrorValue as 240	#define CRC_16_CONFIGERROR_VAL (240U)
-------------------------------------	---------------------------------------

**1.1.24 Macro: CRC\_8\_CONFIGERROR\_VAL****Table 24 CRC\_8\_CONFIGERROR\_VAL**

<b>Name</b>	CRC_8_CONFIGERROR_VAL	
<b>Description</b>	8 bit error return value for Crc_CalculateCRC8 API.	
<b>Verification method</b>	The macro is generated as a numeric value set in the configuration parameter 'CrcGeneral/Crc8ReturnErrorValue'.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Set Crc8ReturnErrorValue as 0	#define CRC_8_CONFIGERROR_VAL (0U)
	Set Crc8ReturnErrorValue as 240	#define CRC_8_CONFIGERROR_VAL (240U)

**1.1.25 Macro: CRC\_8H2F\_CONFIGERROR\_VAL****Table 25 CRC\_8H2F\_CONFIGERROR\_VAL**

<b>Name</b>	CRC_8H2F_CONFIGERROR_VAL	
<b>Description</b>	8 bit error return value for Crc_CalculateCRC8H2F API.	
<b>Verification method</b>	The macro is generated as a numeric value set in the configuration parameter 'CrcGeneral/Crc8H2FReturnErrorValue'.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Set Crc8H2FReturnErrorValue as 0	#define CRC_8H2F_CONFIGERROR_VAL (0U)
	Set Crc8H2FReturnErrorValue as 150	#define CRC_8H2F_CONFIGERROR_VAL (150U)

**1.1.26 Macro: CRC\_16\_CONFIGERROR\_VAL****Table 26 CRC\_16\_CONFIGERROR\_VAL**

<b>Name</b>	CRC_16_CONFIGERROR_VAL	
<b>Description</b>	16 bit error return value for Crc_CalculateCRC16 API.	
<b>Verification method</b>	The macro is generated as a numeric value set in the configuration parameter 'CrcGeneral/Crc16ReturnErrorValue'.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Set Crc16ReturnErrorValue as 0	#define CRC_16_CONFIGERROR_VAL (0U)

## Crc module

Set Crc16ReturnErrorValue as 200	#define CRC_16_CONFIGERROR_VAL (200U)
-------------------------------------	---------------------------------------

**1.1.27 Macro: CRC\_32\_CONFIGERROR\_VAL****Table 27 CRC\_32\_CONFIGERROR\_VAL**

<b>Name</b>	CRC_32_CONFIGERROR_VAL	
<b>Description</b>	32 bit error return value for Crc_CalculateCRC32 API.	
<b>Verification method</b>	The macro is generated as a numeric value set in the configuration parameter 'CrcGeneral/Crc32ReturnErrorValue'.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Set Crc32ReturnErrorValue as 0	#define CRC_32_CONFIGERROR_VAL (0U)
	Set Crc32ReturnErrorValue as 150	#define CRC_32_CONFIGERROR_VAL (150U)

**1.1.28 Macro: CRC\_32P4\_CONFIGERROR\_VAL****Table 28 CRC\_32P4\_CONFIGERROR\_VAL**

<b>Name</b>	CRC_32P4_CONFIGERROR_VAL	
<b>Description</b>	32 bit error return value for Crc_CalculateCRC32P4 API.	
<b>Verification method</b>	The macro is generated as a numeric value set in the configuration parameter 'CrcGeneral/Crc32P4ReturnErrorValue'.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Set Crc32P4ReturnErrorValue as 0	#define CRC_32P4_CONFIGERROR_VAL (0U)
	Set Crc32P4ReturnErrorValue as 200	#define CRC_32P4_CONFIGERROR_VAL (200U)

### 1.1.29 Macro: CRC\_64\_CONFIGERROR\_VAL

**Table 29 CRC\_64\_CONFIGERROR\_VAL**

<b>Name</b>	CRC_64_CONFIGERROR_VAL	
<b>Description</b>	64 bit error return value for Crc_CalculateCRC64 API.	
<b>Verification method</b>	The macro is generated as a numeric value set in the configuration parameter 'CrcGeneral/Crc64ReturnErrorValue'.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Set Crc64ReturnErrorValue as 0	#define CRC_64_CONFIGERROR_VAL (0U)
	Set Crc64ReturnErrorValue as 200	#define CRC_64_CONFIGERROR_VAL (200U)

## 1.2 File: Crc\_Cfg.c

### 1.2.1 Structure: Crc\_ChannelConfig\_Core<x>

**Table 30 Crc\_ChannelConfig\_Core<x>**

<b>Name</b>	Crc_ChannelConfig_Core<x>	
<b>Type</b>	Crc_ChannelConfigType	
<b>Description</b>	Configuration structure for the resource configured in the CRC module for each core.	
<b>Verification method</b>	The generated structure will be present in Crc_Cfg.c file. The contents of each member of the structure is explained in the further sections.	
	<i>Note: Crc_ChannelConfig_Core&lt;x&gt; will be available only when at least one of the DMA based API is enabled.</i>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	<ul style="list-style-type: none"> <li>Configure only one resource in core0 with following resource configuration settings</li> <li>1. Fce_Channel</li> <li>2. Dma_Channel</li> <li>3. ResNotificationPtr</li> <li>4. ErrNotificationPtr</li> </ul> <p>Output is shown for Core 0</p>	<pre>static const Crc_ChannelConfigType Crc_ChannelConfig_Core0= {     /*FCE channel number*/     1U,     /*DMA channel number*/     2U,     /*Result handler configured by the user for the channel*/     App_CrcNofitCore0,     /*Error handler configured by the user for the channel*/</pre>



## Crc module

		App_CrcNofitErrCore0 };
--	--	----------------------------

## 1.2.1.1 Member: Fce\_Channel

Table 31 Fce\_Channel

<b>Name</b>	Fce_Channel	
<b>Type</b>	uint8	
<b>Description</b>	This element contains the FCE hardware channel number for the core.	
<b>Verification method</b>	Configure the FCE channel number in /Crc/CrcChannelConfig/CrcChannelId	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Configure CrcChannelId = 0	/*FCE channel number*/ 0U,
	Configure CrcChannelId = 2	/*FCE channel number*/ 2U,

## 1.2.1.2 Member: Dma\_Channel

Table 32 Dma\_Channel

<b>Name</b>	Dma_Channel	
<b>Type</b>	uint8	
<b>Description</b>	This element contains the reference to DMA resource allocated to FCE channel for each core.	
<b>Verification method</b>	Select the Dma channel from the drop-down list /Crc/CrcChannelConfig/CrcDmaChannel	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Configure CrcDmaChannel = /Dma/Dma/DmaChannelConfig_ 0	/*DMA channel number*/ 0U,
	Configure CrcDmaChannel = /Dma/Dma/DmaChannelConfig_ 3	/*DMA channel number*/ 3U,

### 1.2.1.3 Member: ResNotificationPtr

**Table 33** ResNotificationPtr

<b>Name</b>	ResNotificationPtr	
<b>Type</b>	Crc_ResNotificationPtrType	
<b>Description</b>	This is a user defined result notification callback function will be invoked by the CRC driver on successful CRC calculation.	
<b>Verification method</b>	The generated notification function will be present in Crc_Cfg.c file. Configure the user callback function in /Crc/CrcChannelConfig/CrcResultNotification.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Configure CrcResultNotification = App_CrcNofitCore0	<pre>/*Result handler configured by the user for the channel*/ App_CrcNofitCore0,</pre>
	Configure CrcResultNotification = App_CrcNofitCore3	<pre>/*Result handler configured by the user for the channel*/ App_CrcNofitCore3,</pre>

### 1.2.1.4 Member: ErrNotificationPtr

**Table 34** ErrNotificationPtr

<b>Name</b>	ErrNotificationPtr	
<b>Type</b>	Crc_ErrNotificationPtrType	
<b>Description</b>	This is the user defined error notification callback function will be invoked by the CRC driver, when an error occurred due to move engine.	
<b>Verification method</b>	The generated notification function will be present in Crc_Cfg.c file. Configure the user callback function in /Crc/CrcChannelConfig/CrcErrorNotification.	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Configure CrcErrorNotification = App_CrcNofitErrCore0	<pre>/*Error handler configured by the user for the channel*/ App_CrcNofitErrCore0,</pre>
	Configure CrcErrorNotification = App_CrcNofitErrCore3	<pre>/*Error handler configured by the user for the channel*/ App_CrcNofitErrCore3,</pre>

## 1.2.2 Array: Crc\_ChannelConfig[x]

**Table 35** Crc\_ChannelConfig[x]

<b>Name</b>	Crc_ChannelConfig[X]
-------------	----------------------

## Crc module

<b>Type</b>	Crc_ChannelConfigType	
<b>Description</b>	Array holds the address of CRC channel configuration specific to each core.	
<b>Verification method</b>	<p>The generated array will be present in Crc_Cfg.c file. Configure the Crc channel in /Crc/CrcChannelConfig</p> <p>If the Crc channel is configured, The Crc_ChannelConfig_Core&lt;x&gt; address will be referenced for each core otherwise NULL_PTR will be present.</p> <p><i>Note: Crc_ChannelConfig will be available only when at least one of the DMA based API is enabled.</i></p>	
<b>Example(s)</b>	<b>Action</b>	<b>Generated output</b>
	Only core0 and core1 configured for variant TC399x	<pre>const Crc_ChannelConfigType *const Crc_ChannelConfig[6] = {     /*Config parameter for Core0*/     &amp;Crc_ChannelConfig_Core0,     /*Config parameter for Core1*/     &amp;Crc_ChannelConfig_Core1,     /*Core2 is not configured or not     available*/     NULL_PTR,     /*Core3 is not configured or not     available*/     NULL_PTR,     /*Core4 is not configured or not     available*/     NULL_PTR,     /*Core5 is not configured or not     available*/     NULL_PTR, };</pre>

### 1.2.3 Array: Crc\_Table32P4[CRC\_TABLE\_LENGTH]

**Table 36** Crc\_Table32P4[CRC\_TABLE\_LENGTH]

<b>Name</b>	Crc_Table32P4[CRC_TABLE_LENGTH]
<b>Type</b>	uint32
<b>Description</b>	The array contains the lookup table for CRC32P4 calculation. (table method)
<b>Verification method</b>	The generated array will be present in Crc_Cfg.c file. Select the calculation mode from the drop-down list /Crc/CrcGeneral/Crc32P4Mode

## Crc module

<i>Note: The table will be available only when the mode is selected to table method.</i>		
Example(s)	Action	Generated output
	Configure Crc32P4Mode = CRC_32P4_TABLE	<pre>const uint32 Crc_Table32P4[256] = { 0x00000000U, 0xF4ACFB13U, 0x1DF50D35U, 0xE959F626U, 0x3BEA1A6AU, 0xCF46E179U, 0x261F175FU, 0xD2B3EC4CU, 0x77D434D4U, 0x8378CFC7U, 0x6A2139E1U, 0x9E8DC2F2U, ... ... };</pre>

### 1.2.4 Array: Crc\_Table64 [CRC\_TABLE\_LENGTH]

Table 37 Crc\_Table64 [CRC\_TABLE\_LENGTH]

Name	Crc_Table64[CRC_TABLE_LENGTH]	
Type	uint64	
Description	The array contains the lookup table for CRC64 calculation. (table method)	
Verification method	The generated array will be present in Crc_Cfg.c file. Select the calculation mode from the drop-down list /Crc/CrcGeneral/Crc64Mode  <i>Note: The table will be available only when the mode is selected to table method.</i>	
Example(s)	Action	Generated output
	Configure Crc64Mode = CRC_64_TABLE	<pre>const uint64 Crc_Table64[256] = { 0x0000000000000000U, 0x42F0E1EBA9EA3693U, 0x85E1C3D753D46D26U, 0xC711223CFA3E5BB5U,  0x493366450E42ECDFU, 0x0BC387AEA7A8DA4CU, 0xCCD2A5925D9681F9U, 0x8E224479F47CB76AU,  ... ... };</pre>

**Revision history****Revision history****Major changes since the last revision**

Date	Version	Description
2020-12-07	V3.0	Document released
2020-12-04	V2.1	For inspection <ul style="list-style-type: none"><li>Crc driver chapter moved from MC-ISAR_TC3xx_Config_Verification_Manual_Basic.pdf to this document.</li><li>Macros and structures are added for AS440 changes and DMA based APIs.</li></ul>
2019-07-19	V2.0	No change identified from previous releases. Only version and date change
2019-02-18	V1.10.0_1.0	Initial Release

## Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

**Edition 2020-12-07**

**Published by**

**Infineon Technologies AG**

**81726 Munich, Germany**

**© 2020 Infineon Technologies AG.**

**All Rights Reserved.**

**Do you have a question about this document?**

**Email: [erratum@infineon.com](mailto:erratum@infineon.com)**

**Document reference**

**Doc\_Number**

## IMPORTANT NOTICE

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics ("Beschaffheitsgarantie").

With respect to any examples, hints or any typical values stated herein and/or any information regarding the application of the product, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

In addition, any information given in this document is subject to customer's compliance with its obligations stated in this document and any applicable legal requirements, norms and standards concerning customer's products and any use of the product of Infineon Technologies in customer's applications.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

For further information on the product, technology, delivery terms and conditions and prices please contact your nearest Infineon Technologies office ([www.infineon.com](http://www.infineon.com)).

## WARNINGS

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.