

# SHELL LOAD v. 2.0

## DASHBOARD

Setpoint 0.00 gn/gr

Actual 0.00 gn/gr

## OPTIONS

Increase - Setpoint

Decrease - Setpoint

Tara - Manual

Menu - Enter menu

## Menu

Memory Load

1

2

3

4

5

5 slots to store weights

Memory Save

1

2

3

4

5

5 slots to store weights

Calibrate Scale

Unit

gn

g

Auto Tara

On

Off

Fast Dose Speed Settings

Slow Dose Speed Setting

Speed settings for Slow/Fast dosing

Dose Fast Start

Dose Slow Start

Set when to start of process Slow/Fast dosing before the target weight is reached

Tolerance

Setting the acceptable deviation of weighings in relation to the expected result

Compensation

This setting is used to set deviation between weighted gun powder on "Shell Load" in comparison to a measured weight on other scale.

Timeout Weight

Maximum time for measure one dosage in seconds

Factory Reset