

VarioGPS JetiBox settings

Firmware V2.1

VarioGPS Sensor
Version V2.1b

Wellcome screen and version
of VarioGPS sensor

Reset offset

Press **DOWN** to reset all
telemetry values to zero

GPS mode:
Extended

Press **UP/DOWN** to change
GPS mode:
- Disabled
- Basic
- Extended

GPS distance:
3D

Press **DOWN** to change
GPS distance mode:
- 2D
- 3D

Pressure sensor:
BMP280

Show detected pressure
sensor

Vario filter
X: 0.88

Press **UP/DOWN** to adjust
Vario Filter-X

Vario filter
Y: 0.15

Press **UP/DOWN** to adjust
Vario Filter-Y

Vario deadzone:
5 cm

Press **UP/DOWN** to adjust
Vario deadzone

Main drive:
APM2.5 90A/18V

Press **UP/DOWN** to select
current/voltage sensor for
main drive

Capacity reset:
Auto

Press **UP/DOWN** to change
Capacity reset mode:
- Startup
- Auto
- Manual

Rx1 voltage:
Disabled

Press **DOWN** to enable
Rx1 voltage

Rx2 voltage:
Disabled

Press **DOWN** to enable
Rx2 voltage

Ext. Temp:
Disabled

Press **DOWN** to enable
External temperature

Save and restart

Press **DOWN** to save all
changed settings

Load defaults

Press **DOWN** to load default
settings