



iRobot®

Roomba® Vacuuming Robot

The iRobot® Roomba® 600 Series vacuums on its own, picking up dirt, hair and debris at the touch of a button.



SMART

iAdapt® Navigation and a full suite of sensors enable Roomba® to seamlessly navigate around obstacles, under furniture, and along wall edges, while avoiding stairs and other drop-offs.


- At just 3.6" (9.2 cm) tall, Roomba has been specifically designed to fit under most furniture and kickboards, so dirt has no place to hide.
- Cliff detect sensors allow Roomba to avoid stairs and other dangerous drop-offs.



SIMPLE

Just press CLEAN or set a schedule that is convenient for you. Select Roomba models can be preset to vacuum up to seven times per week giving you a clean home, every day.

- With just the press of a button, Roomba gets to work with no programming required.
- Roomba automatically adjusts to clean carpets, tile, hardwood and laminate floors as it moves through your home.
- Roomba is always ready to clean because it automatically returns to its Home Base® between cleanings to recharge.
- Select models can be preset to vacuum up to seven times per week meaning your home can stay clean every day.

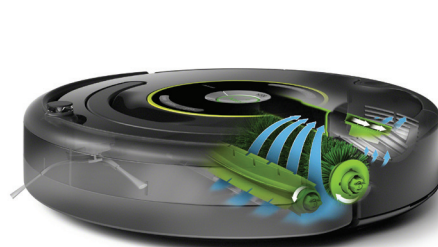

CLEAN

The patented 3-Stage Cleaning System uses a combination of agitation, brushing, and suction to remove dust, dirt, and hair from your floors.

- Spinning side brush pushes debris into the path of the 3-Stage Cleaning System making Roomba adept at sweeping dirt from wall edges.
- AeroVac™ Filter captures fine dust and debris.

iRobot®