 
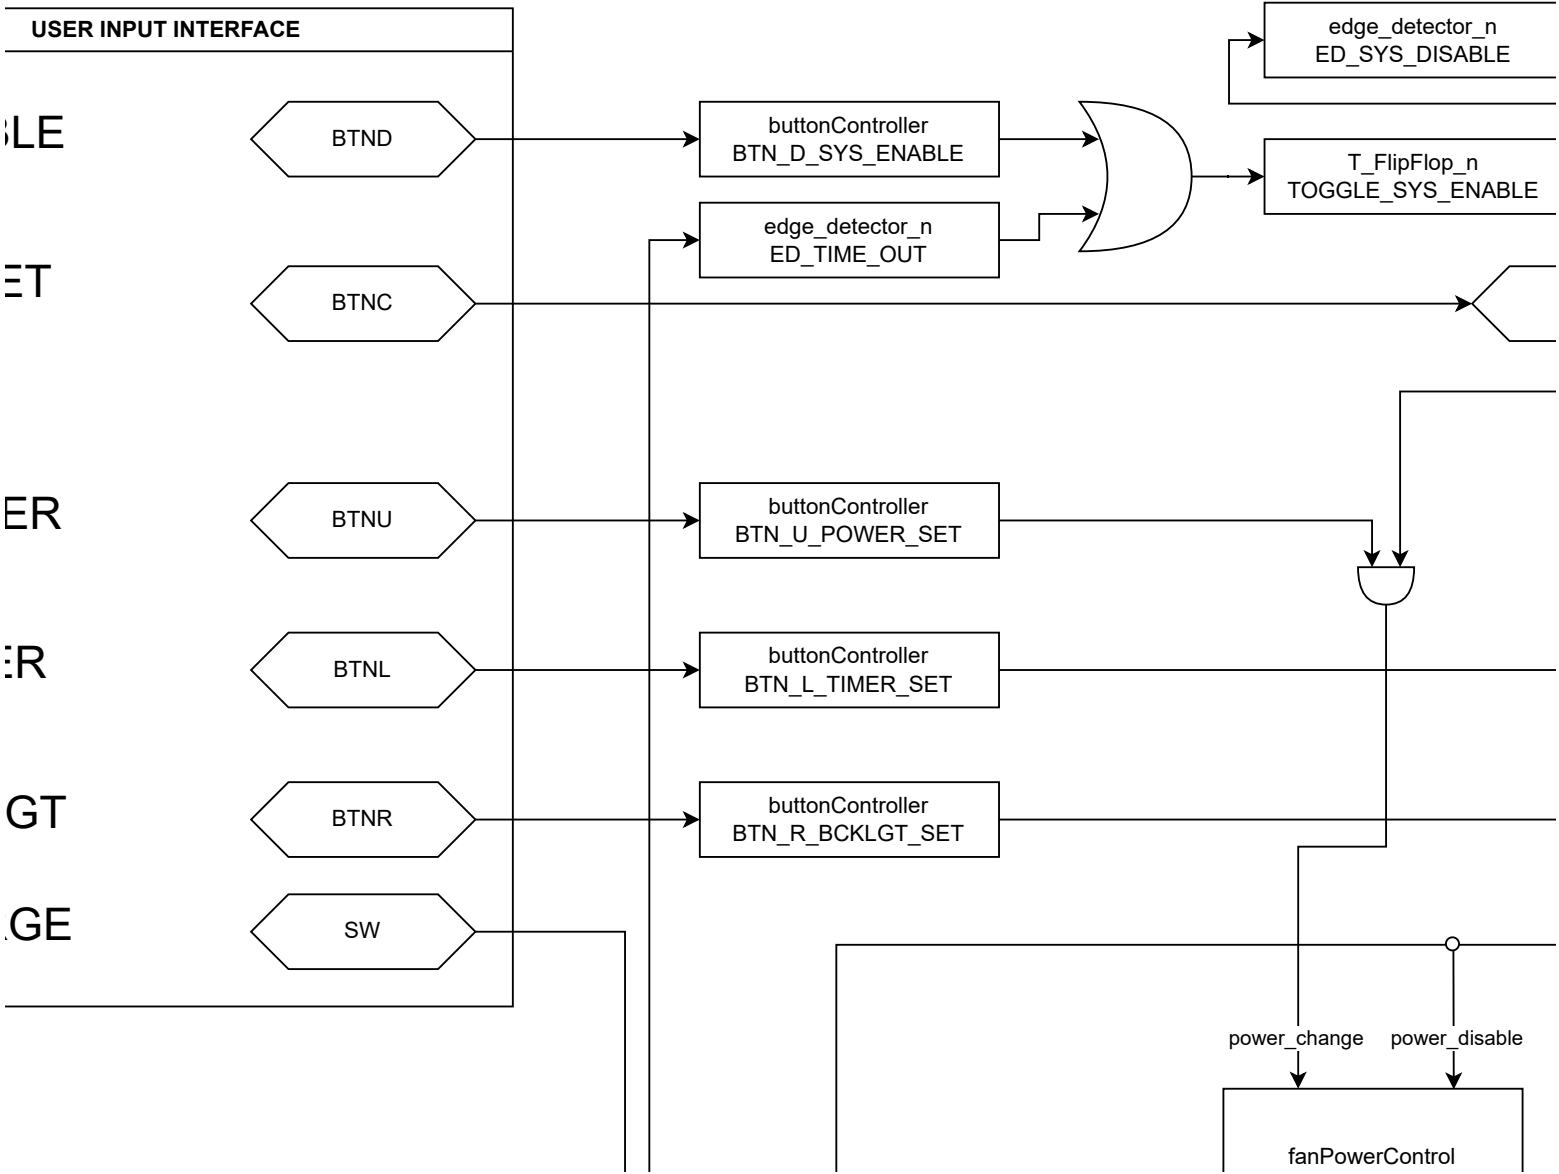 


 
		CLK
		ULTF
		ULTF
		ULTR
		ULTR

		ENAB
		RESE
		POWE
		TIME
		BCKL
		CHAR

functionalFan Specification :

0. System reset triggered by pushing reset button (BTNC), system will not work until system enable button pushed (BTND)
1. Oscillating angle determined by HC-SR04, ultrasonic sensor, working like user following
2. User can change fan power level of 3, via power select button (BTNU) POWOFF as default, user can notice with
- LED[3] : POWOFF       (0%)
  - LED[4] : POWLOW     (33%)
  - LED[5] : POWMID     (66%)
  - LED[6] : POWMAX     (99%)
3. User can set timer for working time, via timer set button (BTNL), level of 4. NOTSET as default, user can notice with

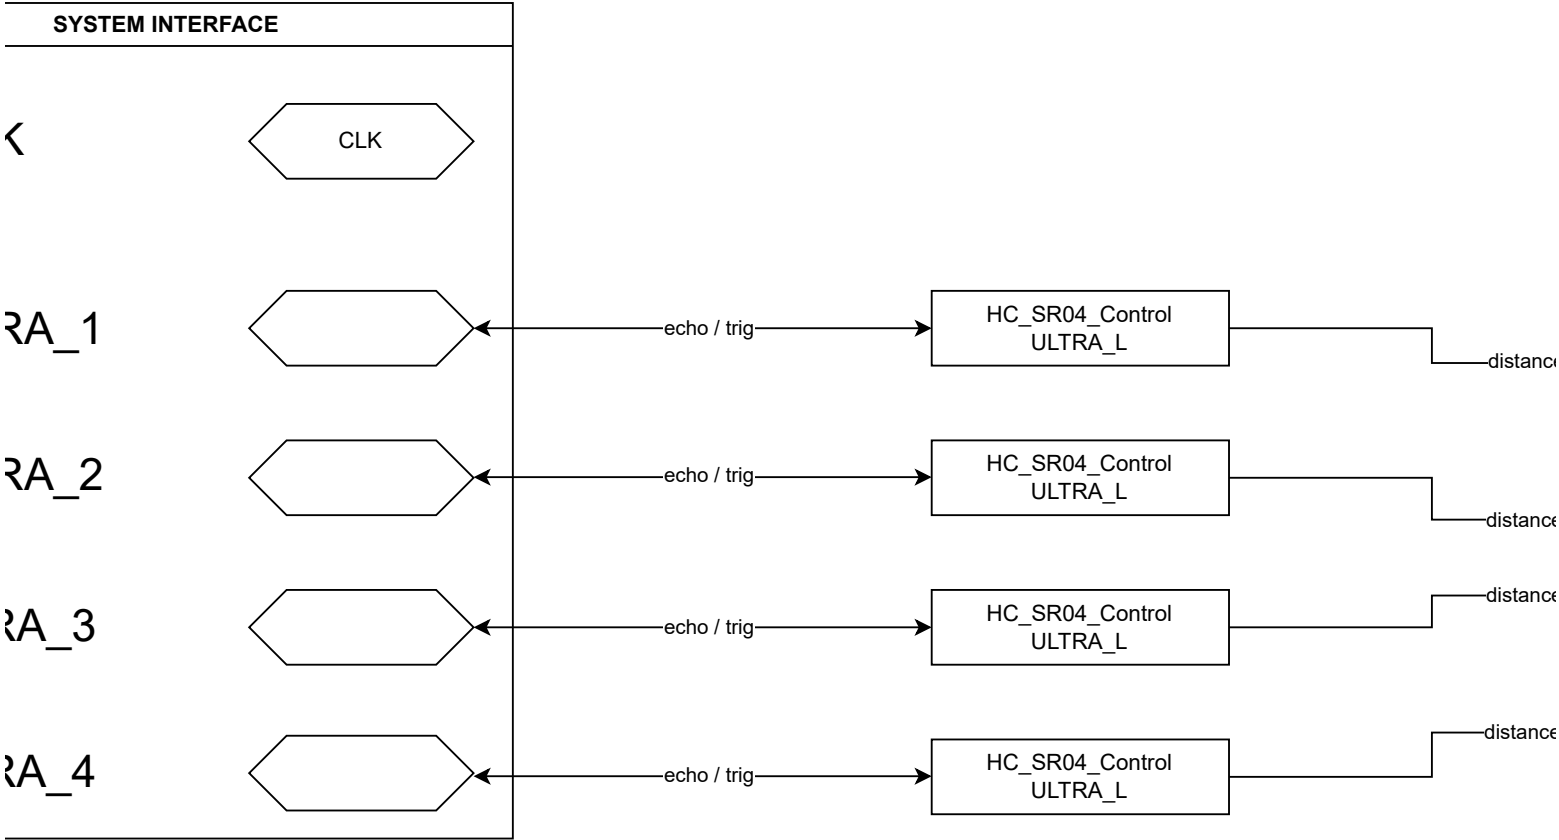

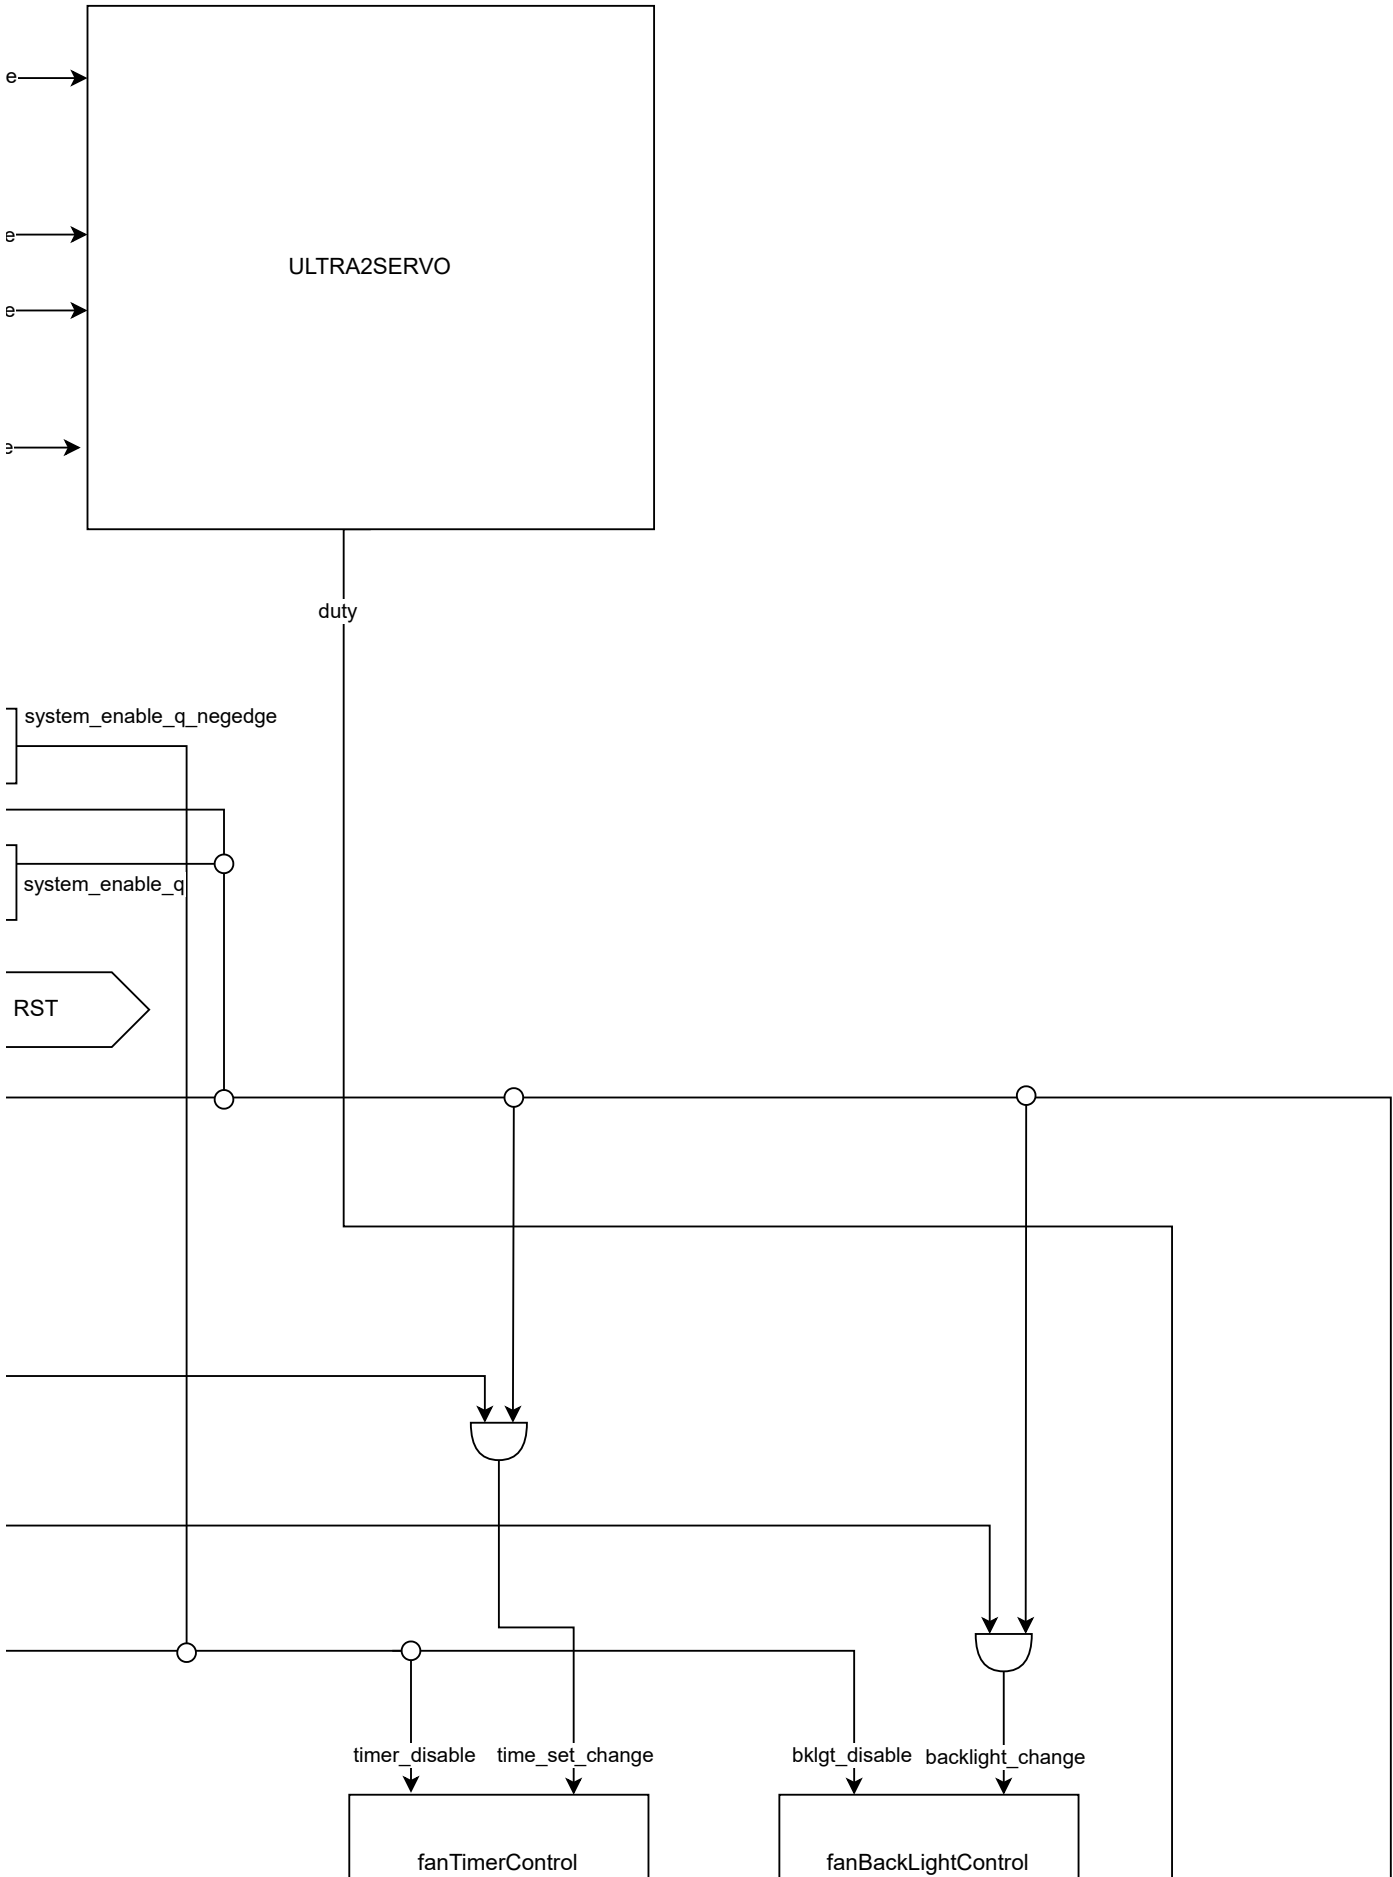

- LED[15] : NOTSET
- LED[14] : TIMESET1H
- LED[13] : TIMESET3H
- LED[12] : TIMESET5H

4. When functionalFan working, user can notice it with led (backlight), also can toggling on/off backlight with power saving button (BTNR)

- LED[0] : BACKLIGHT

5. When device charging, user can notice it with led

- LED[1] : CHARGE

ENABL
CHARC
BCKLC
POWE
FAN BLAD
FAN HE
TIMEI
TIMEI

