

Thank you for your purchase!

Your new cuckoo clock features a quartz movement, crafted from wood by hand, with a complex structure and exquisite details.

Featuring a classic cuckoo call, along with an additional 12 melodies, volume adjustment, and automatic dark shut-off.

Greetings and welcome!

Thank you for choosing our battery-operated cuckoo clock!


Prior to your clock's first use, we recommend carefully reviewing this manual and following the provided instructions to ensure seamless operation.

Our product includes a 1-year warranty. If you have any questions about our products, please don't hesitate to email us at service@hugehappiness.com and provide detailed information about your order in the email.

We sincerely hope that your experience with our cuckoo clock brings you joy and satisfaction!

Before First Use / Setup Instruction:

1. Remove the back cover of the clock and insert 3 x C cell batteries into the battery compartment. (Figure 1)
2. Hang the pendulum through the hole under the clock onto the holder. (Figure 2)
3. Unwrap the chains and place the decorative pine cones on the two hooks.
4. Replace the back cover and hang the clock on the wall.
5. Gently push the pendulum to one side to start swinging.
6. Adjust the volume as needed. (Figure 3)
7. Set to the "Music On": Music and cuckoo sound are both on.
Set to the "Music Off": No music, only cuckoo sound.
Set to the "OFF": No music, no cuckoo sound. (Figure 4)
8. Gently move the minute hand clockwise to set the current time, please avoid turning the hour hand.
9. The number of cuckoo calls can be controlled by adjusting a button (Figure 5). Each press increases the number of cuckoo calls by one. For example, at 11 o'clock, if the cuckoo has called 9 times, then the button should be pressed twice.

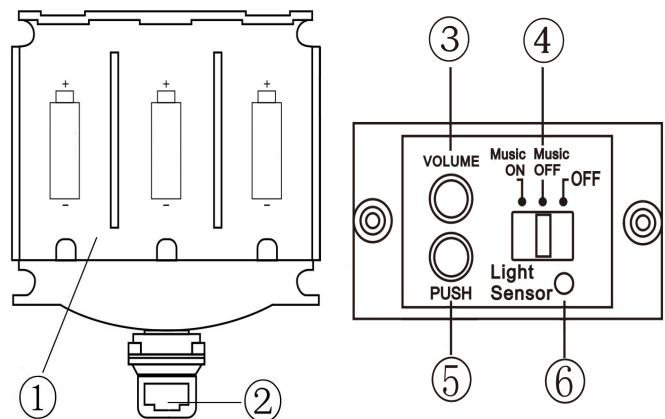

- 1 BATTERY COMPARTMENT
- 2 PENDULUM HOLDER
- 3 VOLUME CONTROL
- 4 CUCKOO ADJUST
- 5 MUSIC & SOUND CONTROL
- 6 LIGHT SENSOR

Troubleshooting:

Reminder:

Before conducting the check, please ensure that all batteries have sufficient power and are in the same working condition, and ensure that the light sensor is not covered.

Problem	Solution 1	Solution 2	Solution 3
The door no longer opens/The door does not close/The bird did not come out.	Open and close the door by hand 3-5times	Check if an obstacle is blocking the mechanism and inspect the steel wire connecting the bird and the door.	Contact customer service via the email address in the top right corner of this manual.
The bird is not singing.	Place the clock in a bright location.	Check the wiring connecting the speakers.	Contact customer service via the email address in the top right corner of this manual.
The pendulum is not swinging.	Remove the pendulum and inspect whether the pendulum holder (Figure 2) is swinging normally and if it's not stuck.	Check the wiring of the battery box.	Contact customer service via the email address in the top right corner of this manual.
The clock is not working/The time is inaccurate.	Check if the clock hands are stuck, remove the hands and reinstall them.	Check the wiring of the battery box.	Contact customer service via the email address in the top right corner of this manual.
The bird did not sing at the top of the hour.	Gently move the minute hand clockwise. When the bird sings, pull out the minute hand forcefully, align it to the top of the hour, and press it down firmly.	Contact customer service via the email address in the top right corner of this manual.	