

## Simulate with external simulator



External simulator support is experimental and could be unstable.  
Use it at your own risk! Future release are likely to be more stable.

See spice4qucs-help documentation at

<http://qucs-help.readthedocs.org/en/spice4qucs/index.html/>

for more information and the current development status.

Select external simulator:

Ngspice

1



Settings

Simulation console

2

Simulate 3

Stop

Save netlist 4

Exit