



Scale 1" = 200'

Mapbook location

24	26
38	40
40	41

!! WARNING !!

This feeder is or may be occasionally connected to a cogeneration customer and is subject to back-energizing

* Load Tap Changers

Contact the substation operating personnel for current switch positions

4 KV RIVERSIDE SUB Manual Recloser CIRCUIT 10

Published 03/03/16

page 1 of 1

