



10	25	40	55	70	85
9	24	39	54	69	84
8	23	38	53	68	83

!! WARNING !!

This feeder is or may be occasionally connected to a cogeneration customer and is subject to back-energizing

*** Load Tap Changers**

Contact the substation operating personnel for current switch positions

**4 KV
RIVERSIDE SUB
Manual Recloser**

**CIRCUIT
12**

Published 03/03/16

page 1 of 2





10	25	40	55	70	85
9	24	39	54	69	84
8	23	38	53	68	83

Mapbook location

!! WARNING!!
This feeder is or may be occasionally connected to a cogeneration customer and is subject to back-energizing

*** Load Tap Changers**
Contact the substation operating personnel for current switch positions

**4 KV
RIVERSIDE SUB
Manual Recloser**

**CIRCUIT
12**

Published 03/03/16

page 2 of 2

