




Scale 1" = 200'

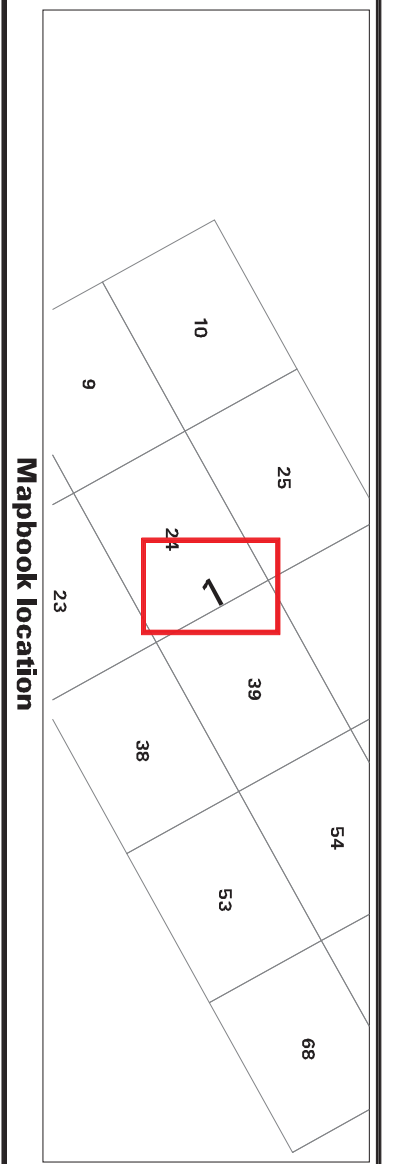

**!! WARNING !!**  
This feeder is or may be occasionally connected to a cogeneration customer and is subject to back-energizing

\* Load Tap Changers  
Contact the substation operating personnel for current switch positions

**4 KV  
RIVERSIDE SUB  
Manual Recloser  
CIRCUIT  
8**

Published 03/03/16

page 1 of 1

