



### TTL-BT

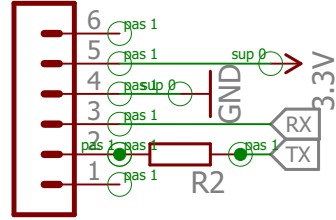


### TTL-BLUETOOTH

Add 32.768kHz crystal to Teensy for use of RTC

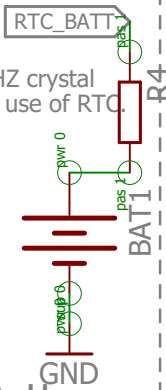


### RTC Battery

### SPI-SD

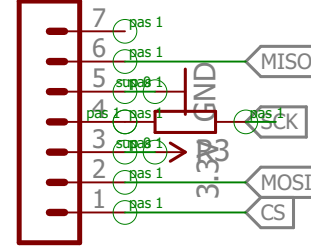


### SPI-SD


### I2C-OLED

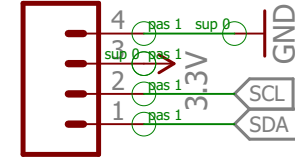

### I2C-OLED

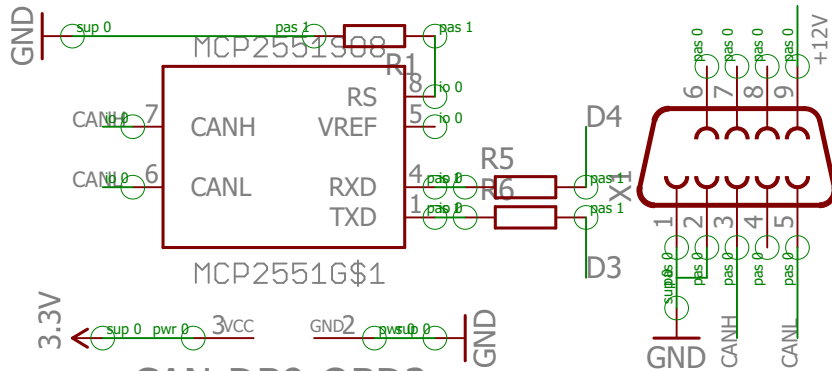


### CAN-DB9-OB2

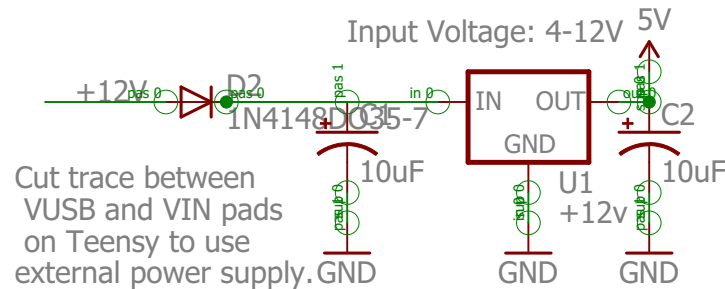

Cut trace between VUSB and VIN pads on Teensy to use external power supply. GND

## Teensy 3.2

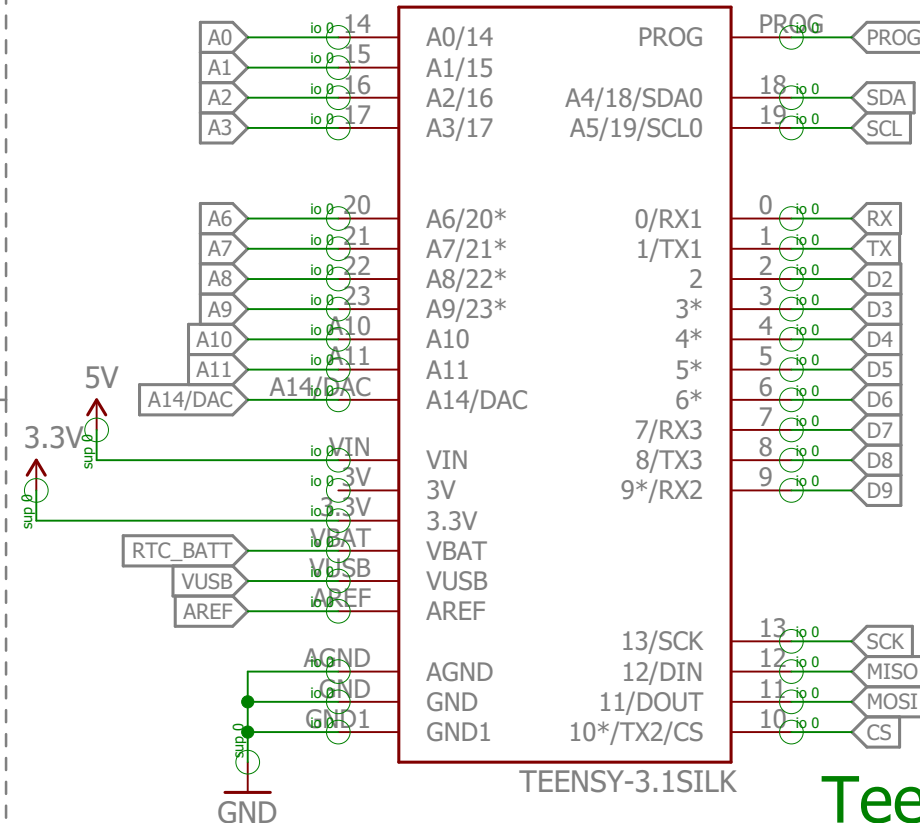

TeensyZE  
By RaceAutoElectro.com