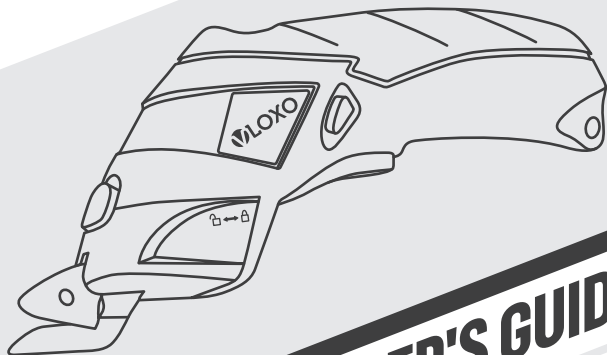 




# ELECTRIC SCISSORS

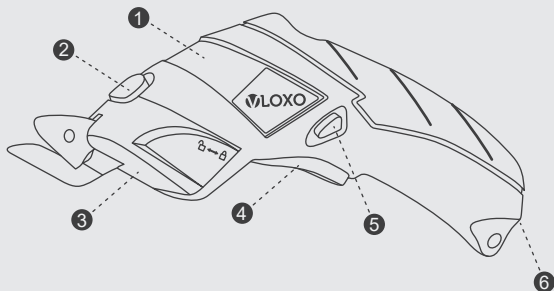 


## USER'S GUIDE



[contact@vloxo.net](mailto:contact@vloxo.net)





① Main body

② Blade release button

③ Cutter Blade

④ Switch button

⑤ Decoration button

⑥ Charging socket

## Technical Parameters

Voltage/Frequency: 100-240V/50-60Hz

DC: 3.6V lithium battery

No-load speed: 10000RPM

## **Charger and battery safety instructions**

- Please read the safety instructions carefully before charging the battery.
- Can only use the specified charger to charge the battery.
- The charger can only be used normally in a dry environment of 10° C-40° C.
- Do not use the charger damaged.
- Please repair the charger and battery at a professional maintenance point.
- Prevent the battery from short-circuiting.
- Do not touch any metal objects while the battery is connected.
- Do not put the battery in a high temperature environment that may rise above 50°C. (such as a car parked in the sun)
- Do not put the battery into water.
- Do not open the battery.

## **Electricity Safety**

Please check if the voltage indicated on the appliance is the same as the supply voltage.

---

## The scope of products

Cloth	2.5mm
Felt Products	6mm
Leather	3.5mm
Plastic Plate	3.5mm
Corrugated Cardboard	5mm
Carpet	3.5mm
Plant Stalk	2mm

**Explanation:** The above data is for reference only, as there will be deviations for each person, region, and various materials.

## Charge the battery

- The battery must be charged before it is used for the first time.
- After several full charge discharges, the battery can reach its maximum capacity.
- Connect the plug of the charger, the indicator light on the tail of the fuselage is on, the charging time is 3-5 hours, and the charging time is prohibited for more than 5 hours.
- If the indicator light does not go off after 5 hours, please stop charging.

**Note:** Scissors does not work during charging.

---

## Replace Blade

1. A set of products contains 2 cutter blades.
2. The front end of the fuselage has a lock button as shown ②.
3. When the cutter blades is installed, the cutter blades can be directly inserted into the groove card, and the card must be in place.
4. When removing the cutter blades, first push the lock button ② upwards, open the lock button, and then pull the cutter head.

## Warning

For your own safety, read the instructions carefully before use.

Please use this product strictly in accordance with the applicable scope of the product. If it is beyond the scope of application, it may damage the machine or cause safety problems.

## Storage

When not used for a long time, charge the battery to ensure that the battery has electricity.

Store in a dry, room temperature environment.

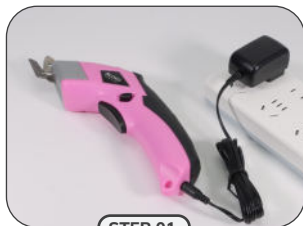 
## Package

1× Electric scissors    /    2× Cutter blades

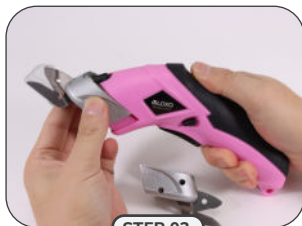 
1× Power supply    /    1× User Manual

---

## How to use

**STEP 01**

Fully charge the electric scissors before use

**STEP 02**

Replace the blade you want

**STEP 03**

Remove the blade silicone cover

**STEP 04**

Press the power switch with one key

### NOTE

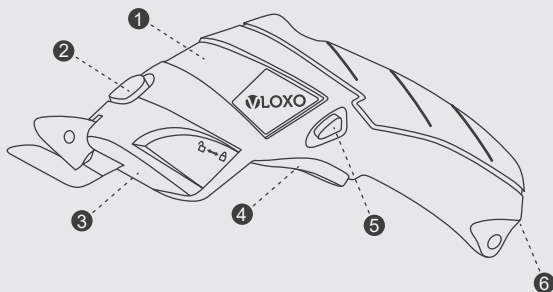 
Cleaning and maintenance Keep the machine clean and dry, and regularly check that all parts are in good condition.

## **DISPOSAL & RECYCLING:**



You must dispose of Electric scissors properly according to local laws and regulations. Because this machine contains electronic components, it should be discarded separated from household waste. When it reaches its end life, contact local authorities to learn about disposal and recycling options. You can help protect the environment! Please remember to respect the local regulations, and dispose of the non-working electrical equipment to an appropriate waste disposal center.





**1** Cuerpo

**2** Botón de reemplazo de cuchilla

**3** Cuchilla

**4** Boton de encendido/apagado

**5** Botón de decoración

**6** Interfaz de carga

## Parámetros técnicos

Voltaje/Frecuencia: 100-240V/50-60Hz

CC: batería de litio de 3,6V

Velocidad sin carga: 10000rpm/min

## **Instrucciones de seguridad del cargador y la batería**

- Lea atentamente las instrucciones de seguridad antes de cargar la batería.
- Utilice únicamente el cargador especificado para cargar la batería.
- El cargador debe utilizarse en un ambiente seco entre 10°C y 40°C.
- No utilice un cargador dañado.
- Si el cargador o la batería no funcionan correctamente, comuníquese con un centro de servicio profesional para su reparación.
- Para evitar cortocircuitos en la batería, evite exponerla a objetos metálicos cuando esté conectada.
- Mantenga la batería alejada de altas temperaturas superiores a 50°C (por ejemplo, dentro de un automóvil estacionado bajo la luz solar directa).
- Evite exponer la batería al agua.
- No intente abrir la batería.

## **Seguridad eléctrica**

Compruebe si el voltaje indicado en el aparato es el mismo que el voltaje de alimentación.

---

## Rango de Corte

Tela	2.5mm
Sintió	6mm
Cuero	3.5mm
Plato de Plástico	3.5mm
Cartón Corrugado	5mm
Alfombra	3.5mm
Tallos de Plantas	2mm

**Nota:** Los datos anteriores son solo de referencia, ya que habrá desviaciones para cada persona, región y diversos materiales.

## Batería cargando

- La batería debe cargarse antes del primer uso.
- Después de varios ciclos completos de carga y descarga, la batería alcanzará su capacidad máxima.
- Conecte el enchufe del cargador, la luz indicadora en la parte posterior del dispositivo se ilumina. El tiempo de carga es de 3 a 5 horas y está prohibido cargar más de 5 horas.
- Si la luz no se apaga después de 5 horas, deje de cargar.

**Nota:** El dispositivo no funciona mientras se carga.

## Reemplazo de cuchilla

1. El kit incluye 2 cuchillas.
2. El dispositivo tiene un botón dedicado a reemplazar las cuchillas.
3. Para instalar una cuchilla, insértela en la ranura y asegúrese de que esté segura.
4. Para quitar una cuchilla, primero presione el botón de reemplazo de la cuchilla hacia abajo para desbloquearla y luego retire el cabezal de corte.

## Advertencia

Por su propia seguridad, lea atentamente las instrucciones antes de utilizarlo.

Utilice este producto estrictamente de acuerdo con el alcance aplicable del producto. Si está fuera del alcance de la aplicación, puede dañar la máquina o causar problemas de seguridad.

## Almacenamiento

Cuando no lo utilice durante un período prolongado, cargue la batería para asegurarse de que tenga energía.

Almacenar en un ambiente seco a temperatura ambiente.

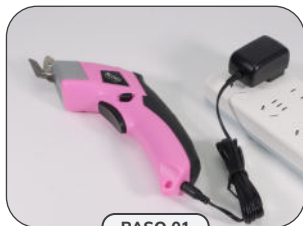 
## Paquete

1 x Cuerpo / 2 x Cuchillas

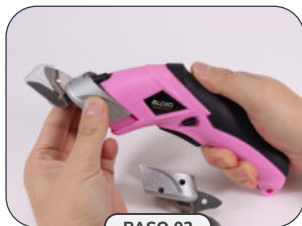 
1 x Cargador / 1 x Manual de usuario

---

## CÓMO UTILIZAR

**PASO 01**

Cargue completamente las tijeras eléctricas antes de usarlas.

**PASO 02**

Reemplace la cuchilla que desee.

**PASO 03**

Retire la cubierta de silicona de la cuchilla.

**PASO 04**

Presione el interruptor de encendido con un clic.

### NOTA

Mantenga el equipo limpio y seco después de cada uso. Compruebe periódicamente que todas las piezas estén en buen estado.

## ELIMINACIÓN Y RECICLAJE:



Debe deshacerse de las tijeras eléctricas correctamente de acuerdo con las leyes y regulaciones locales. Dado que esta máquina contiene componentes electrónicos, debe ser desechada y separada de los residuos domésticos. Cuando llegue al final de su vida útil, por favor póngase en contacto con las autoridades locales para informarse sobre las opciones de eliminación y reciclaje. Usted puede contribuir a la protección del medio ambiente. Recuerde respetar las normativas locales y desechar el equipo eléctrico que no funcione en un centro de eliminación de residuos apropiado.