


# Ble-Uno

## operating manual

### V.1.2

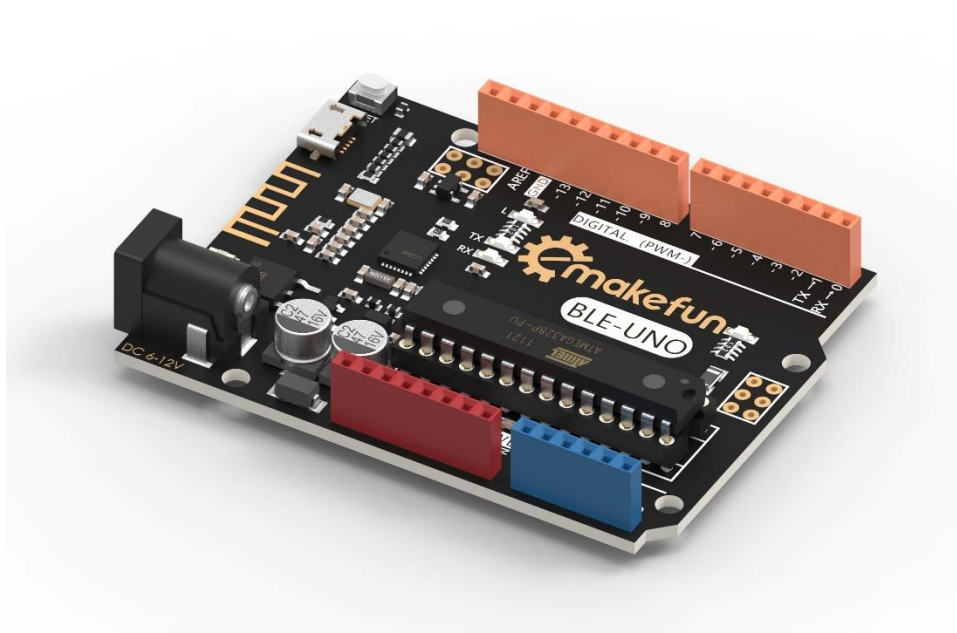

## Revised Version Of History

Date	Version	Description	Author
2019-1-29	V.1.0	Create	Ken.chen
2019-4-9	V.1.1	Perfect AT Command	Ken. chen
2019-9-6	V.1.2	Modify the pin diagram	Abbott.chen

## Catalogue

Introduce.....	4
Product Parameter.....	4
Pin define .....	5
Indicator LED description.....	6
BLE-Uno driver install .....	6
BLE-Uno downloads programs through the arduino IDE .....	13
BLE-Uno Connect to your phone .....	18
AT instruction set.....	22
AT Instruction set specification .....	23
FAQ.....	28

## Introduce

BLE-UNO bluetooth 4.0 protocol is based on perfect combination Arduino Nano by emakefun to create customer research and development of a revolutionary product, function and the pin is fully compatible with traditional Arduino Nano motherboard, scope of work frequency of 2.4 GHZ, modulation mode for the GFSK, maximum transmitted power of 0 db, the largest launch distance of 50 meters, USES the import original TI CC2540 chip design, support user through AT commands to modify to check the device name, service UUID, transmission power, such as matching password instructions, convenient use and flexible. The size of the product is very small, suitable for many applications where there are severe restrictions on the size.


We provide Android and IOS mobile phone demo, you can quickly develop a communication with the phone hardware device. Just like the popular wearable mobile phone peripheral devices, all of them can be developed with the Ble-UNO platform. You can connect the BLE-UNO with the bluetooth 4.0 device, realize the wireless transmission between the two bluetooth devices, and set the master and slave. Even establish bluetooth HID connection with PC. At the same time, we provide developers with a great degree of freedom and support, the user can not only by the AT command debugging Ble - Nano, you can also add on BLE-UNO controller Arduino compatible extension board, sensor, motor and servo drive, emakefun exclusive research and development of bluetooth host mode automatic connection from the machine function, and support for more than 20 bytes to send, it is more convenient to use.

## Product Parameter

- ◆ BLE chip :TI CC2540
- ◆ Work channel : 2.4G
- ◆ Transmission distance: 50m
- ◆ Supports AT directive to configure BLE
- ◆ Support USB virtual serial port, hardware serial port, BLE three-way transparent transmission
- ◆ Support master and slave switch
- ◆ Supports sending over 20byte.
- ◆ Supports iBeacons
- ◆ Interface: Mircor-Usb
- ◆ Input voltage: Usb power supply, Vin 6~12V, 5V
- ◆ MCU: ATmega328P-MU QFN32
- ◆ Bootloader: Newest Arduino 1.8.8
- ◆ Pin: Two Lines 2.54mm-15Pin

- ◆ Size: 48mm x 19mm x 12mm
- ◆ Weight: 18g

## Pin define

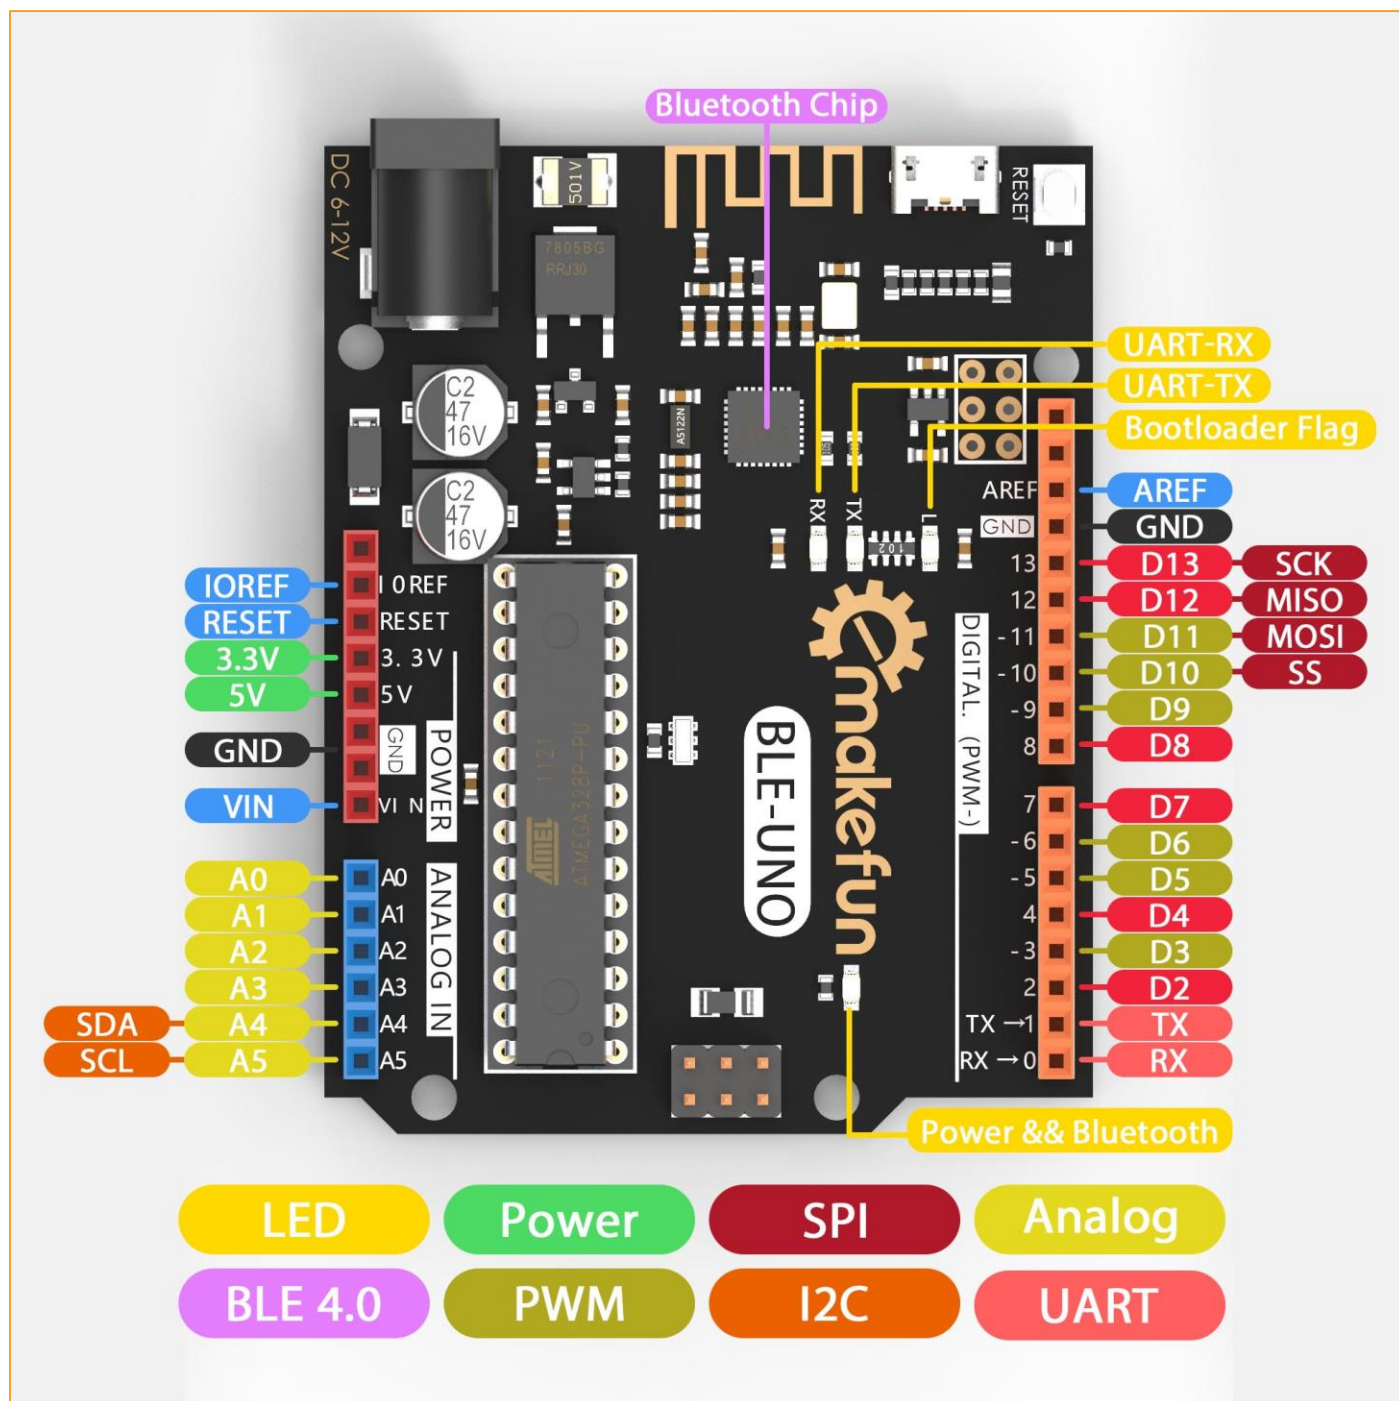

## Indicator LED description

- The blue light marked by Link is bluetooth and power indicator, and the blue light flashes after power supply. When bluetooth is not connected, the blue light flashes, and the blue light is always on after connection
- The orange light marked by L is the BootLoader recognition indicator. When the computer is connected through USB, the LED light will flash rapidly when the port is identified to the board
- The LED light marked by RX is the serial receiving indicator. When the serial port receives data, the LED light will blink
- The LED light marked by TX is the serial transmission indicator. When the serial port sends data, the LED light will blink
- When the USB data cable is connected successfully, the Link blue LED light flashes, and the orange light with L logo will blink for several times. If the Link blue LED light flashes after connecting the USB, but the orange light with L logo does not respond, it means that the usb-micro wire is broken, please replace it

## BLE-Uno driver install

- 1) Right-Click “Computer” → “attribute” → “Device manager” → check “port (COM&LT) ” ,  
If you look at this figure 1.1

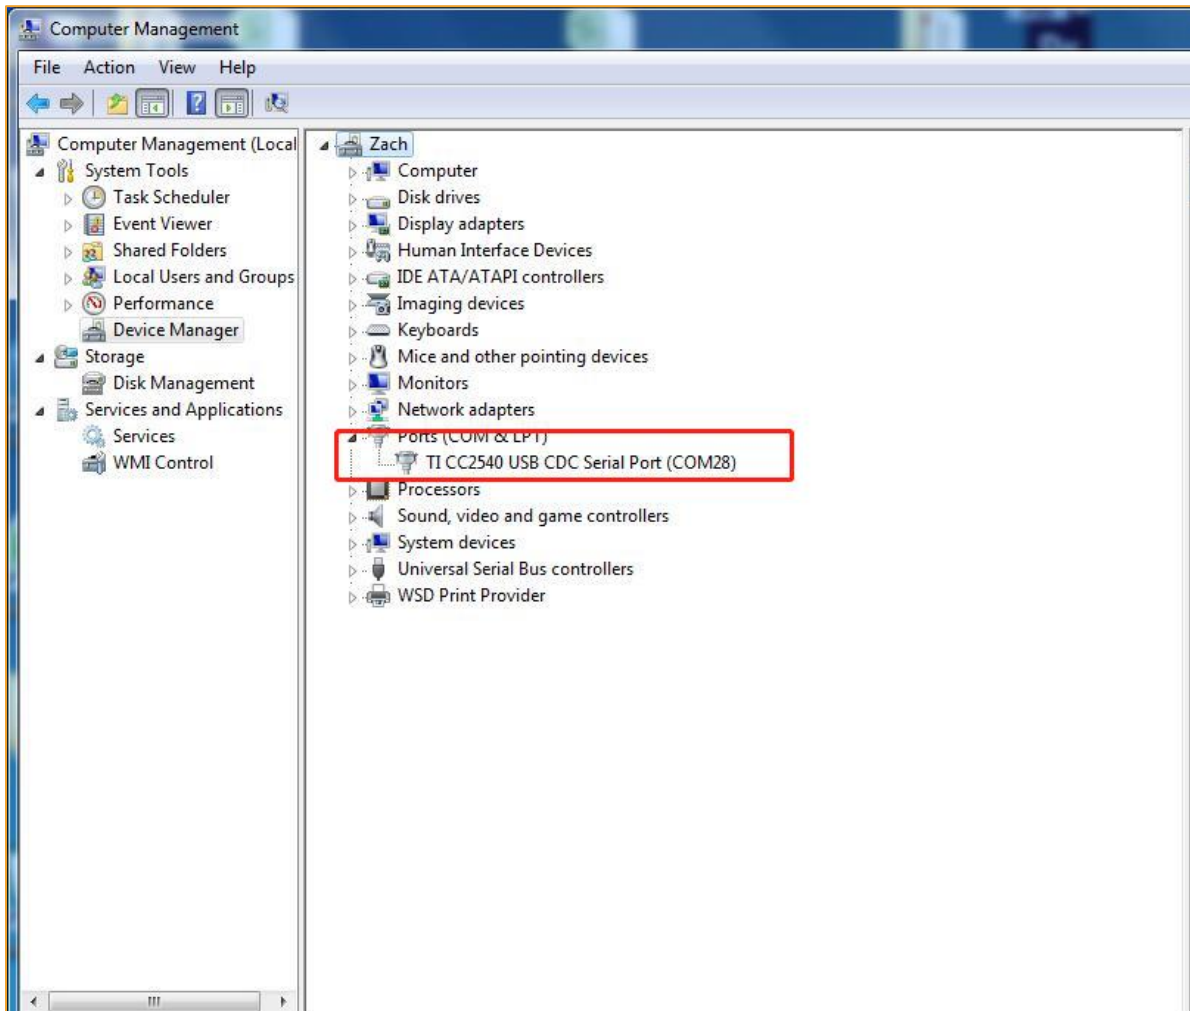


Figure 1.1 Drive the successful installation interface

- 2) The driver has been installed successfully. Then we open the IDE and select the corresponding development board model and port in the toolbar. If it appears as shown in figure 1.2, the computer does not recognize the development board and needs to install the driver.

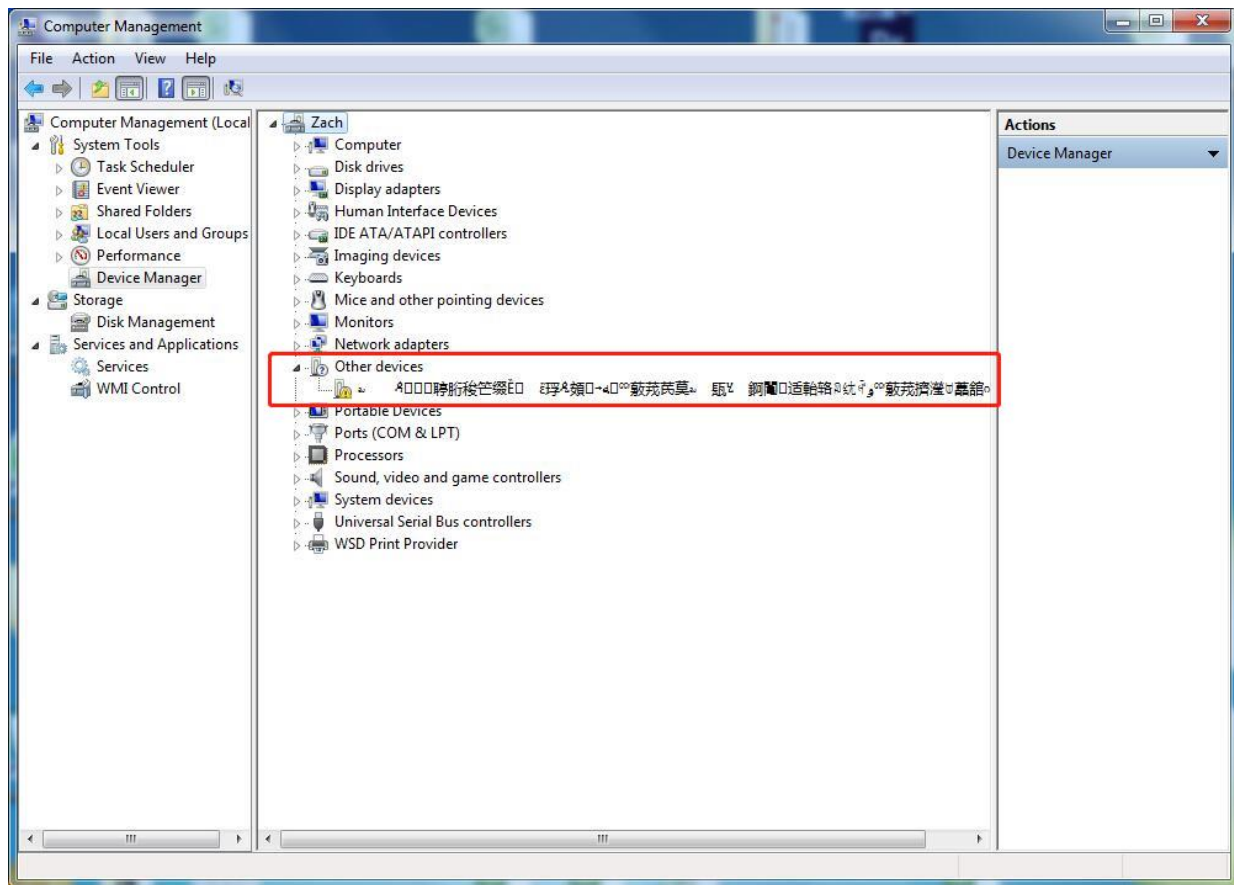


Figure 1.2 The driver failed to install the interface

- 3) Right-click the USB serial port and select the update driver software option, as shown in figure 1.3.



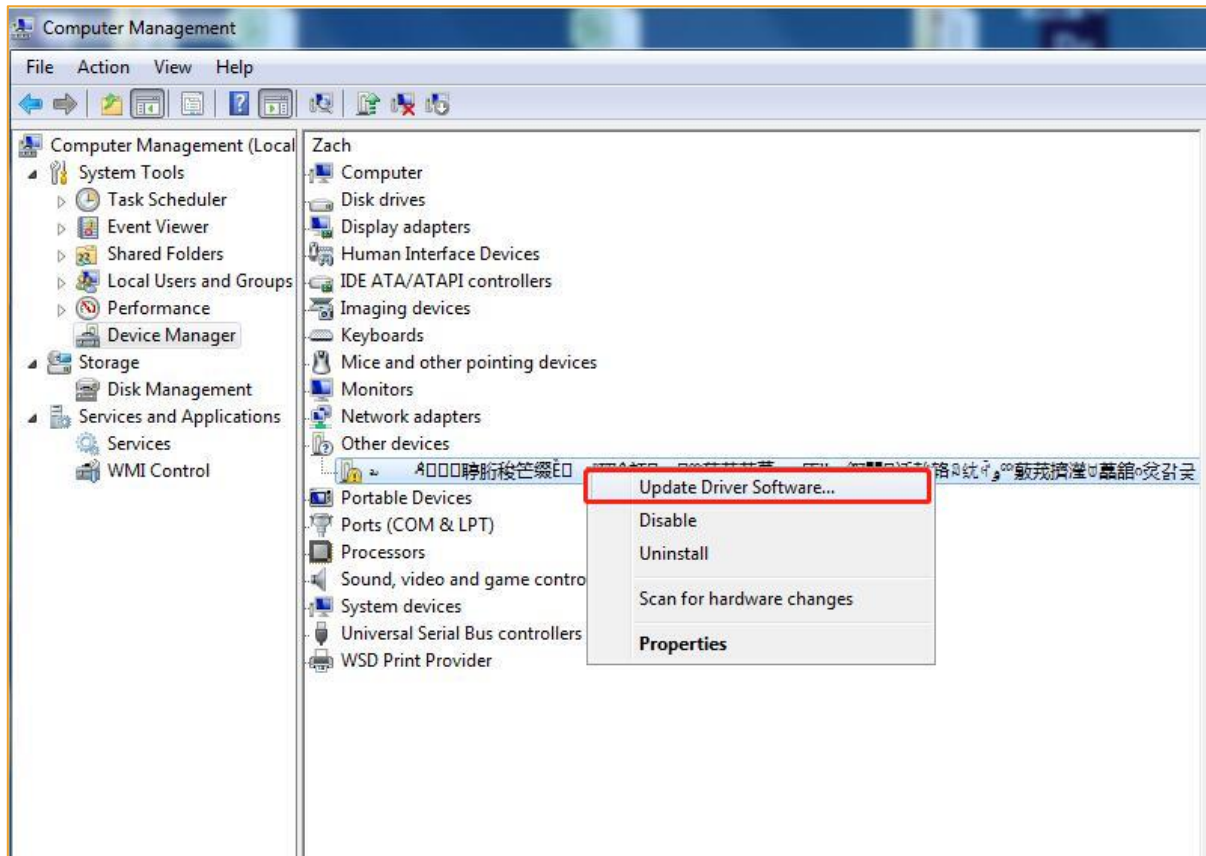


Figure 1.3 Update successful

- 4) Click "browse the computer to find driver software" as shown in figure 1.4, and click "browse" as shown in figure 1.5

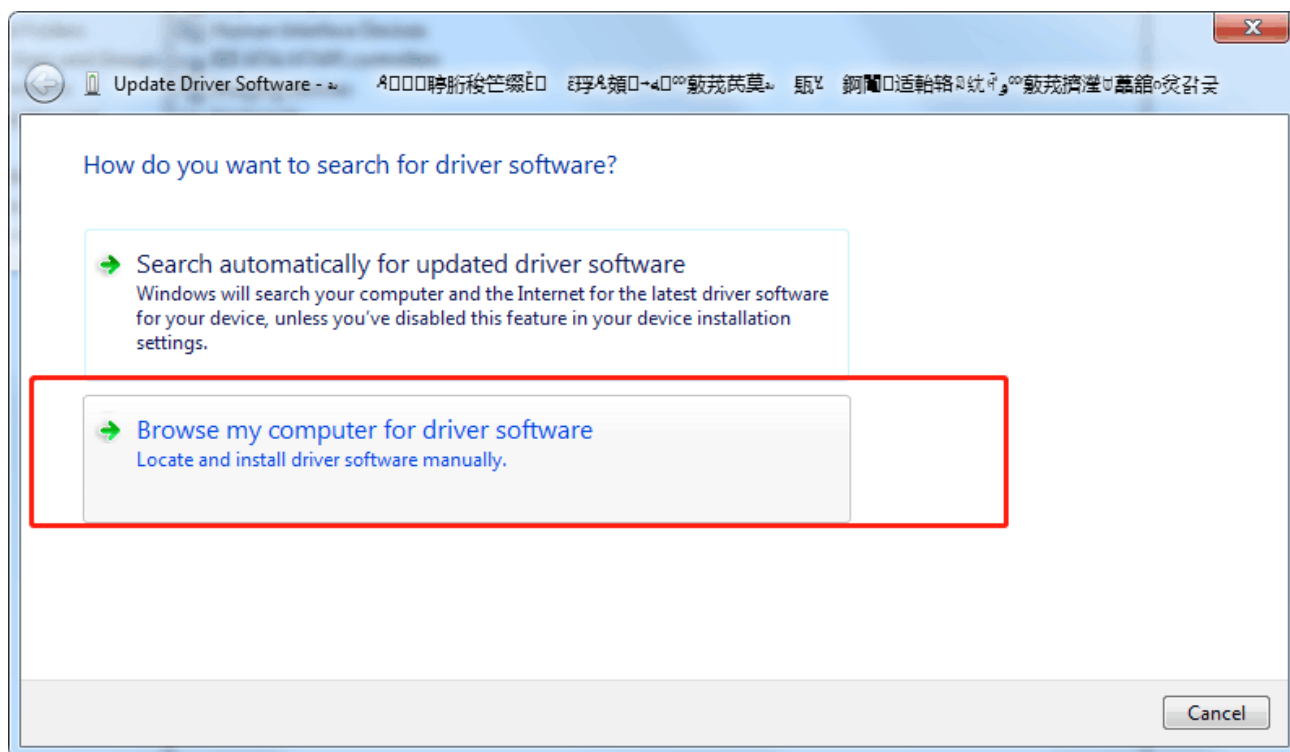


图 1.4

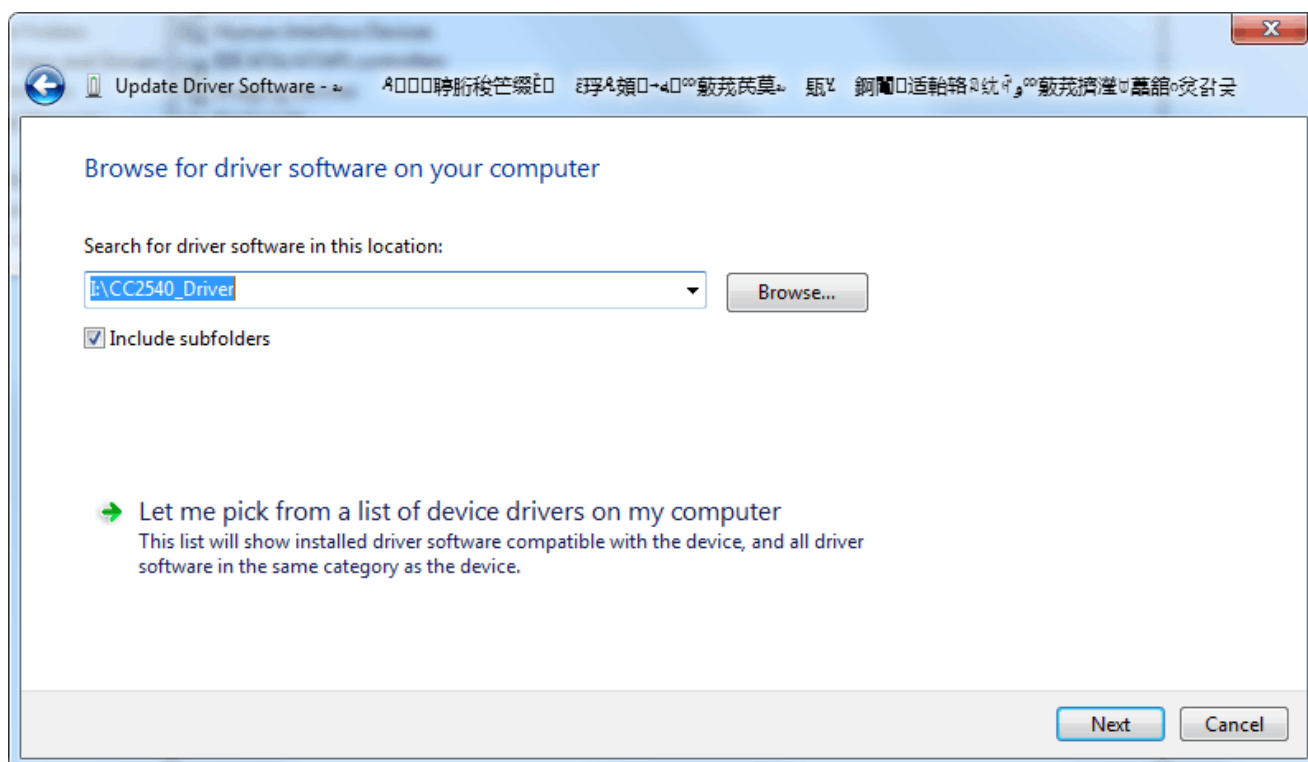


图 1.5

Driver path: "CC2540\_Driver \ ccxxxx\_usb\_cdc.inf" click "next", as shown in figure 1.6

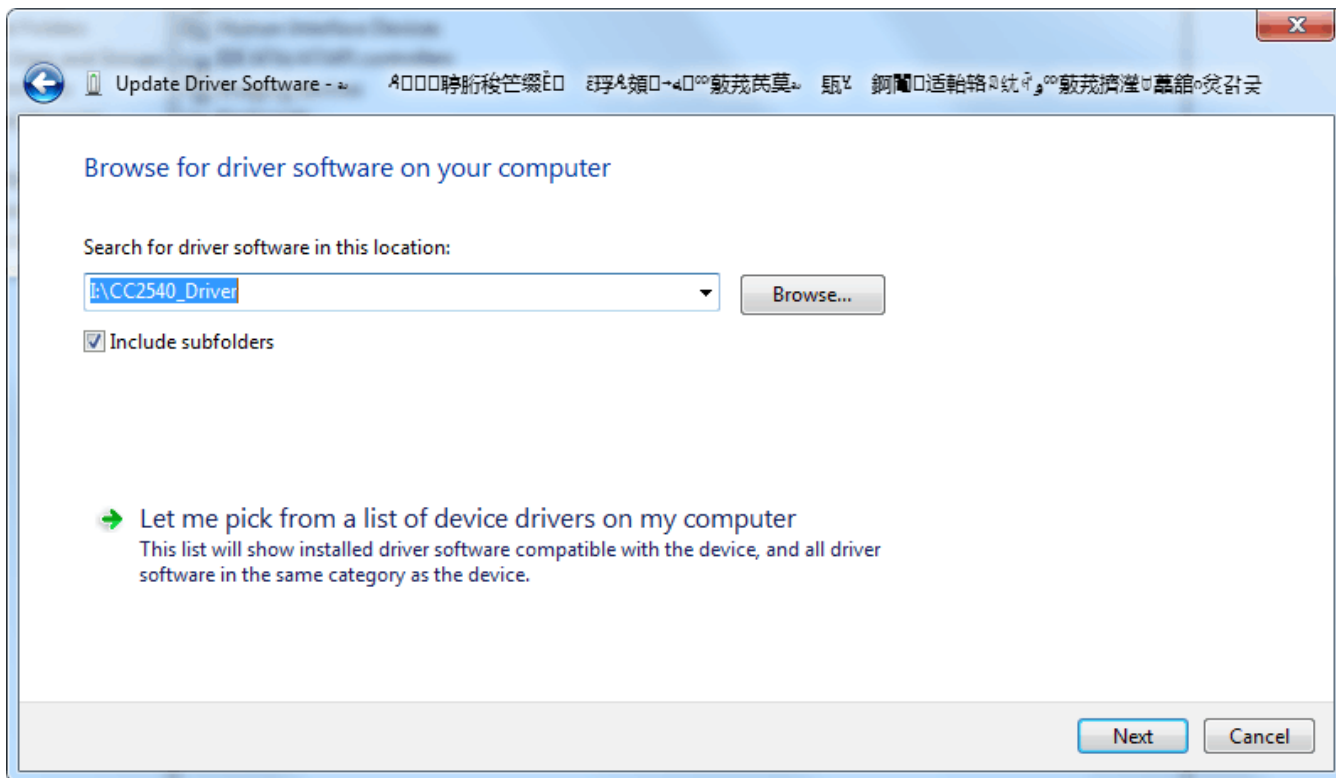


Figure 1.6 choose the driver file

- 5) Click "always install this driver software" in the popup window as shown in figure 1.7

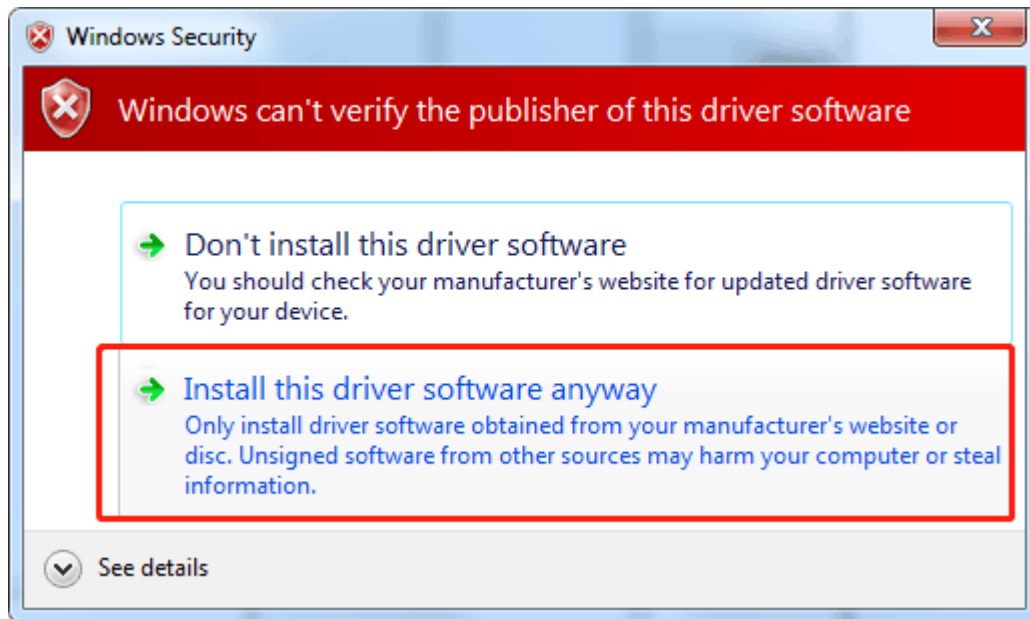


Figure 1.7


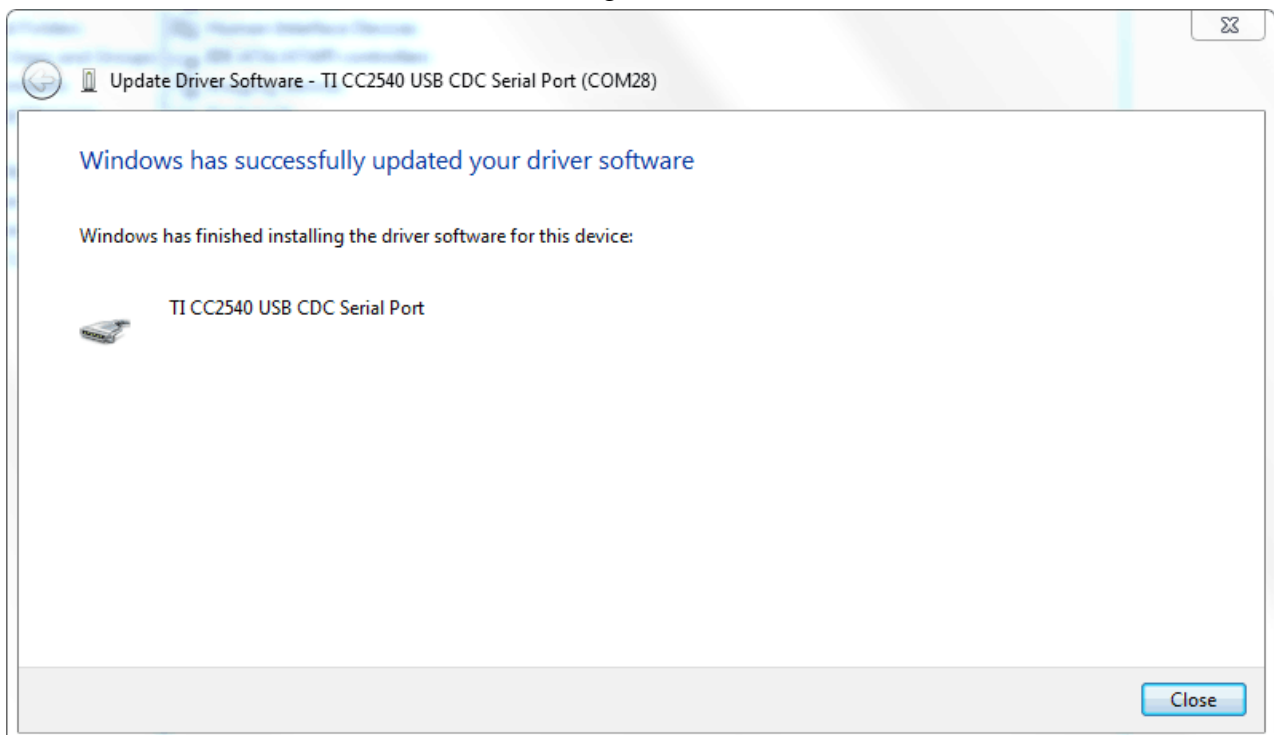



Figure 1.8 Driver installation successful


At this point, we have the driver installed. Next, we will install the Arduino IDE.


## BLE-Uno downloads programs through the arduino IDE

BLE-Uno burns the latest version of Bootloader, so you need to use the latest IDE (version 1.8.8 or above) to burn the program : <https://www.arduino.cc/en/Main/Software> download latest Arduino IDE


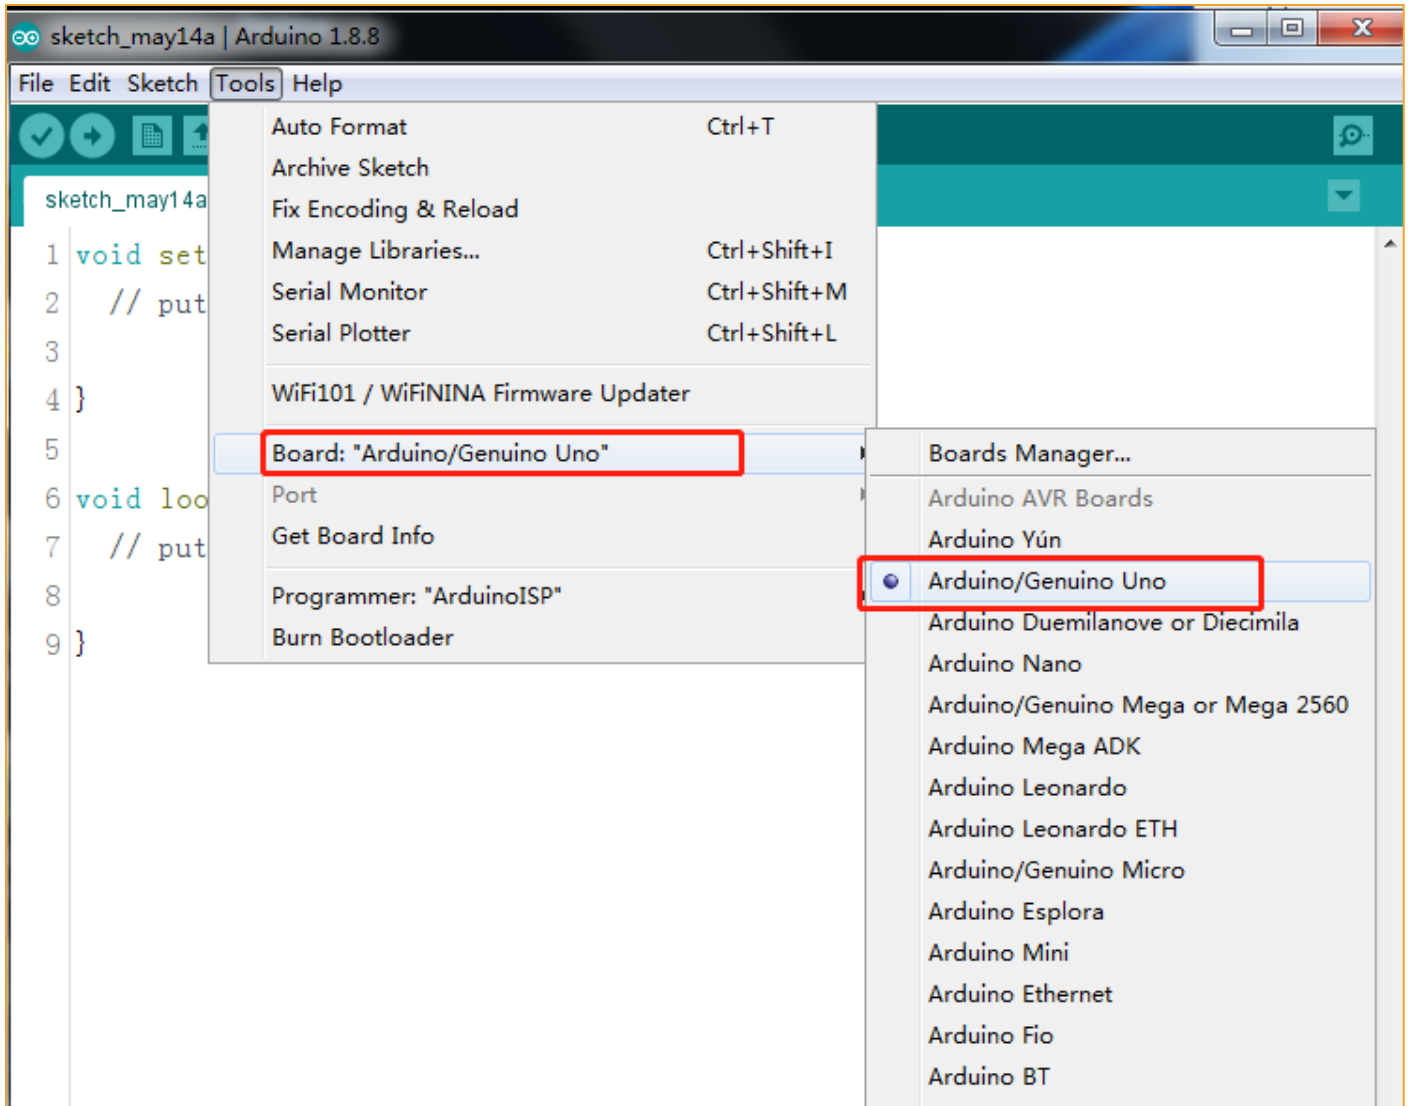


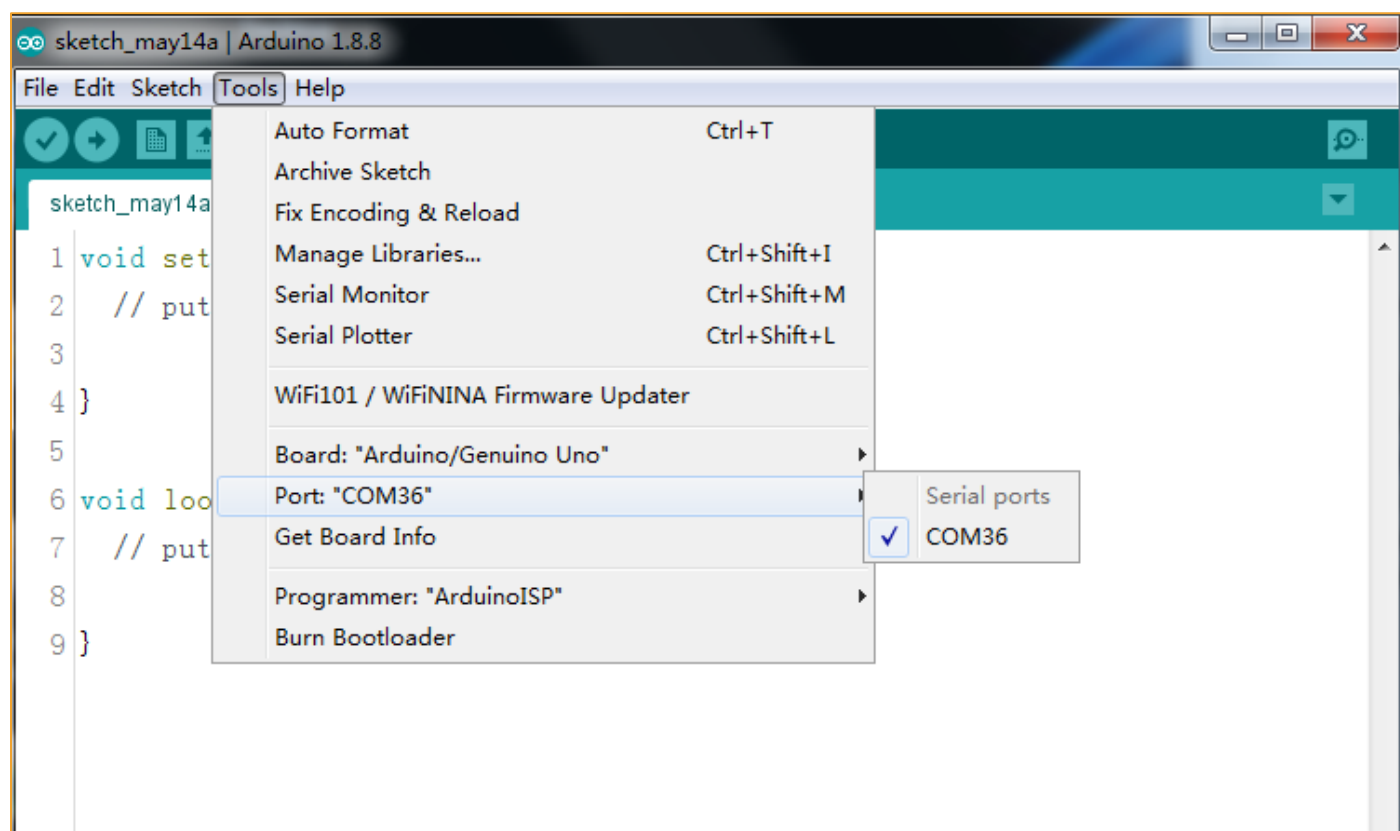

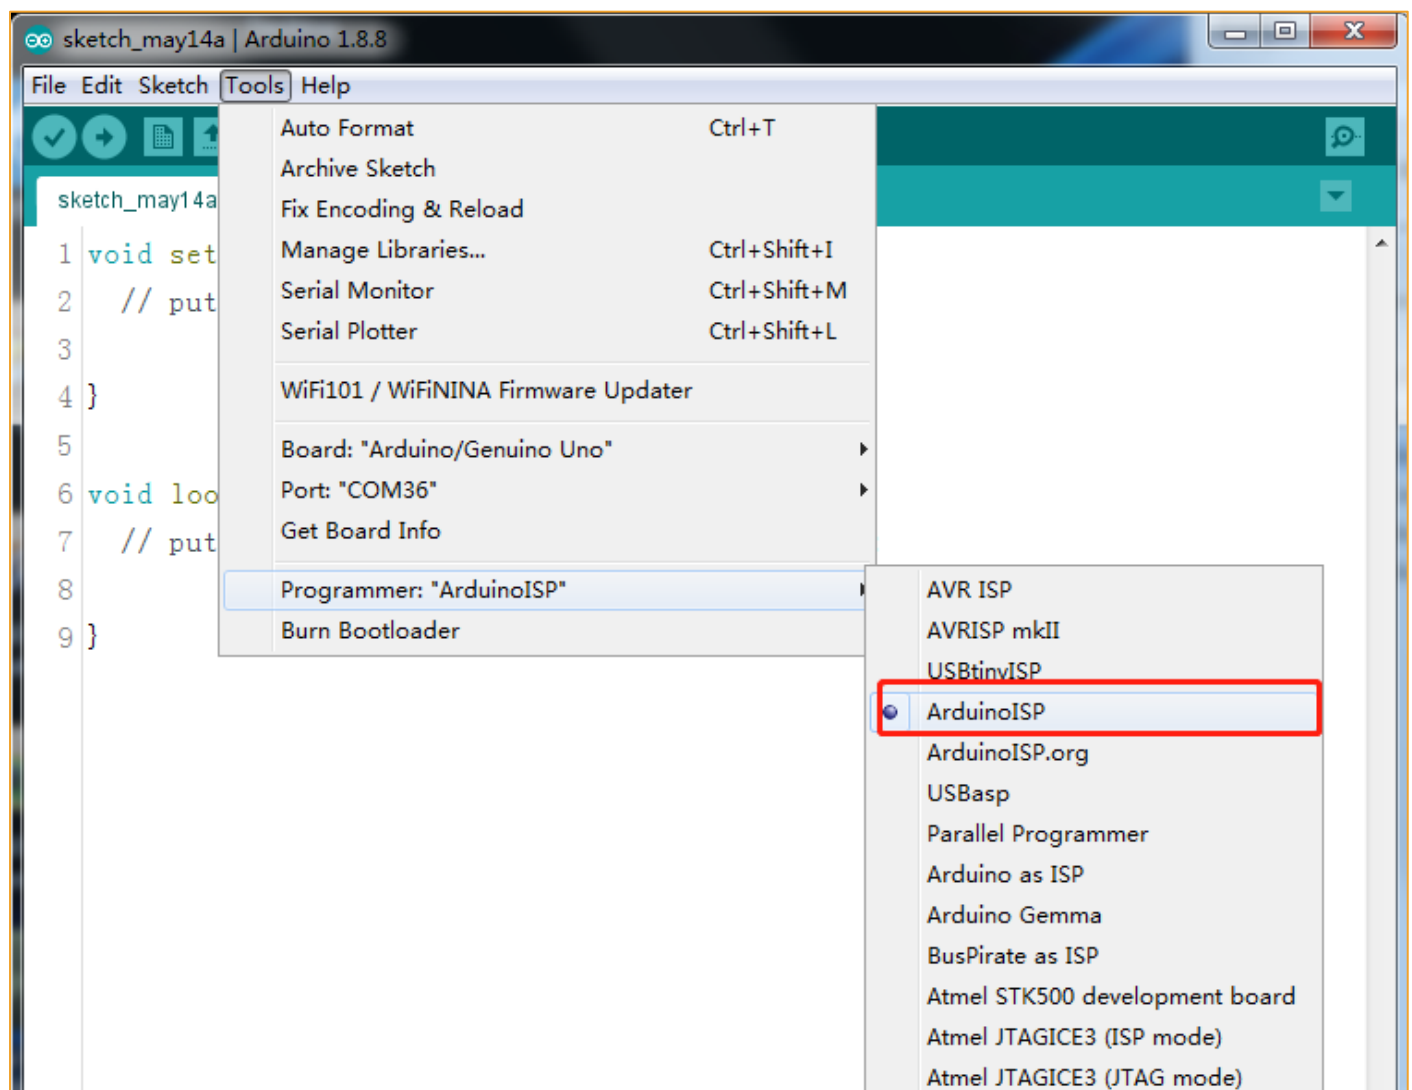

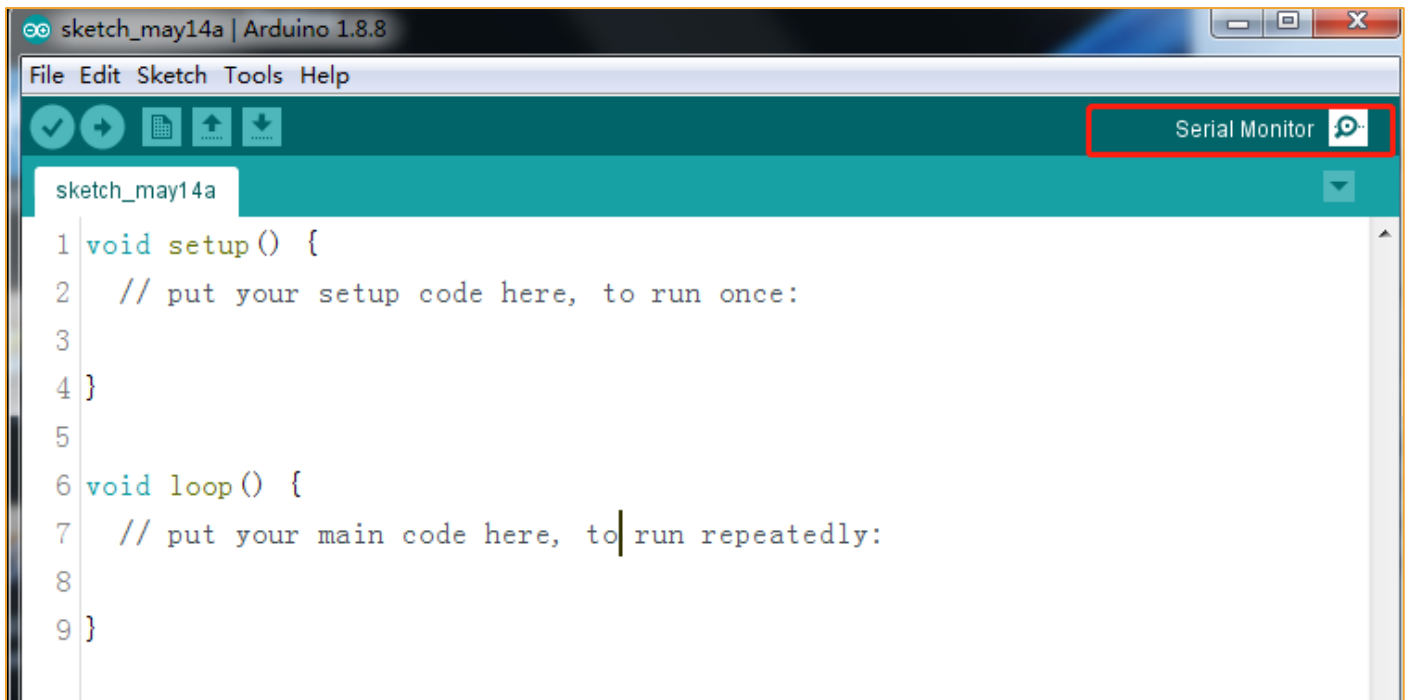



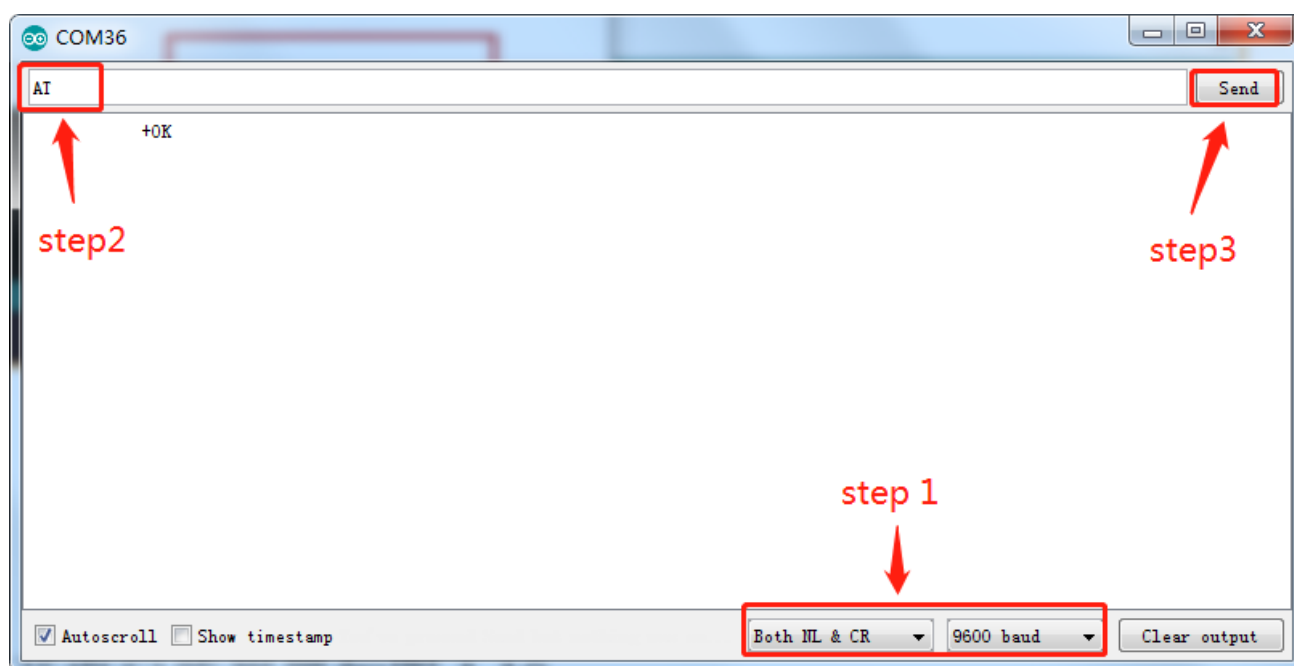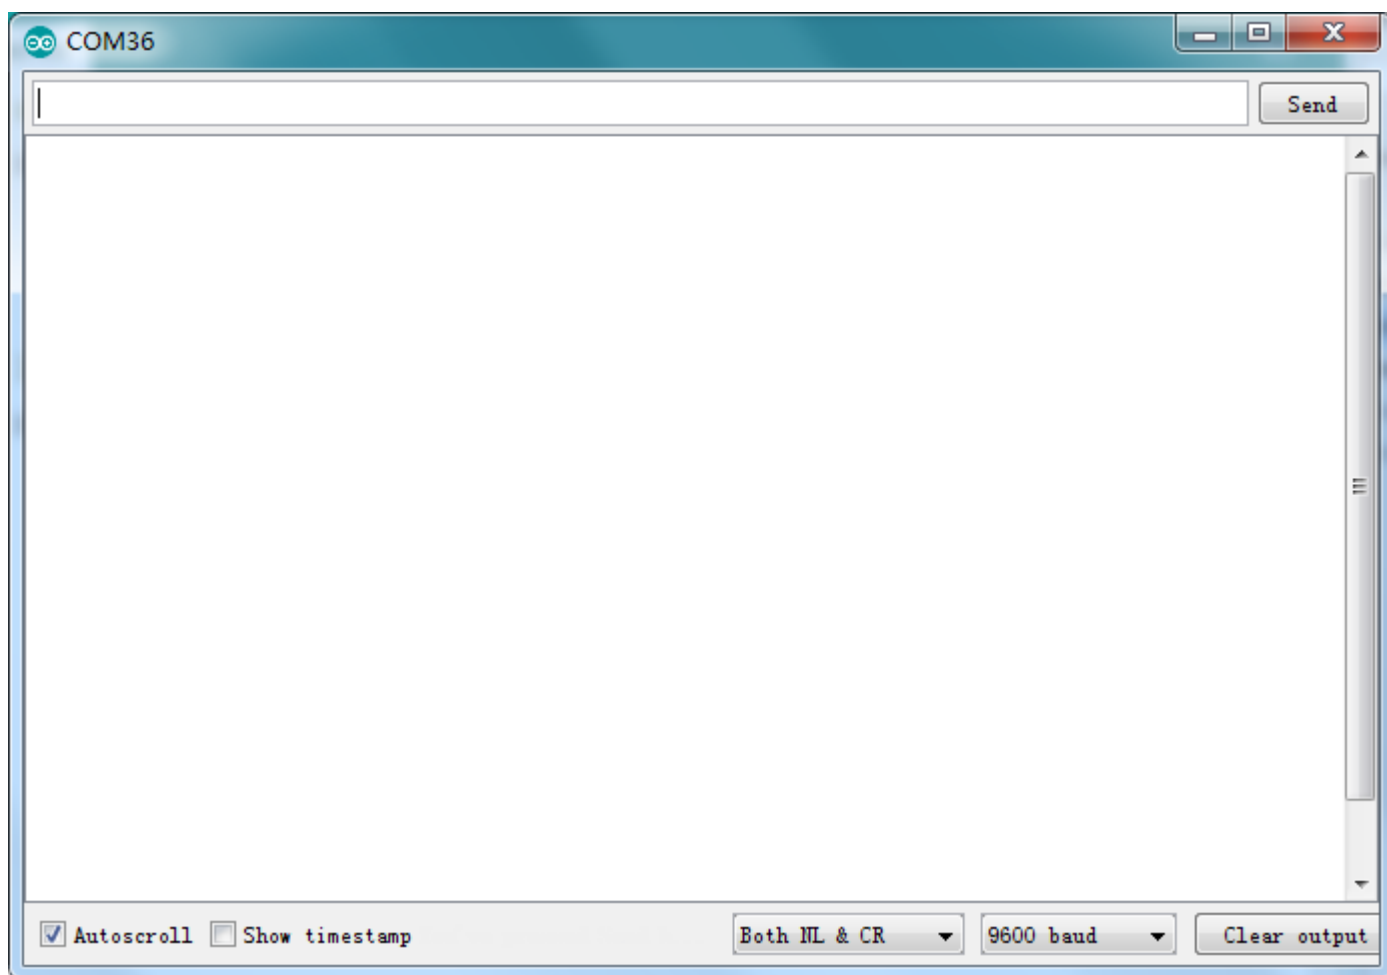

## BLE-Uno Connect to your phone

- 1) Open the Arduino IDE, connect the serial port as shown in figure 1.9, and open the serial port monitor as shown in figure 1.10.

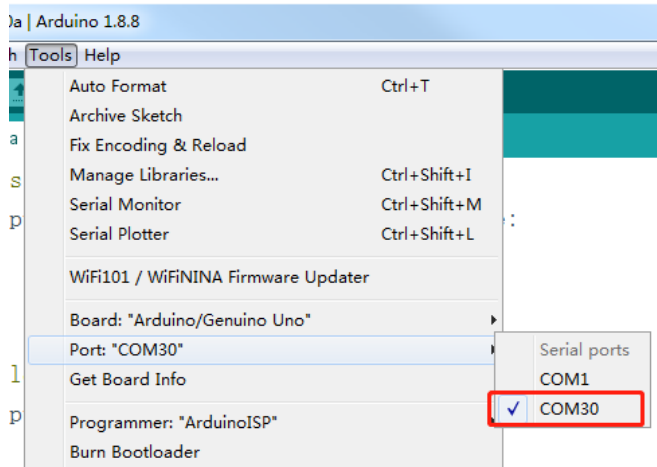


Figure 1.9

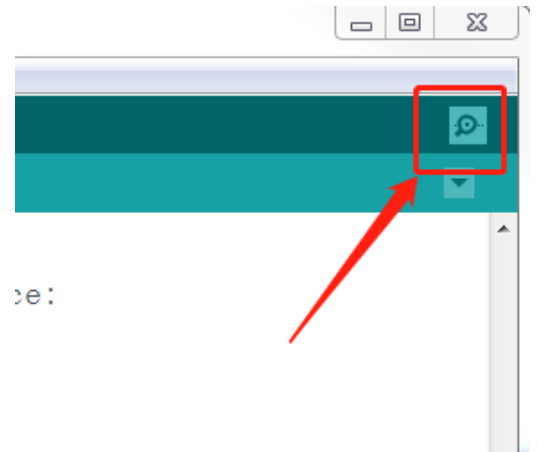


Figure 1.10

- 2) The test AT instruction is shown in figure 1.11. The USB and bluetooth data transmission mode of BLE-Uno is set as USB serial port data and BLE transmission as shown in figure 1.12

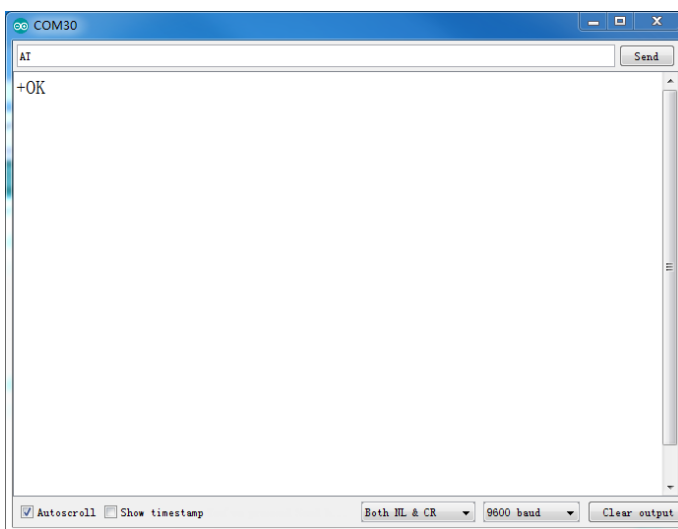


Figure 1.11

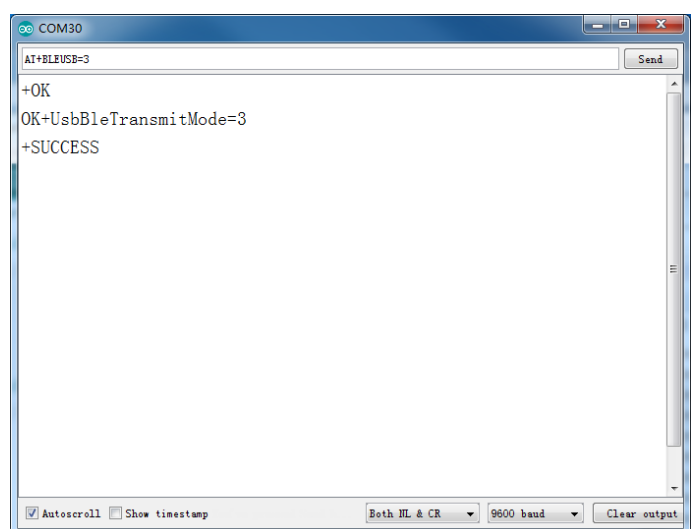


Figure 1.12

- 3) Install ble\_tool.apk on the phone and open the test APP. The interface is shown in figure 1.13. Find the corresponding bluetooth name (BLE-Uno) and click to connect. After connection, as shown in

figure 1.14, four options will appear to test different functions, respectively. Because here we only test whether bluetooth can send and receive data normally, so we select SK Service and select SK\_KEYPRESSED as shown in figure 1.14 and 1.15

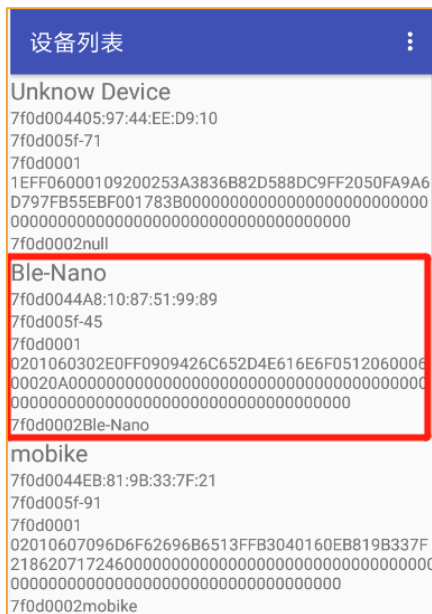


图 1.13

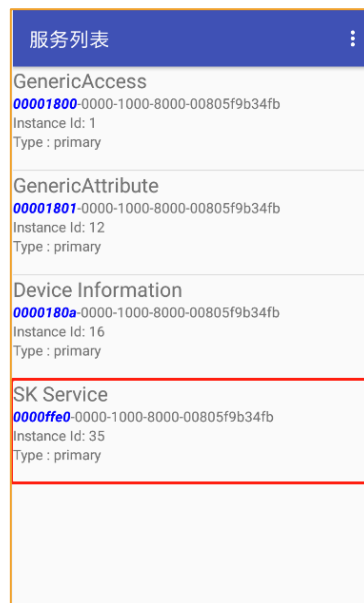


图 1.14



Figure 1.15



Figure 1.16

- 4) After clicking "sk-keypressed", as shown in FIG. 1.17, we can see that there is a "write" button. Click to enter the interface as shown in FIG. 1.18



Figure 1.17



Figure 1.18

- 5) After clicking "send", we can see that the content sent by the mobile phone is printed on the serial port monitor, as shown in figure 1.19, indicating that the bluetooth module can normally send data. Of course, in order to test the accuracy more accurately, we can test it several times and try to test it in different environments.

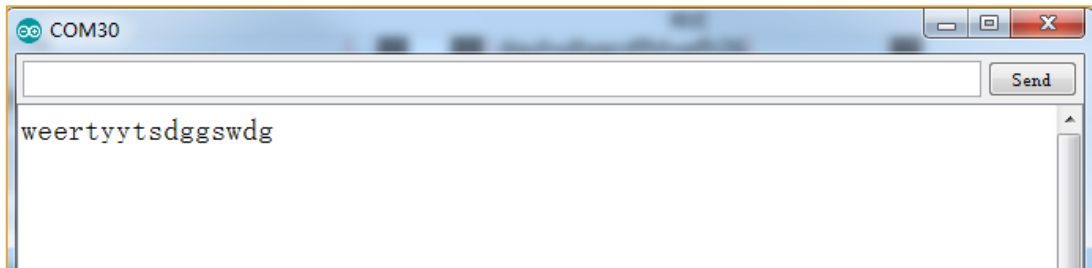


Figure 1.19

- 6) As shown in figure 1.20, we can input the content we want to Send on the serial monitor, and then click "Send" to Send the data to the mobile APP via bluetooth, as shown in figure 1.21.

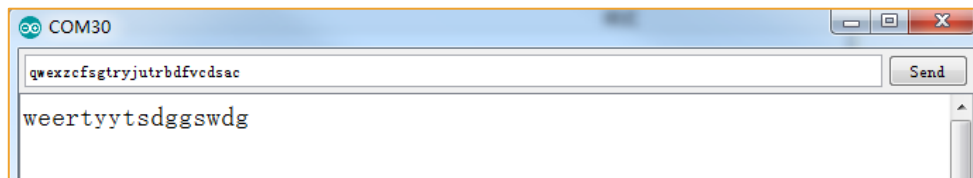


Figure 1.20



Figure 1.21

In the above test process, both PC terminal and android terminal can send and receive data normally, indicating that the BLE-Uno communication is normal and achieves the expected effect.

## AT instruction set

Users can communicate via a serial port and bluetooth chip, a serial port using Micro - USB cable, baud rate support. 9600192 00384 00576 00115 200. The default baud rate of the serial port is 9600bps. ( note: when sending the AT command must be carriage returns, the AT command can only be effective in the module not connected state, once the bluetooth module is connected to the equipment, bluetooth module into data passthrough mode), the AT commands are case sensitive, both ends in return, newline characters: \ r \ n)

List	Command	Effect	M/S	Work Mode	default
1	AT+ALL	Print all the configuration information for the BLE configuration	M/S	/	/
2	AT+BAUD	Configure serial port baud rate	M/S		9600
3	AT+PARITY	Set the serial port check bit	M/S		0
4	AT+STOPBIT	Set the serial port stop bit	M/S		0
5	AT+NAME	Configure bluetooth device name	M/S		BLE-Uno
6	AT+VER	View the BLE firmware version number	M/S		V1.1
7	AT+MAC	View bluetooth 12-bit MAC address	S		/
8	AT+ROLE	Configure the BLE master-slave mode	M/S		1
9	AT+SCAN	Scan surrounding bluetooth devices	M		/
10	AT+CONN	Connect the scan result to the subscript of bluetooth	M		/
11	AT+CON	Connect the corresponding Mac address to bluetooth	M		/
12	AT+AUTOCON	Automatically connect to the nearest slave bluetooth, and restart to take effect	M		0
13	AT+DISCON	Break the current link	M		/
14	AT+AUTH	Set whether a password is required for a bluetooth connection	S		0
15	AT+PASS	Set the bluetooth connection password	S		000000
16	AT+ MODE	Set bluetooth working mode	M/S		0
17	AT+ BLEUSB	Set bluetooth USB and bluetooth data transfer modes	M/S		0

18	AT+ TXPOWER	Set bluetooth transmission power	M/S		0
19	AT+MINI_INTE RVAL	Set the minimum communication interval of BLE chip	M/S		6
20	AT+MAX_INTE RVAL	Set the maximum communication interval of BLE chip	M/S		6
21	AT+SRVUUID	Get the bluetooth signature UUID	M/S		0xFFE0
	AT+CHARUUID	Gets the character signature	M/S		0xFFE1
21	AT+RXGAIN	Set the BLE receive gain	M/S		1
22	AT+RESETR	Bluetooth device software restart	M/S		/
23	AT+SETTING	system settings	M/S		/

## AT Instruction set specification

### 1、Test instruction

Command	Response	Parameter
AT	+OK	NULL

### 2、Print all configuration instructions for BLE-Uno

Command	Response	Parameter
AT+ALL	Detailed configuration information	Null

### 3、Configure serial port baud rate

Command	Response	Parameter
AT+BAUD=<Param>	OK+Baud=<Param> +SUCCESS	0:9600 1:19200 2:38400 3:57600 4:115200

### 4、Configure the check bit for the serial port

Command	Response	Parameter
AT+PARITY=<Param>	OK+Parity=<Param>	0:NULL

	+SUCCESS	1: even parity check 2: Odd Parity Check
--	----------	---

#### 5、Configure the stop bit for the serial port

Command	Response	Parameter
AT+STOPBIT=<Param>	OK+StopBit=<Param> +SUCCESS	0:1bit 1:2bits

#### 6、Configure bluetooth name

Command	Response	Parameter
AT+NAME=<Param>	OK+Name=<Param> +SUCCESS	Bluetooth Name

#### 7、Query BLE-Uno firmware version

Command	Response	Parameter
AT+VER	OK+Version=<Result>	Null

#### 8、Query the Mac address of bluetooth

Command	Response	Parameter
AT+MAC	OK+Mac=<Result>	Null

#### 9、Query sets bluetooth master-slave mode

Command	Response	Parameter
AT+ROLE=<Param>	OK+RoleMode=<Param> +SUCCESS	0:Master 1:Slave

#### 10、Bluetooth master slave mode scans nearby slave

Command	Response	Parameter
AT+SCAN	OK+Scan OK+DISC[0]:xxxx OK+DISC[1]:xxxx ..... OK+SCAN DONE	Null



#### 11、 Connect slave bluetooth by scanning return index

Command	Response	Parameter
AT+CONN=<Param>	OK+CONN=<Param>	Scan slave bluetooth subscript Numbers

#### 12、 Connect the slave to bluetooth by connecting the master to the slave via bluetooth Mac address

Command	Response	Parameter
AT+CON=<Param>	OK+CON=<Param>	Slave bluetooth address

- OK+Scan
- OK+DISC[0]:3234CFE9D1C3
- OK+DISC[1]:464288AEAB8F
- OK+DISC[2]:3CA5080A62FB
- OK+DISC[3]:30AEA42BF189
- OK+DISC[4]:58803C6EFB0A
- OK+SCAN DONE
- AT+CONN=1 Represents the second bluetooth device scanned by the connectionAT + CON = 464288AEAB8F Connect directly to a device with the Mac address 464288AEAB8F

#### 13、 Enable bluetooth automatic connection mode

When enabled, the bluetooth module will automatically connect to the device that was successfully connected last time

Command	Response	Parameter
AT+AUTOCON=<Param>	OK+AutoCon=<Param> +SUCCESS	0: Close automatic connection 1: Automatic connection at startup

#### 14、 Disconnect from the current bluetooth device

Command	Response	Parameter
AT+DISCON	OK+Disconnect	Null

#### 15、 Set whether a password is required for a bluetooth connection

Command	Response	Parameter
AT+AUTH=<Param>	OK+AuthMode=<Param> +SUCCESS	0: Not need Password connection required

1: Password connection required

#### 16、 Setting the bluetooth connection is a password

Command	Response	Parameter
AT+ PASS=<Param>	OK+ PassWord=<Param> +SUCCESS	

#### 17、 Set bluetooth working mode

Command	Response	Parameter
AT+ MODE=<Param>	OK+ WorkMode=<Param> +SUCCESS	0: unvarnished transmission 1: driving pattern 2:iBeacon

#### 18、 Set bluetooth USB and bluetooth data transfer modes

Command	Response	Parameter
AT+ BLEUSB=<Param>	OK+UsbBleTransmitMode=<Param> +SUCCESS	0:close 1:USB Serial data to BLE 2:BLE data to USB 串口 3:USB Serial data and BLEunvarnished transmission

#### 19、 Set the bluetooth transmission power

Command	Response	Parameter
AT+ TXPOWER=<Param>	OK+TxPower=<Param> +SUCCESS	0:4db 1:0db 2:-6db 3:-23db

#### 19、 Sets the minimum communication interval in milliseconds for the BLE chip

Command	Response	Parameter
AT+MINI_INTERVAL=<Param>	OK+ Mini_Interval=<Param> +SUCCESS	For PC and Android, it is recommended to set it to 10iOS device, and it is recommended to set it to 20

## 20、Sets the maximum communication interval in milliseconds for the BLE chip

Command	Response	Parameter
AT+MAX_INTERVAL=<Param>	OK+Max_Interval=<Param> +SUCCESS	For PC and Android, it is recommended to set it to 10iOS devices and 40

## 21、Set the BLE receive gain

Command	Response	Parameter
AT+RXGAIN=<Param>	OK+RxGain =<Param> +SUCCESS	0: Typical Gain 1: HG(high gain)

## 22、Set the BLE feature code UUID

Command	Response	Parameter
AT+SRVUUID	Servic UUID=0XFFE0	

## 23、Set the BLE character feature code

Command	Response	Parameter
AT+CHARUUID	Char UUID=0XFFE1	

## 24、Software Reset

Command	Response	Parameter
AT+RESETR	null	NULL

## 25、系统设置

Command	Response	Parameter
AT+SETTING=<Param>	+SUCCESS	DEFAULT: factory data reset PARI_DEFAULT :Clear pairing information

## FAQ

**Q1: What is the difference between a BLE-Uno and a regular Arduino uno R3 board, and how do I start using this development board**

A1: Ble - is the Uno in the original official Arduino Uno R3 adding CC2540 Mini bluetooth 4.0 interface - Usb upgraded to a more general Micro - Usb interface, pin function is fully compatible with latest Bootload Bootload burning need to use the above 1.8.8 IDE can burn, other methods of use please refer to the official arduino Nano usage.

**Q2 : Common problem of abnormal communication between bluetooth 4.0.**

A2: Recommended inspection steps:

- 1) Update firmware to latest version;
- 2) Restore factory Settings by AT instruction (AT+SETTING=DEFAULT). (see: configure BLE devices by AT instruction)
- 3) Check whether the communication baud rate of bluetooth module, program code and other relevant places is consistent; (the control panel with a crystal oscillator frequency of 8MHz supports a baud rate of up to 38400bps.)
- 4) Whether the bluetooth device supports 4.0 or not, there will be compatibility problems with the bluetooth module of CC2540 and other brands. Please try your best to connect with the bluetooth module of CC25xx

**Q3 :Why can't my phone connect to the BLE-Uno, and even if it does, it can't communicate?**

A3: Please check whether your mobile phone supports bluetooth 4.0. In addition, please use the Scan button in the APP to Scan the connection of BLE-Uno. No password is required for connection. The bluetooth setting interface and other BLE apps are not supported.

**Q4:How to use Ibeacon function?**

A4: You can find relevant instructions to turn on/off the Ibeacon function in the AT list, and then download an Ibeacon query software in the app market, and you can query Ibeacon. AT this time, Bluno is an Ibeacon label.

**Q5 : Does BLE-Uno support multi - connection? I want to connect many slave machines with one host, how many can I connect at most?**

A5: BLE-Uno does not support multi-connection, but the idea of multi-connection can be realized by constantly switching binding slave machines.

**Q6 : Why can't the BLE-Uno bluetooth 4.0 products connect to bluetooth 2.0 devices?**

A6: In order to achieve very low power consumption, our Bluno series adopts single-mode Bluetooth Smart, which is optimized in both hardware and software, and can only support BLE, but not connected to Bluetooth 2.0 devices.