



Motor microstep switches: These DIP-Switches are **optional** and you are free to not use them. By default the BigEasyDrivers runs with 1/16 step. They are only required if you want 1/8, 1/4, 1/2 or full steps for your system.

