

CAUTION / NOTICE / HINT

NOTICE:


- When using a vise, place aluminum plates between the part and vise.
- When using a vise, do not overtighten it.

PROCEDURE

1.INSPECT PROPELLER SHAFT ASSEMBLY

37110

a.

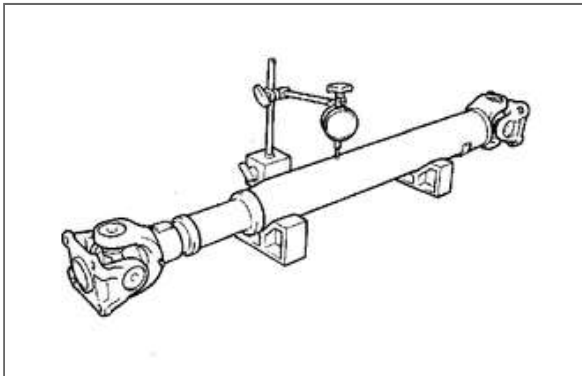

Using a dial indicator, check the propeller shaft assembly runout.


Maximum runout:
0.8 mm (0.0315 in.)

If the propeller shaft assembly runout is more than the maximum, replace the propeller shaft assembly.

2.INSPECT SPIDER BEARING

- a. Check the spider bearings for wear or damage.
If necessary, replace the spider bearing.

b.

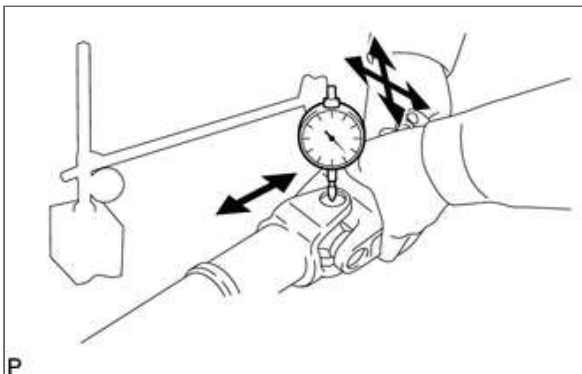

Check the spider bearing axial play by turning the yoke with holding the propeller shaft assembly tightly.

Maximum bearing axial play:
0.05 mm (0.00197 in.)

If the axial play is more than the maximum, replace the spider bearing.