

# EIS GAMEPAD JOYSTICK CALIBRATION PROCEDURE


REVISION 0  
11-09-23

DOCUMENT FILE NUMBER: 11D-1005-01




1.0 JOYSTICK CALIBRATION


OPEN QGC. CONNECT JOYSTICK TO COMPUTER USB. CLICK PARAMETERS.

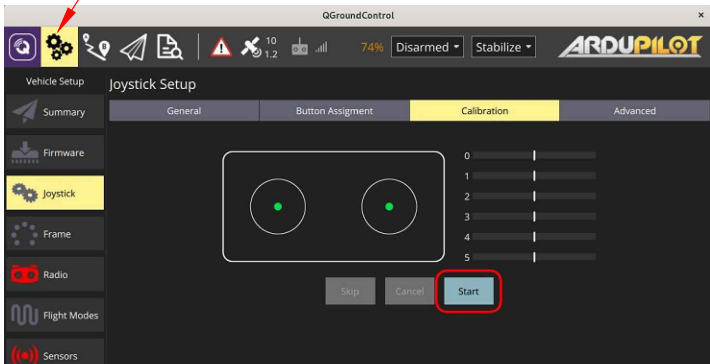


WITH THE GAMEPAD CONNECTED TO YOUR LAPTOP. GO TO JOYSTICK MODE AND SELECT START.

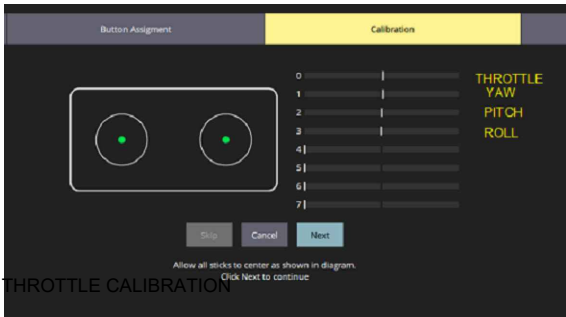

ALL GREEN DOTS SHOWN SHOULD BE CENTERED WITH THE TABS CENTERED. CLICK NEXT

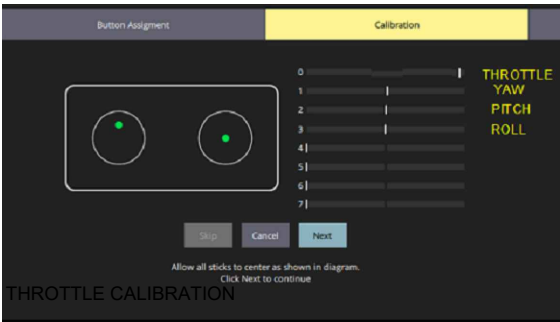

THE GREEN DOT TELLS YOU TO MOVE THE THROTTLE STICK FORWARD. MOVE THROTTLE STICK FORWARD AS SHOWN. SLIDER MOVES RIGHT FOR THROTTLE UP.

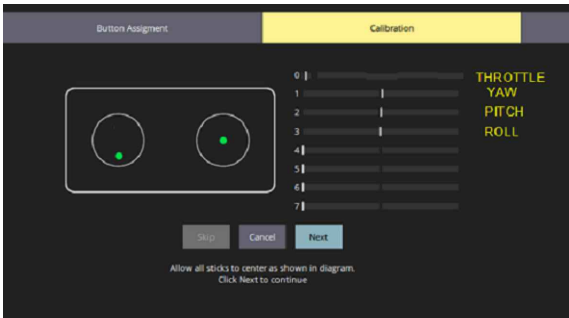


THE GREEN DOT TELLS YOU TO MOVE THE THROTTLE STICK BACKWARD. MOVE THROTTLE STICK BACKWARD AS SHOWN. SLIDER MOVES LEFT FOR THROTTLE DOWN.

YAW CALIBRATION:




THE GREEN DOT TELLS YOU TO MOVE THE YAW STICK TO THE RIGHT. MOVE YAW STICK RIGHT AS SHOWN. WHITE SLIDER MOVES RIGHT.

YAW CALIBRATION:

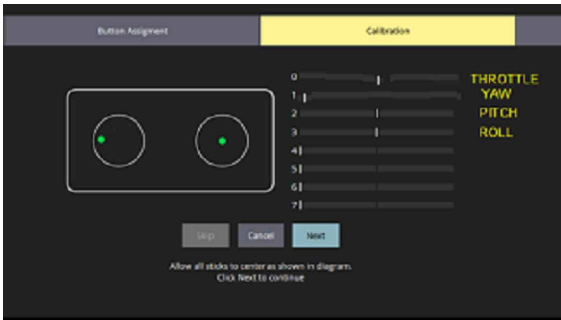


THE GREEN DOT TELLS YOU TO MOVE THE YAW STICK TO THE LEFT. MOVE YAW STICK LEFT AS SHOWN. WHITE SLIDER MOVES LEFT.

ROLL CALIBRATION:

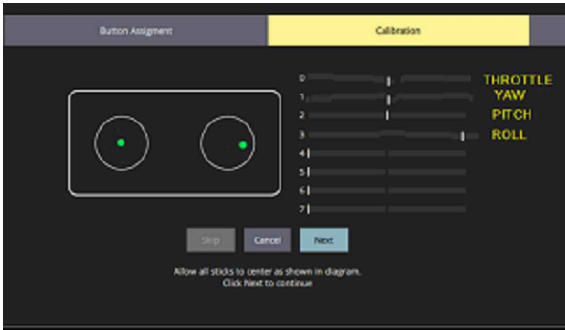


THE GREEN DOT TELLS YOU TO MOVE THE ROLL STICK TO THE RIGHT. MOVE ROLL STICK RIGHT AS SHOWN. WHITE SLIDER MOVES RIGHT.

ROLL CALIBRATION:

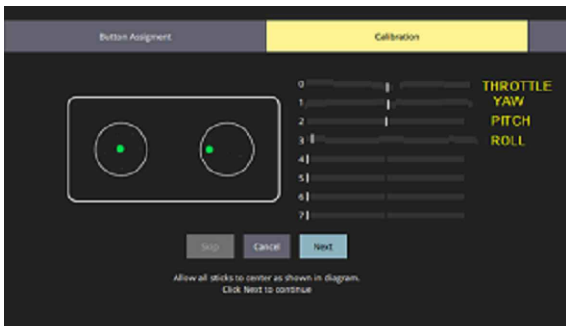

THE GREEN DOT TELLS YOU TO MOVE THE ROLL STICK TO THE LEFT. MOVE ROLL STICK LEFT AS SHOWN. WHITE SLIDER MOVES LEFT.

PITCH CALIBRATION REVERSE MODE:

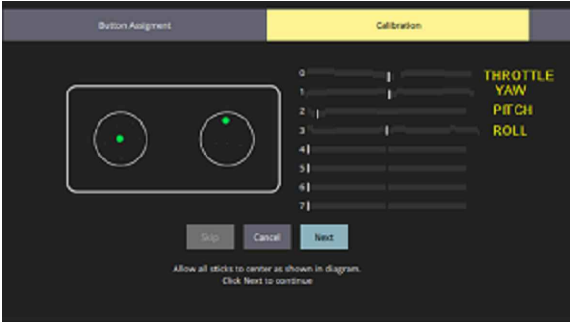


**NOTE:**  
THE GREEN DOT TELLS YOU TO MOVE THE PITCH STICK FORWARD.  
MOVE PITCH STICK IN THE OPPOSITE DIRECTION AS SHOWN.



PITCH CALIBRATION REVERSE MODE:



**NOTE:**  
THE GREEN DOT TELLS YOU TO MOVE THE PITCH STICK BACKWARDS . MOVE  
PITCH STICK IN THE OPPOSITE DIRECTION AS SHOWN

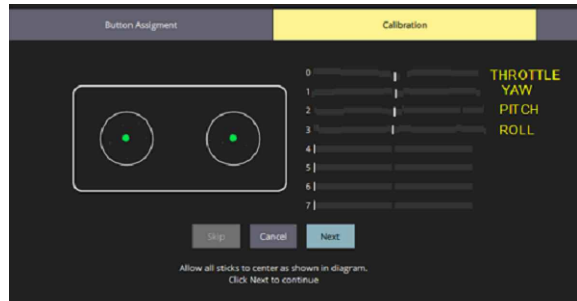

ALLOW ALL STICKS TO CENTER. THE GREEN DOTS AND CENTER TABS SHOULD  
ALL BE CENTERED. CLICK NEXT. THIS CONCLUDES THE CALIBRATION PROCESS.  
FOR THE JOYSTICK MODE. DO A PRELIMINARY FLIGHT TEST OFF DRONE TO  
ENSURE THE JOYSTICKS IN RELATION TO THE MOVEMENT OF THE DRONE IS  
CORRECT.

1.1 BUTTON MODE ASSIGNMENT

GO TO BUTTON ASSIGNMENT SHOWN. ALL BUTTONS ON THE GAMEPAD PANEL SHOULD CORRESPOND ACCORDINGLY TO THE SOFTWARE PANEL SHOWN WHEN THE BUTTONS AND TOGGLE SWITCH ARE PRESSED.

AUX2

DISARM

SET TAB TO DISARM  
(TOGGLE SWITCH)

AUX3

LAND

SET TAB TO  
LAND

AUX1

SET TAB TO  
ALTITUDE  
HOLD

AUX4

LOITER

SET TAB TO  
LOITER

ARM

SET TAB TO ARM  
(TOGGLE SWITCH)

Summary

Firmware

Joystick

Frame

Radio

Flight Modes

Sensors

Power

Motors

Joystick Setup

General

Button Assignment

Calibration

Assigning the same action to multiple buttons requires the press of all those buttons for the action to be taken. This is useful to prevent accidental button presses for critical actions like Arm or Emergency Stop.

0	No Action	Repeat	1	Toggle Arm	Repeat	2	No Action	Repeat	3	No Action	Repeat
4	No Action	Repeat	5	No Action	Repeat	6	No Action	Repeat	7	No Action	Repeat
8	No Action	Repeat	9	No Action	Repeat	10	No Action	Repeat	11	No Action	Repeat
12	No Action	Repeat	13	No Action	Repeat	14	No Action	Repeat	15	No Action	Repeat
16	No Action	Repeat	17	No Action	Repeat	18	No Action	Repeat	19	No Action	Repeat
20	No Action	Repeat	21	No Action	Repeat	22	No Action	Repeat	23	No Action	Repeat
24	No Action	Repeat	25	No Action	Repeat	26	No Action	Repeat	27	No Action	Repeat
28	No Action	Repeat	29	No Action	Repeat	30	No Action	Repeat	31	No Action	Repeat
32	No Action	Repeat	33	No Action	Repeat	34	No Action	Repeat	35	No Action	Repeat
36	No Action	Repeat	37	No Action	Repeat	38	No Action	Repeat	39	No Action	Repeat