
Replacing a MicroSD Card on a Butler XT2

- 1) Remove the existing SD card by pressing down on it gently until you hear a click, then release it. Take care not to let it out too quickly as the spring may eject the card.
- 2) Replace the card in the same orientation by inserting it into the slot, pressing down until you hear a click again, and then releasing it. The card should then stay in place.
- 3) If the Butler XT2 was on when you removed the original card the LCD screen should start flashing “E-R-D”, indicating a card error. Press the “System” button to restart the device. The system should now operate normally.

Note: If the “E-R-D” error does not appear, you may need to restart the Butler XT2 by power-cycling it in order to load the card’s contents.

