


## Choosing an Engine

black queen

a6	Stockfish 7	<input type="checkbox"/> DEFAULT
b6	Texel 1.06	<input type="checkbox"/>
c6	Arasan 18.3	<input type="checkbox"/>
d6	Rodent II 0.9.66	<input type="checkbox"/>
e6	Zurichess graubunden	<input type="checkbox"/>
f6	Floyd x7da0e241	<input type="checkbox"/>
g6	Cinnamon 2.0-20160502	<input type="checkbox"/>
h6	Claudia v. 0.5.1	<input type="checkbox"/>

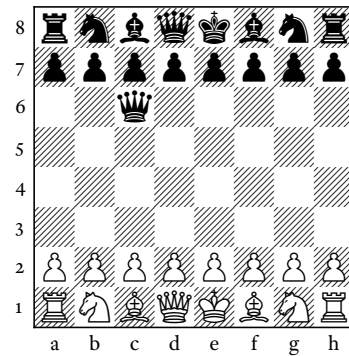


Example: Arasan 18.3

## Choosing a Level

black queen

a5	Level 0 (= weakest)	<input type="checkbox"/>
b5	Level 3	<input type="checkbox"/>
c5	Level 6	<input type="checkbox"/>
d5	Level 9	<input type="checkbox"/>
e5	Level 12	<input type="checkbox"/>
f5	Level 15	<input type="checkbox"/>
g5	Level 18	<input type="checkbox"/>
h5	Level 20 (= strongest)	<input type="checkbox"/> DEFAULT

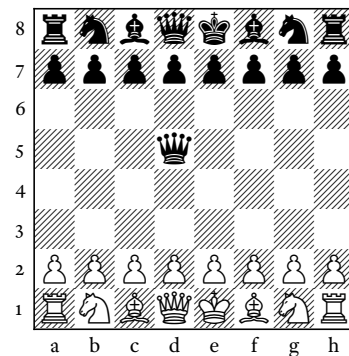


Example: Level 9

## Choosing an Opening Book

black queen

a3	No book	<input type="checkbox"/>
b3	ECO A: flank openings	<input type="checkbox"/>
c3	ECO B: semiopen games	<input type="checkbox"/>
d3	ECO C: open games + French	<input type="checkbox"/>
e3	ECO D: closed games	<input type="checkbox"/>
f3	ECO E: Indian games	<input type="checkbox"/>
g3	Fun	<input type="checkbox"/>
h3	Varied	<input type="checkbox"/> DEFAULT
a4	GM 1950	<input type="checkbox"/>
b4	Performance	<input type="checkbox"/>
c4	Stockfish	<input type="checkbox"/>
d4	Anand	<input type="checkbox"/>
e4	Korchnoi	<input type="checkbox"/>
f4	Larsen	<input type="checkbox"/>
g4	Pro	<input type="checkbox"/>
h4	GM 2001	<input type="checkbox"/>

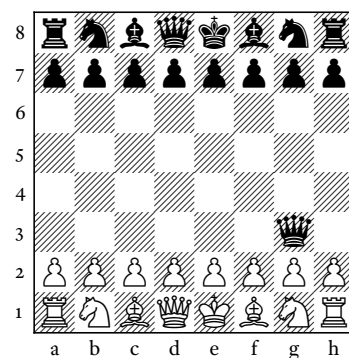


Example: Opening Book 'Fun'


## Choosing a Time Control

white queen

a6	Fixed: 1 s / move
b6	3 s / move
c6	5 s / move
d6	10 s / move
e6	15 s / move
f6	30 s / move
g6	60 s / move
h6	90 s / move
a4	Blitz: 1 min / game
b4	3 min / game
c4	5 min / game <span>DEFAULT</span>
d4	10 min / game
e4	15 min / game
f4	30 min / game
g4	60 min / game
h4	90 min / game
a3	Fischer: 1 min + 1 s / move
b3	3 min + 2 s / move
c3	4 min + 2 s / move
d3	5 min + 3 s / move
e3	10 min + 5 s / move
f3	15 min + 10 s / move
g3	30 min + 15 s / move
h3	60 min + 30 s / move

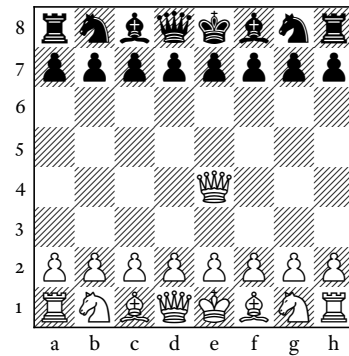

Example: Blitz 15 min / game

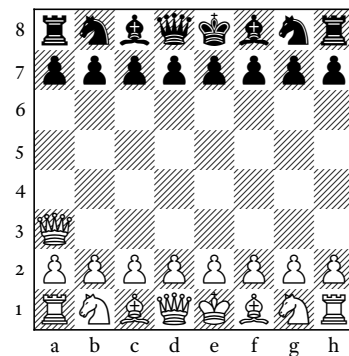


Example: Fischer 1 min + 1 s / move

## Choosing a Play Mode

white queen

a5	Play against computer <span>DEFAULT</span>
b5	Analysis mode
c5	Kibitz mode
d5	Observe mode
e5	Remote mode
f5	Ponder mode

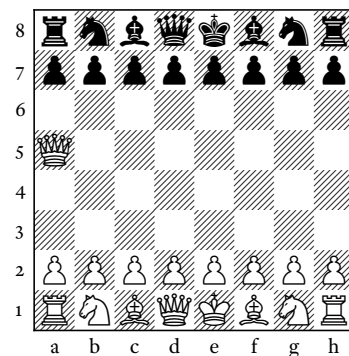


Example: Play against computer

## Shut Down the Computer

white queen

In starting position,  
replace the white king  
with the spare white queen  
to power off the computer.

Also works with empty board  
and both white queens on  
d1 and e1.

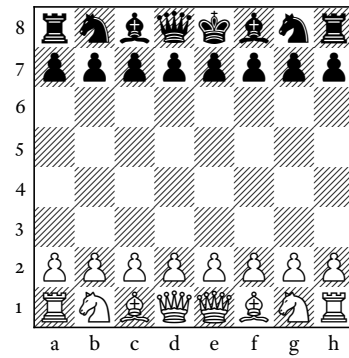


*Example: Shut down computer*

## Reboot the Computer

black queen

In starting position,  
replace the black king  
with the spare black queen  
to reboot the computer.

Also works with empty board  
and both black queens on  
d8 and e8.

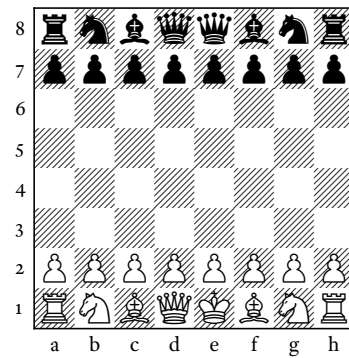

*Example: Reboot computer*