

Microbit piano board Hardware manual				
Funtion	IO			
RGB light	P1			
Touch chip interrupt	P2			
Buzzer	P0			
Touch chip (IIC drive)	P19	IIC address: 0x50		
	P20			