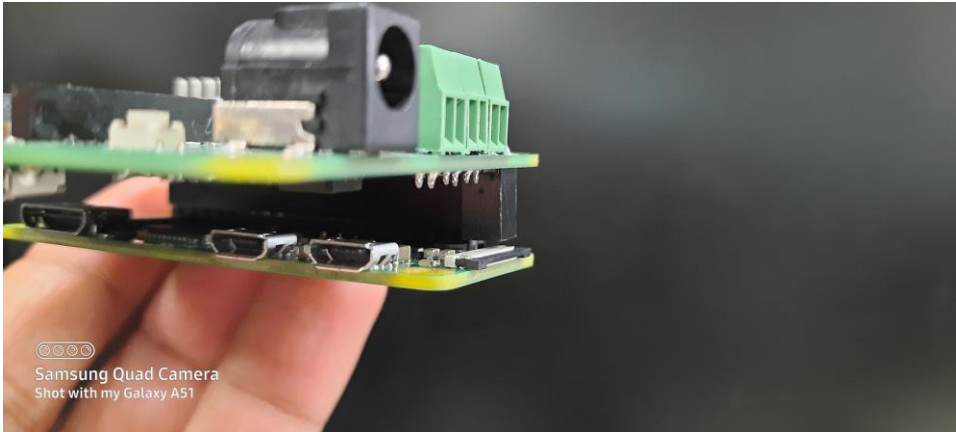 


## Test for compatibility of RPi-zero and RPi-3 with CM Launchpad

### 1.) Test with Raspberry Pi zero

CM launchpad board is not compatible with RPi zero, as launchpad board J5 connector cannot be mount on RPi zero.

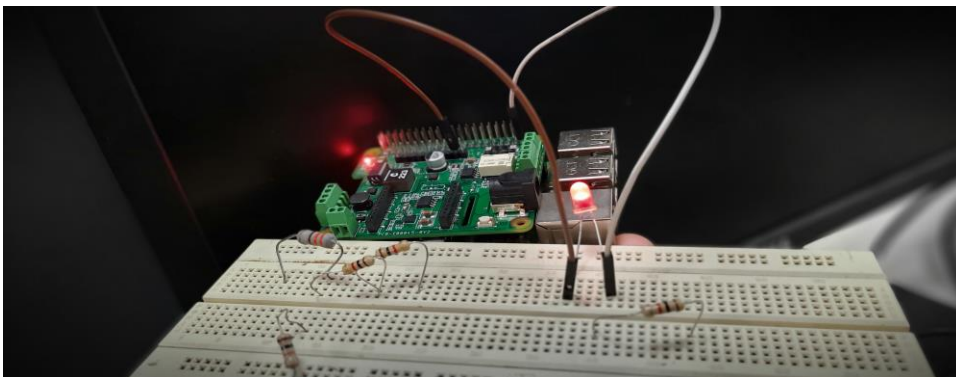


*Fig a*

### 2.) Test with Raspberry Pi 3 B+

Following test were performed:-

(A.) J7 is intended to be used for LED status' ensure pins 8, 6, 4, 3, and 2 can all be lit simultaneously without issue.

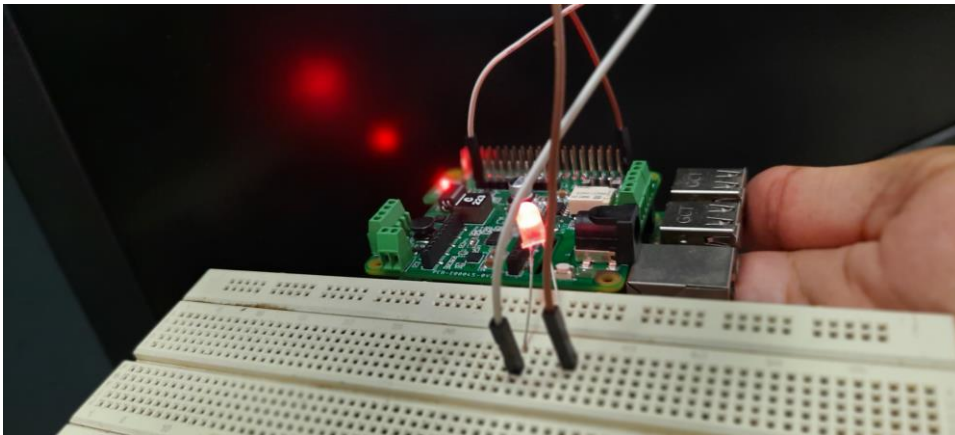


*Fig b: - led toggling using pin 2 of J7 connector*

(B.) U5 should have code written to Raspberry Pi foundation specifications for Pi HATs.

```
>>> %Run CM_U5.py
Initialize I2C (SMBus)
channel = 0 and slave address = 0x50
writing the data into adress 0x00
write successful
reading data from adress 0x00
[12, 17, 48, 56, 67, 78, 89, 54, 255, 255]
read successful
```

(C.) MFP is reference to specific pin configuration, please confirm this Pin is functioning properly, and when triggered properly lights LED1.



*Fig c*