



# The Overall System





# Wiring of the CO2 sensor

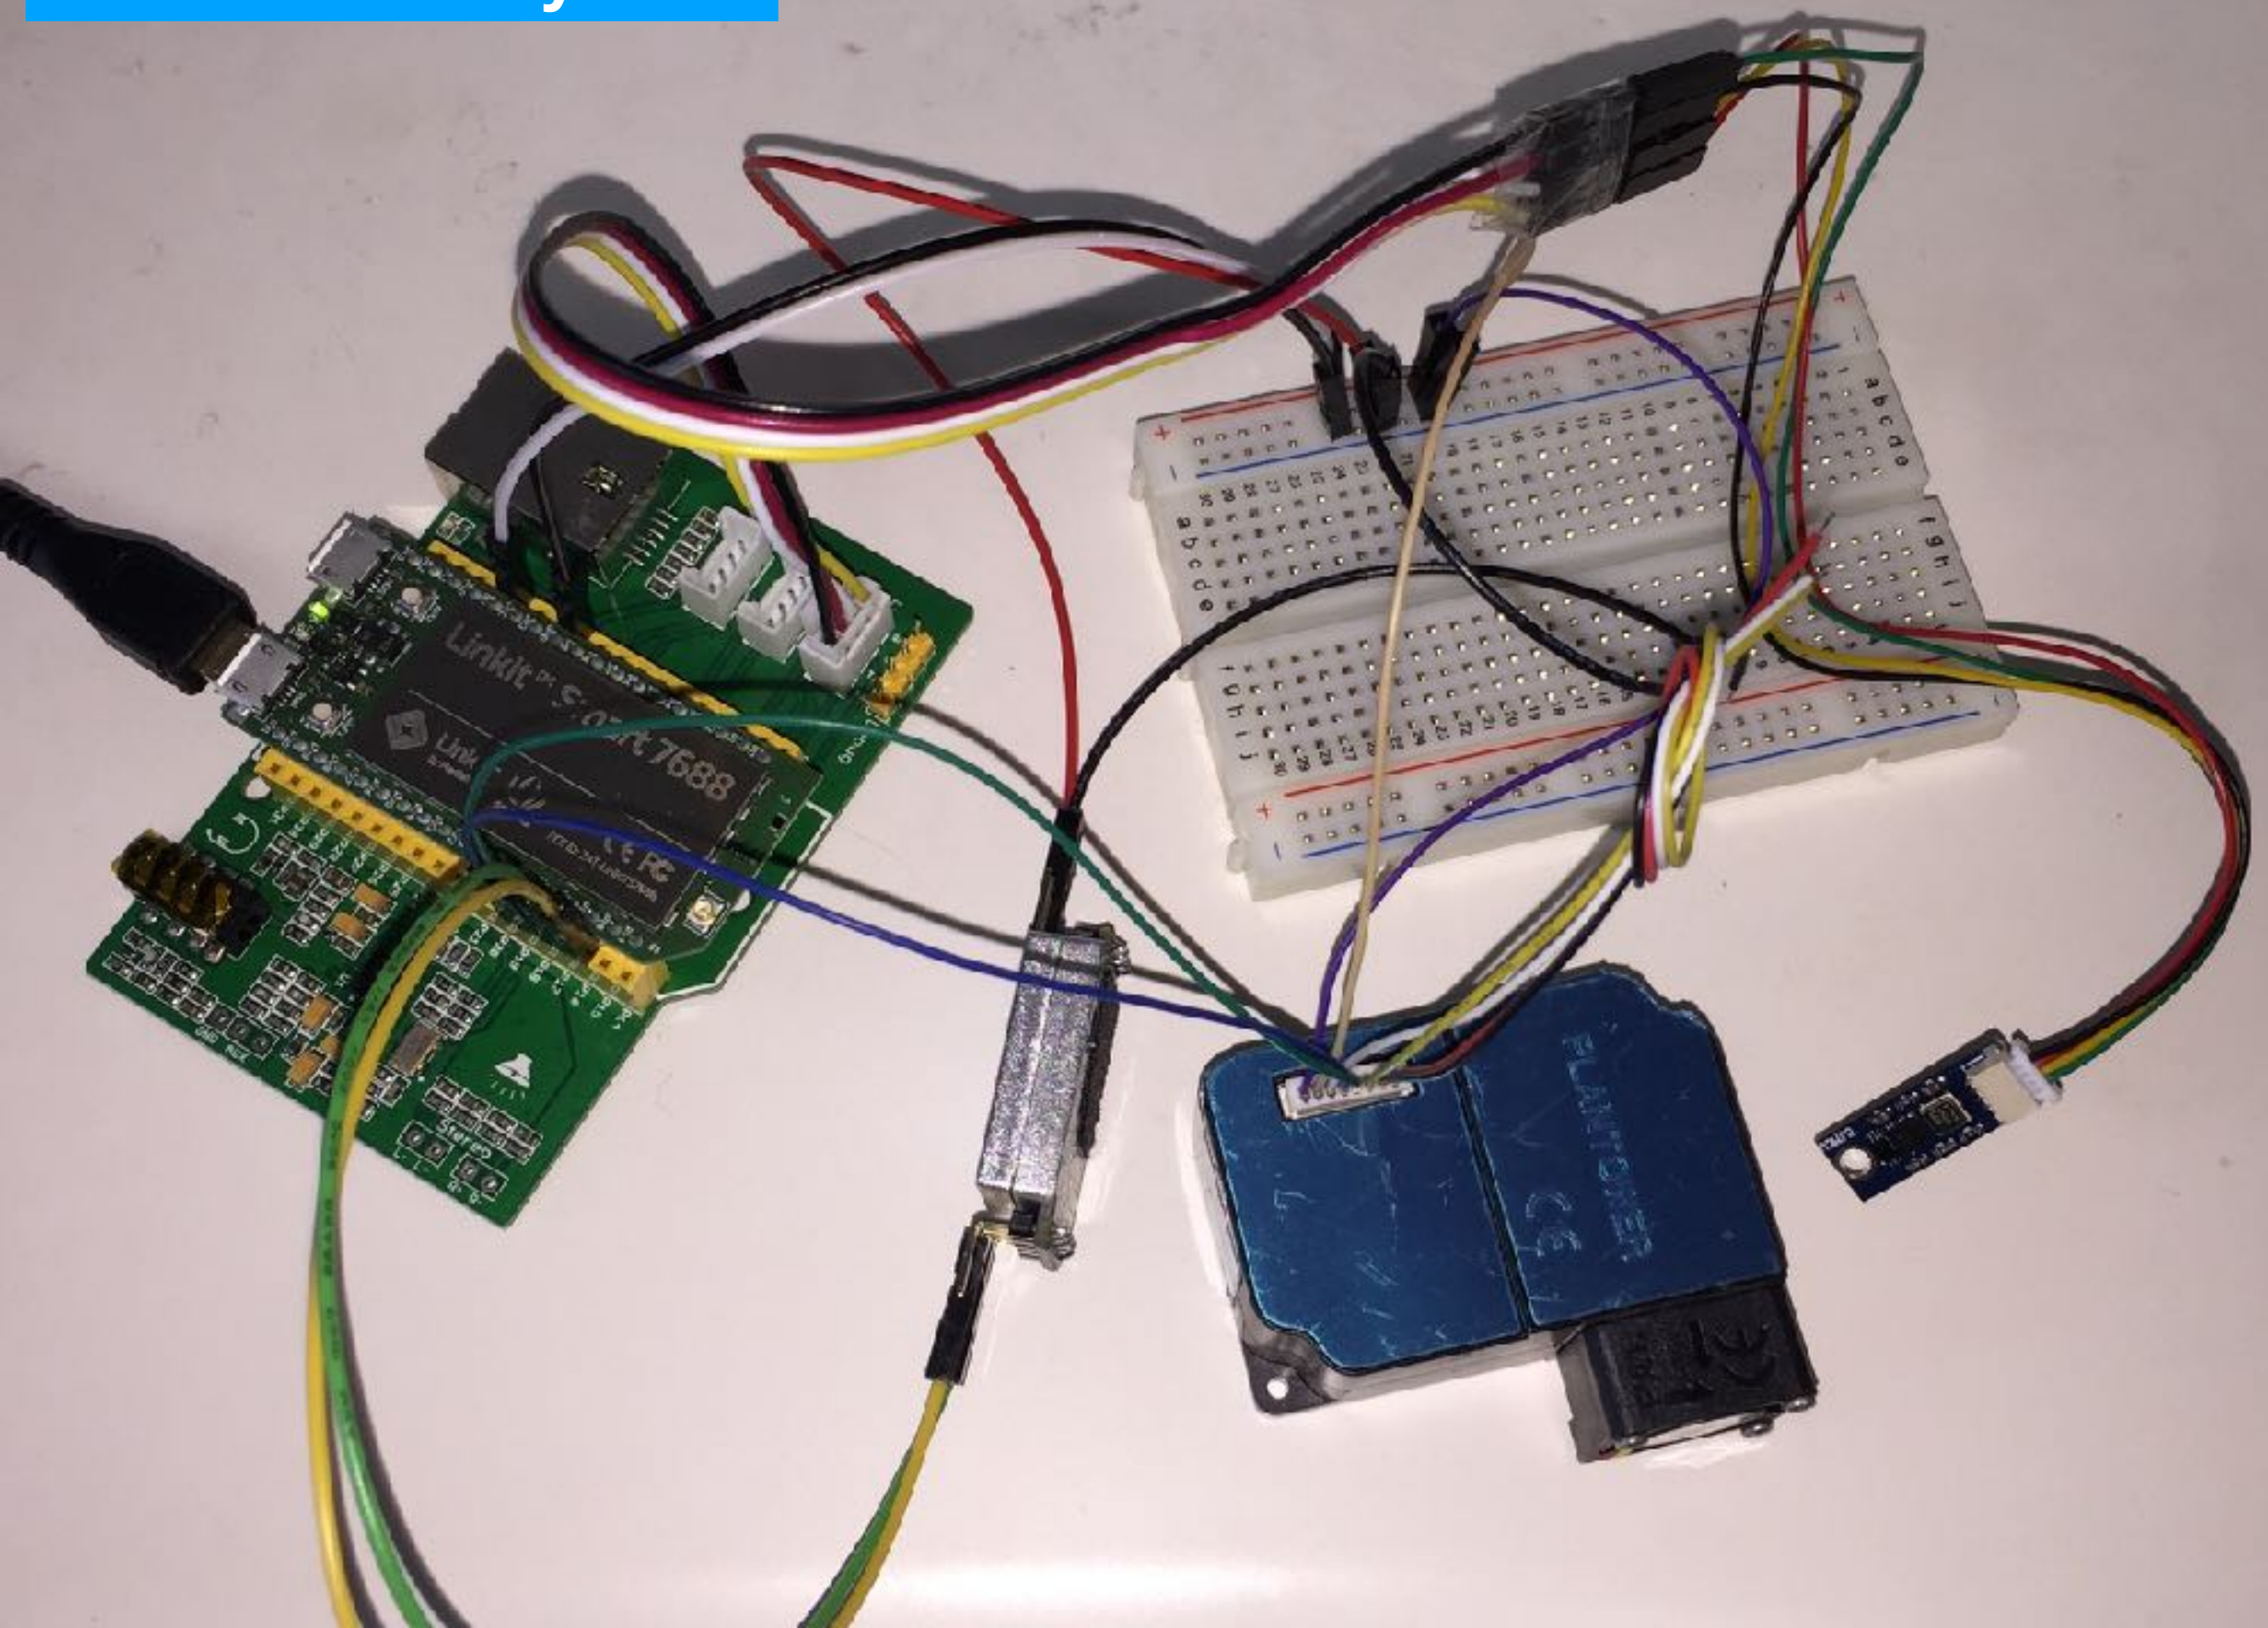

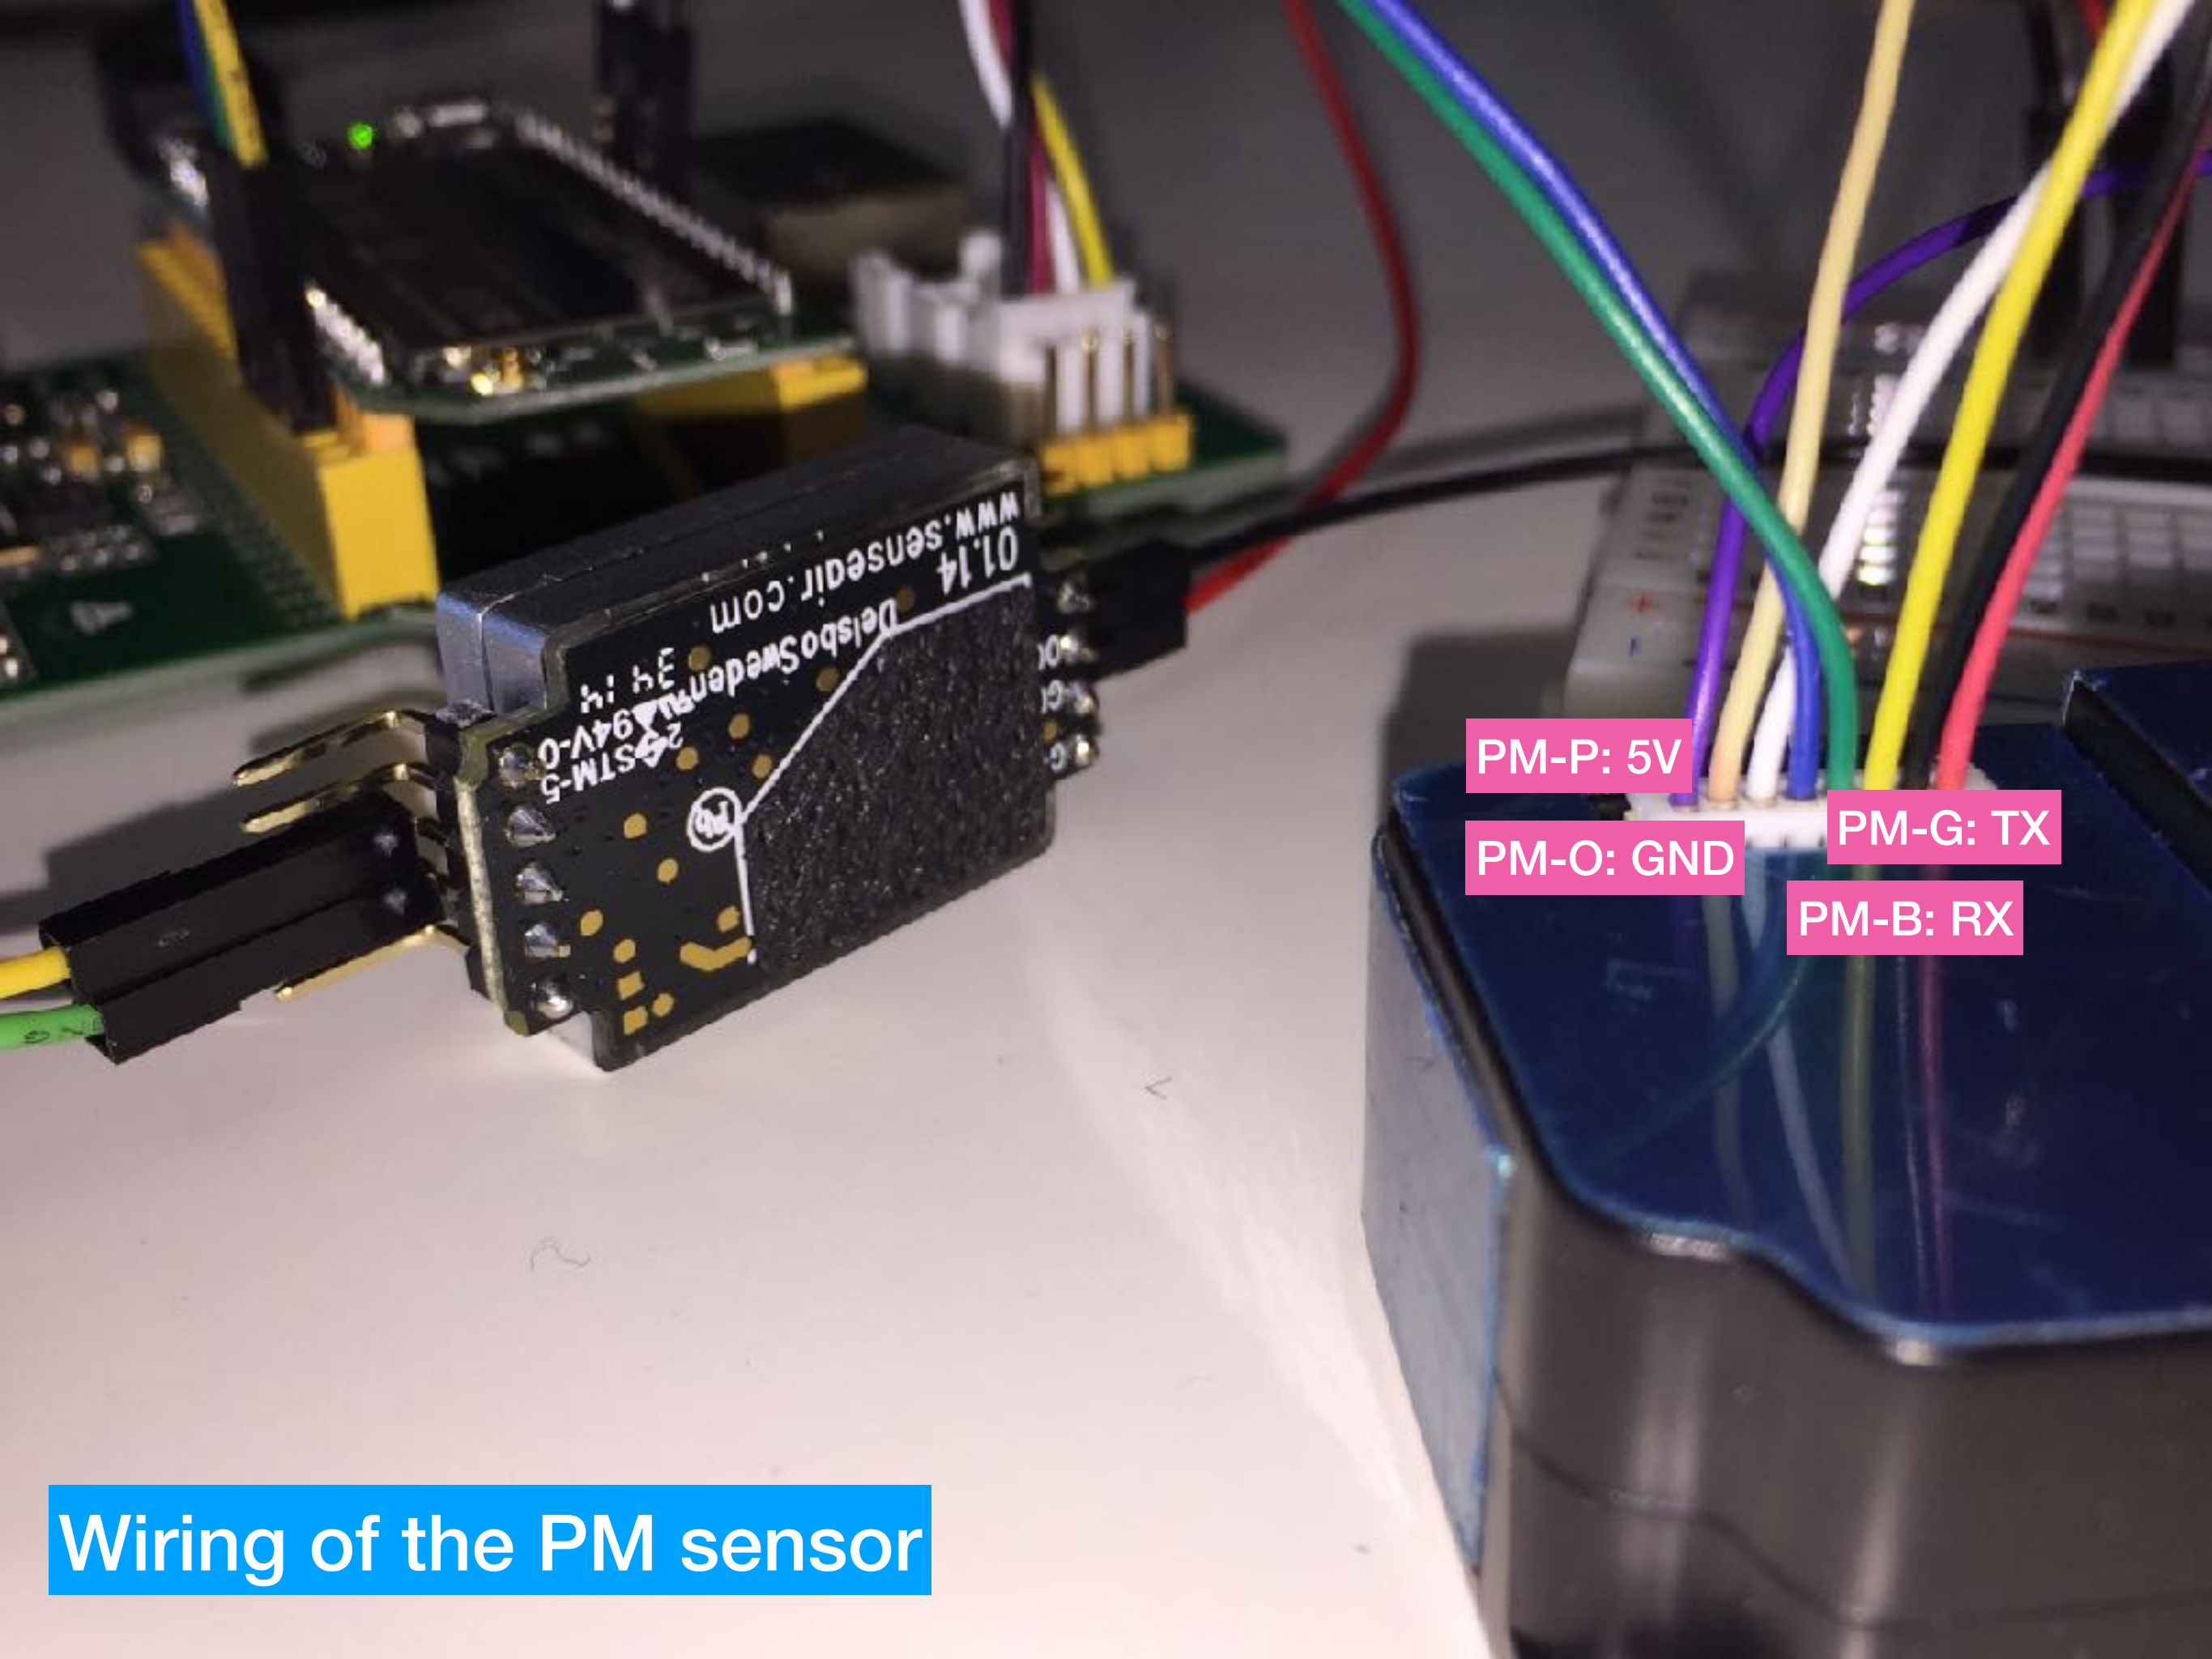

PM-P: 5V

PM-O: GND


PM-G: TX

PM-B: RX

Wiring of the PM sensor



# Wiring of the T/H/L sensor

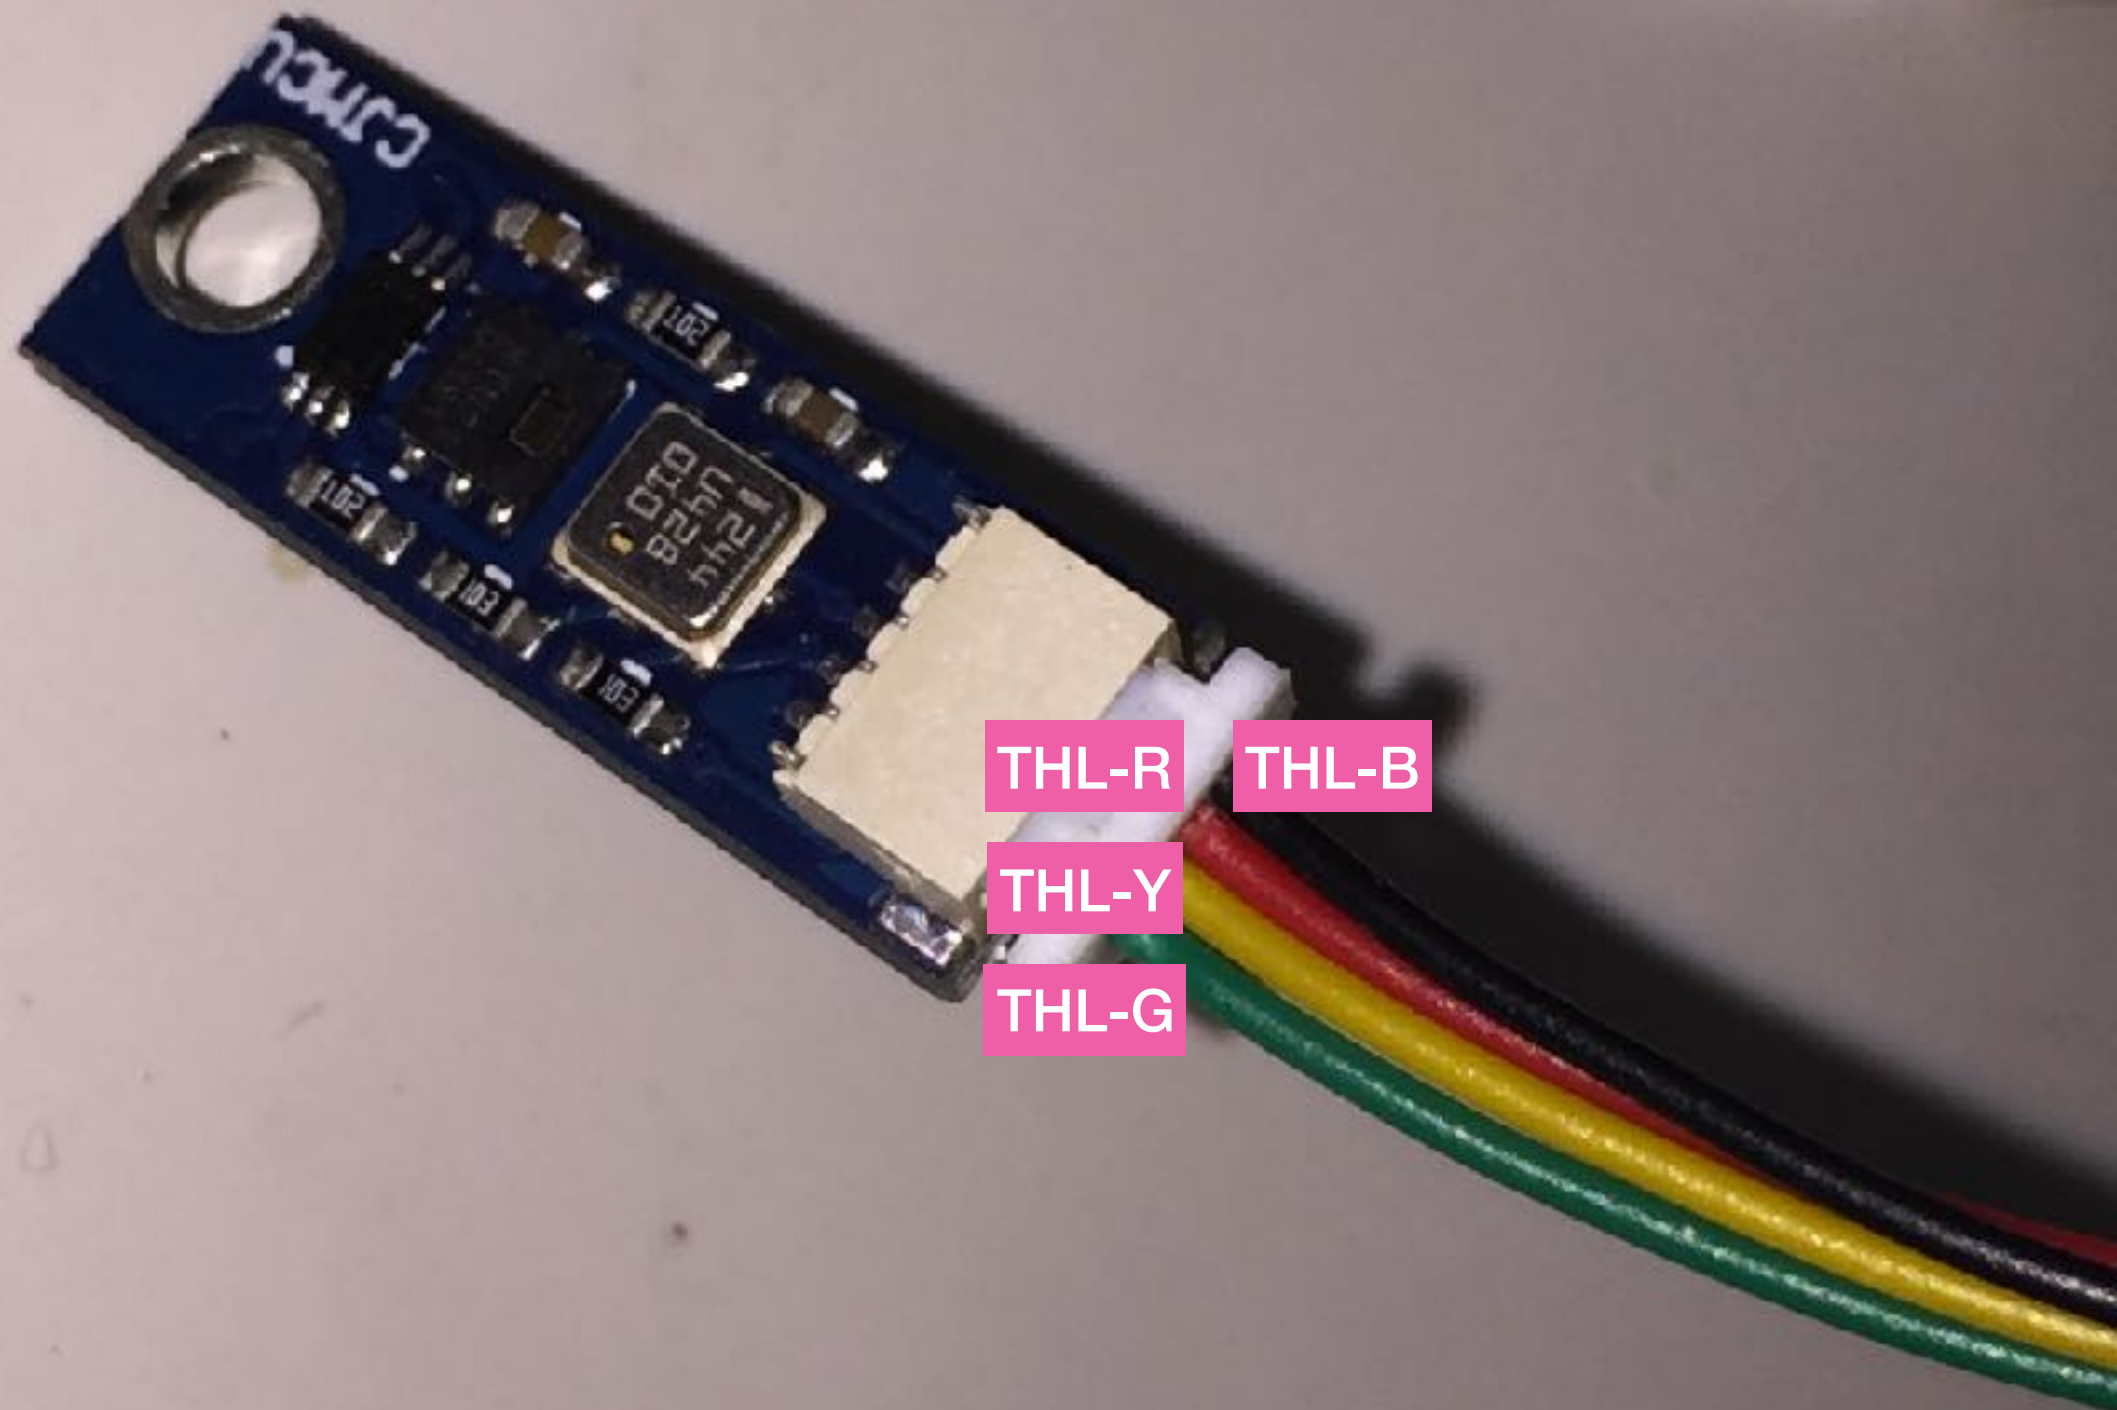



# Wiring in detail (1/3)

7688-W: 5V


7688-B: GND

PM-B: RX

CO2-Y: TX


PM-G: TX

CO2-G: RX

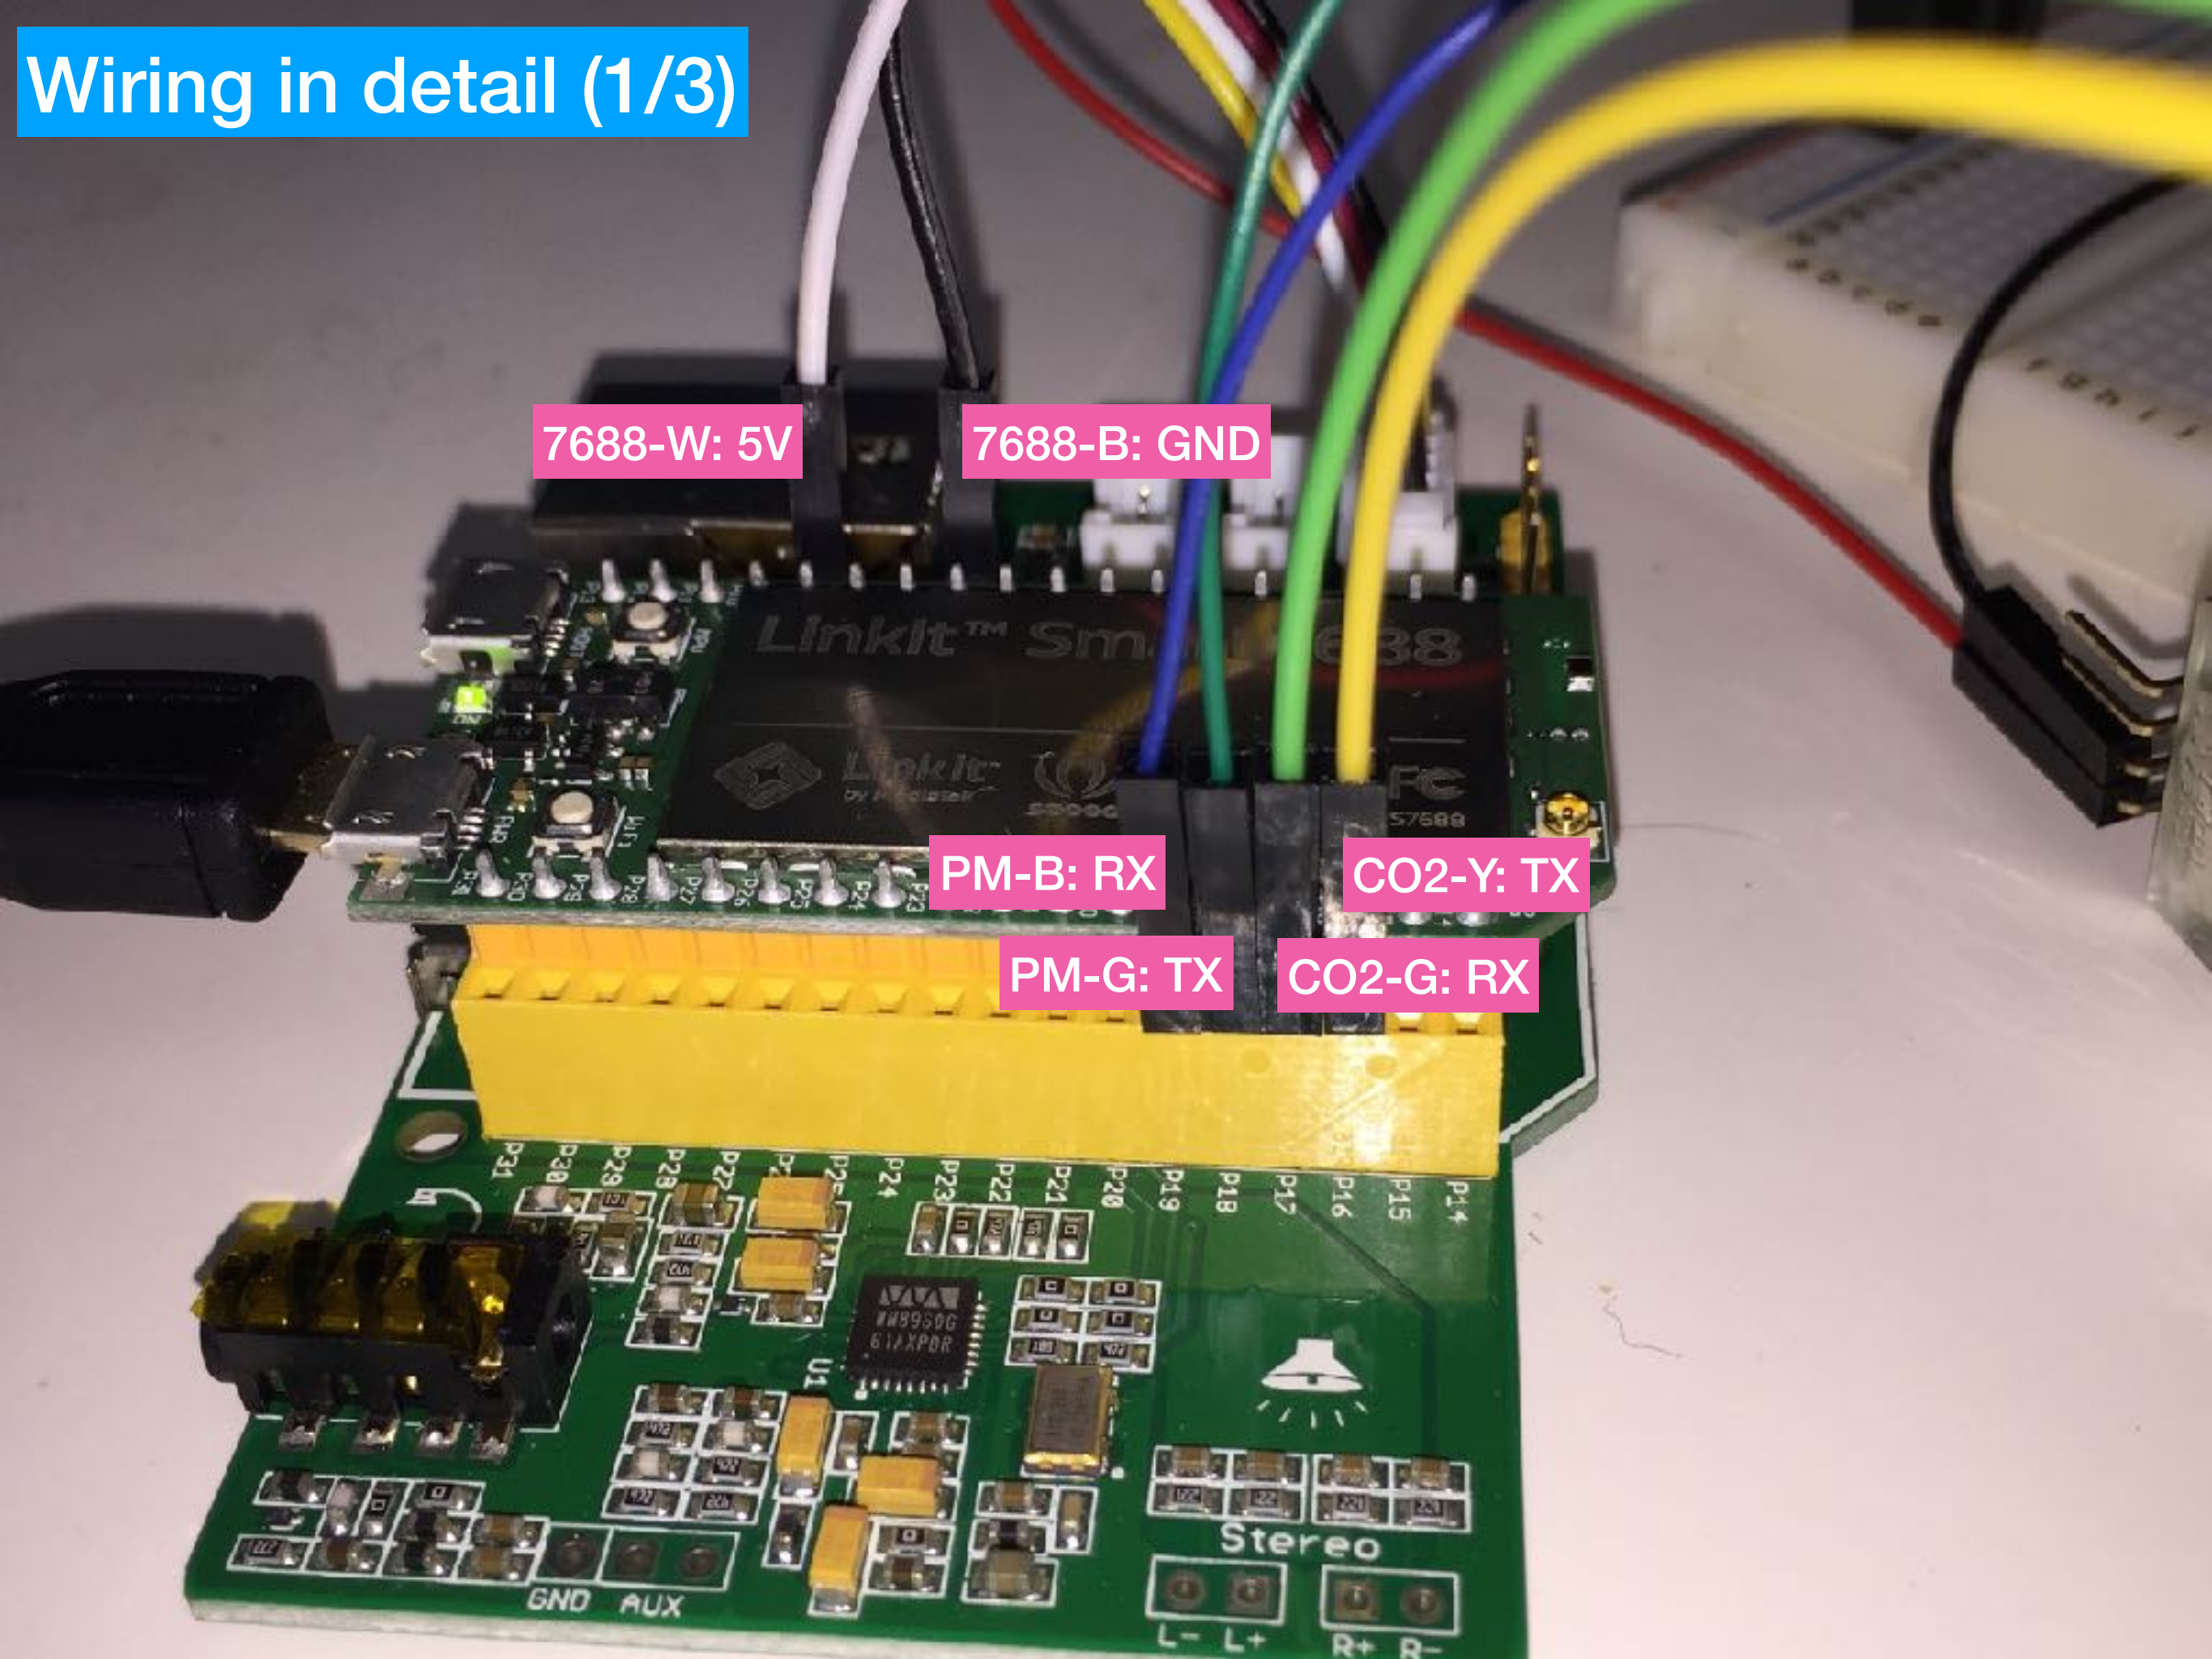




## Wiring in detail (2/3)

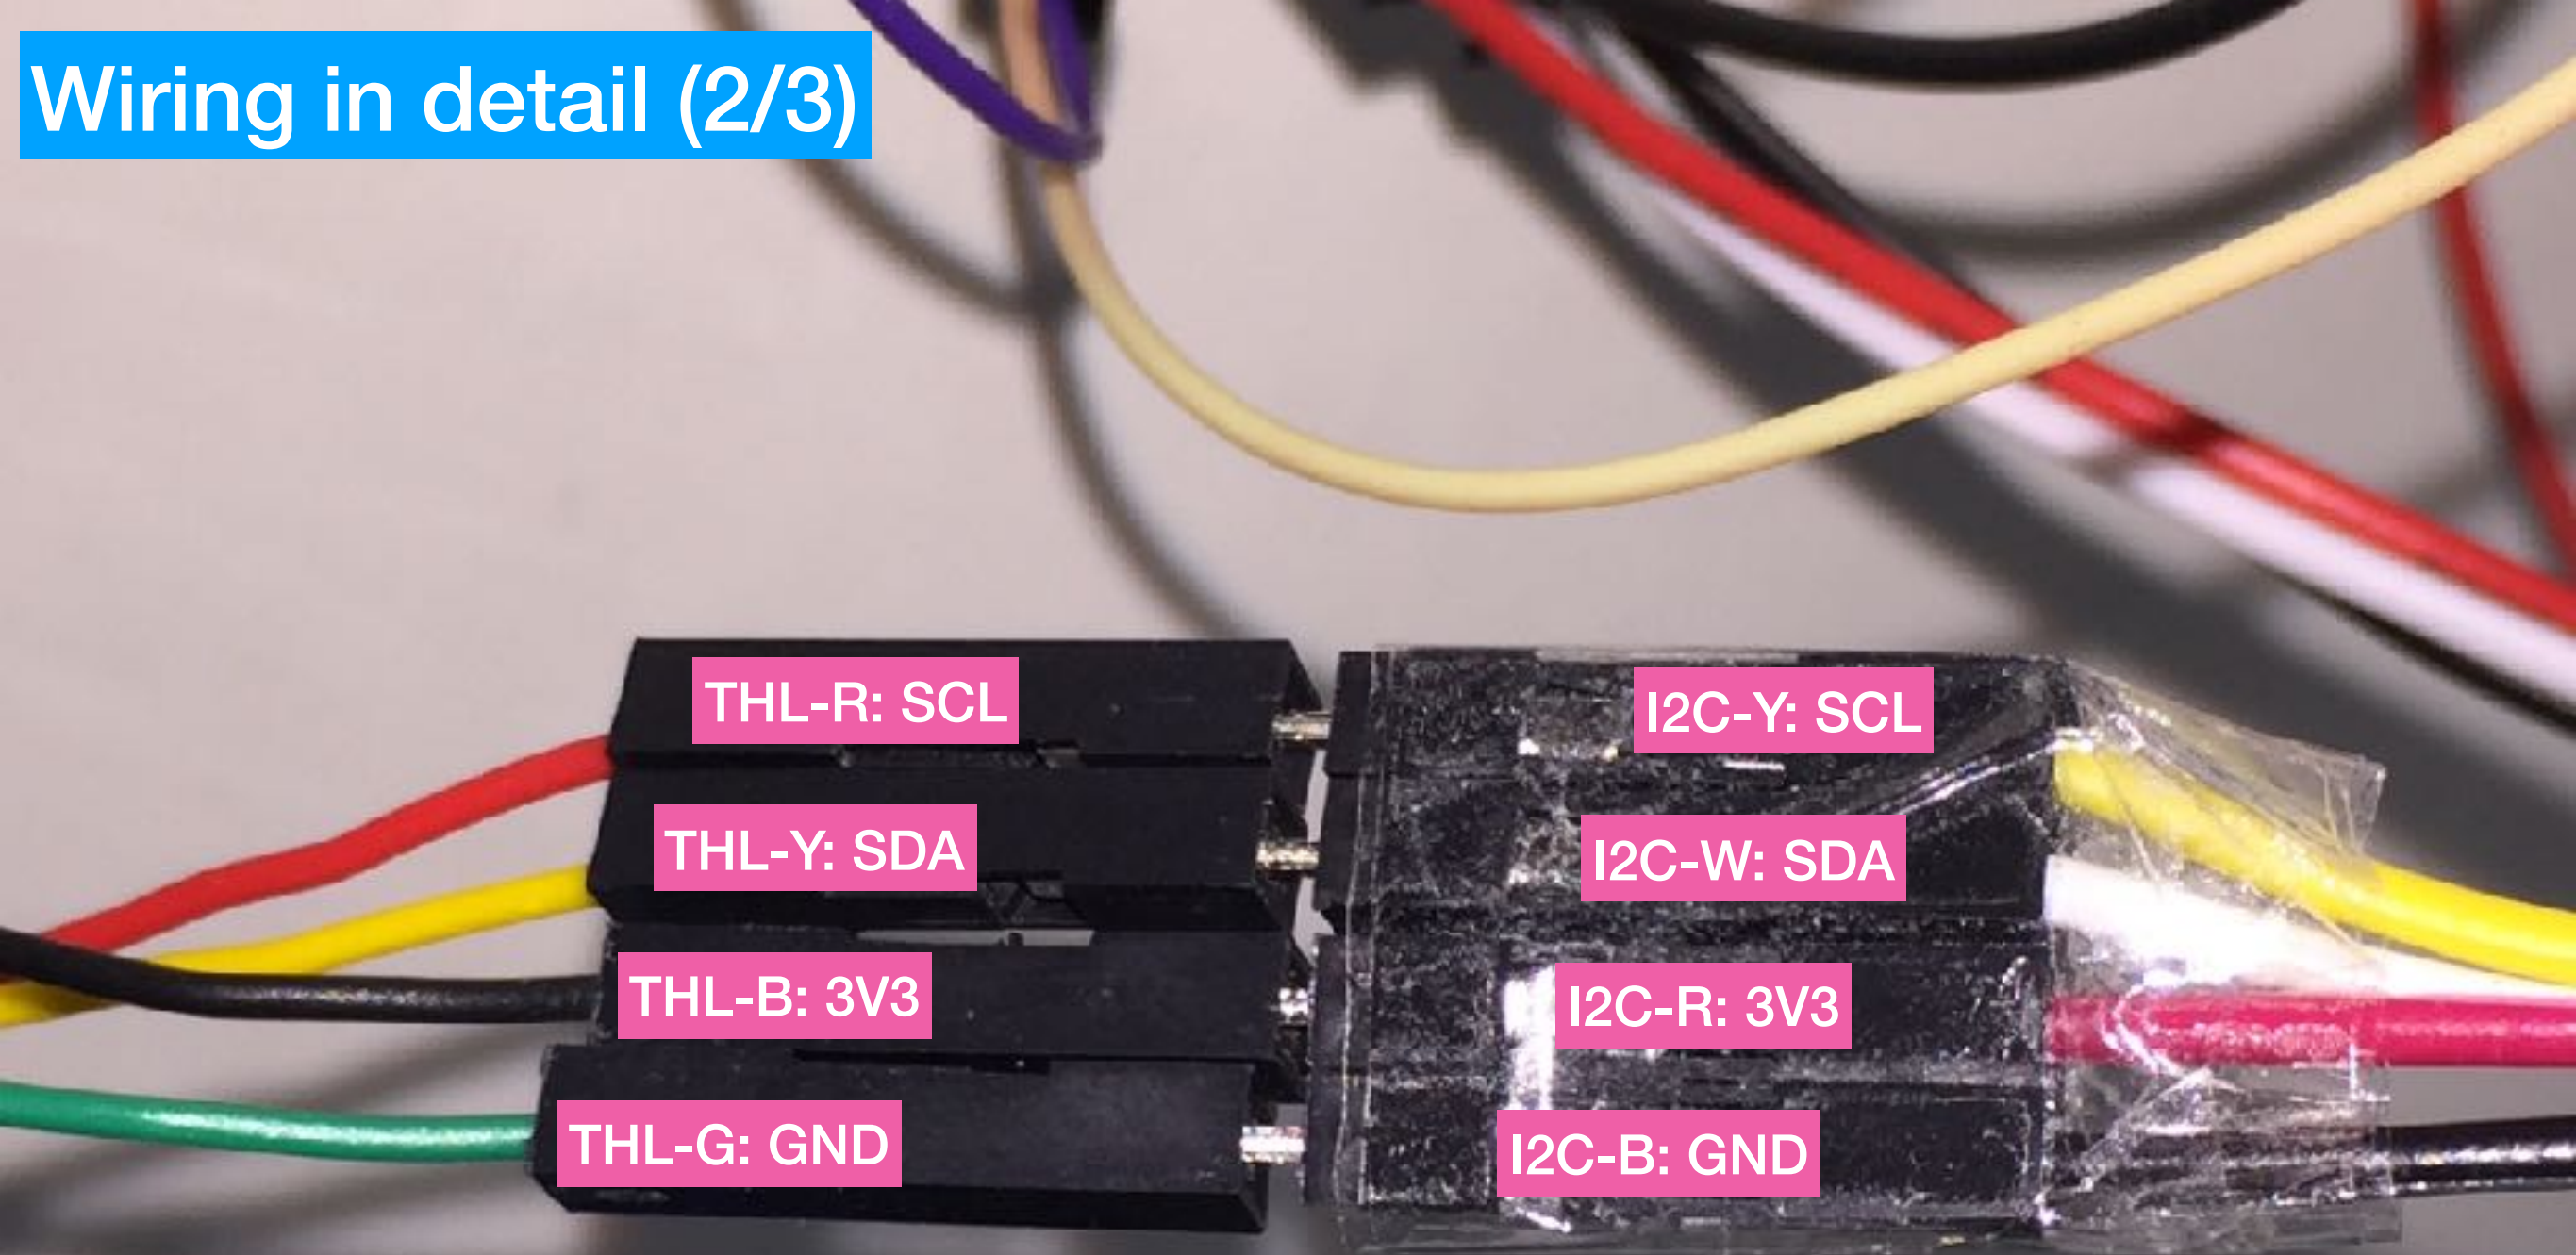

# Wiring in detail (3/3)

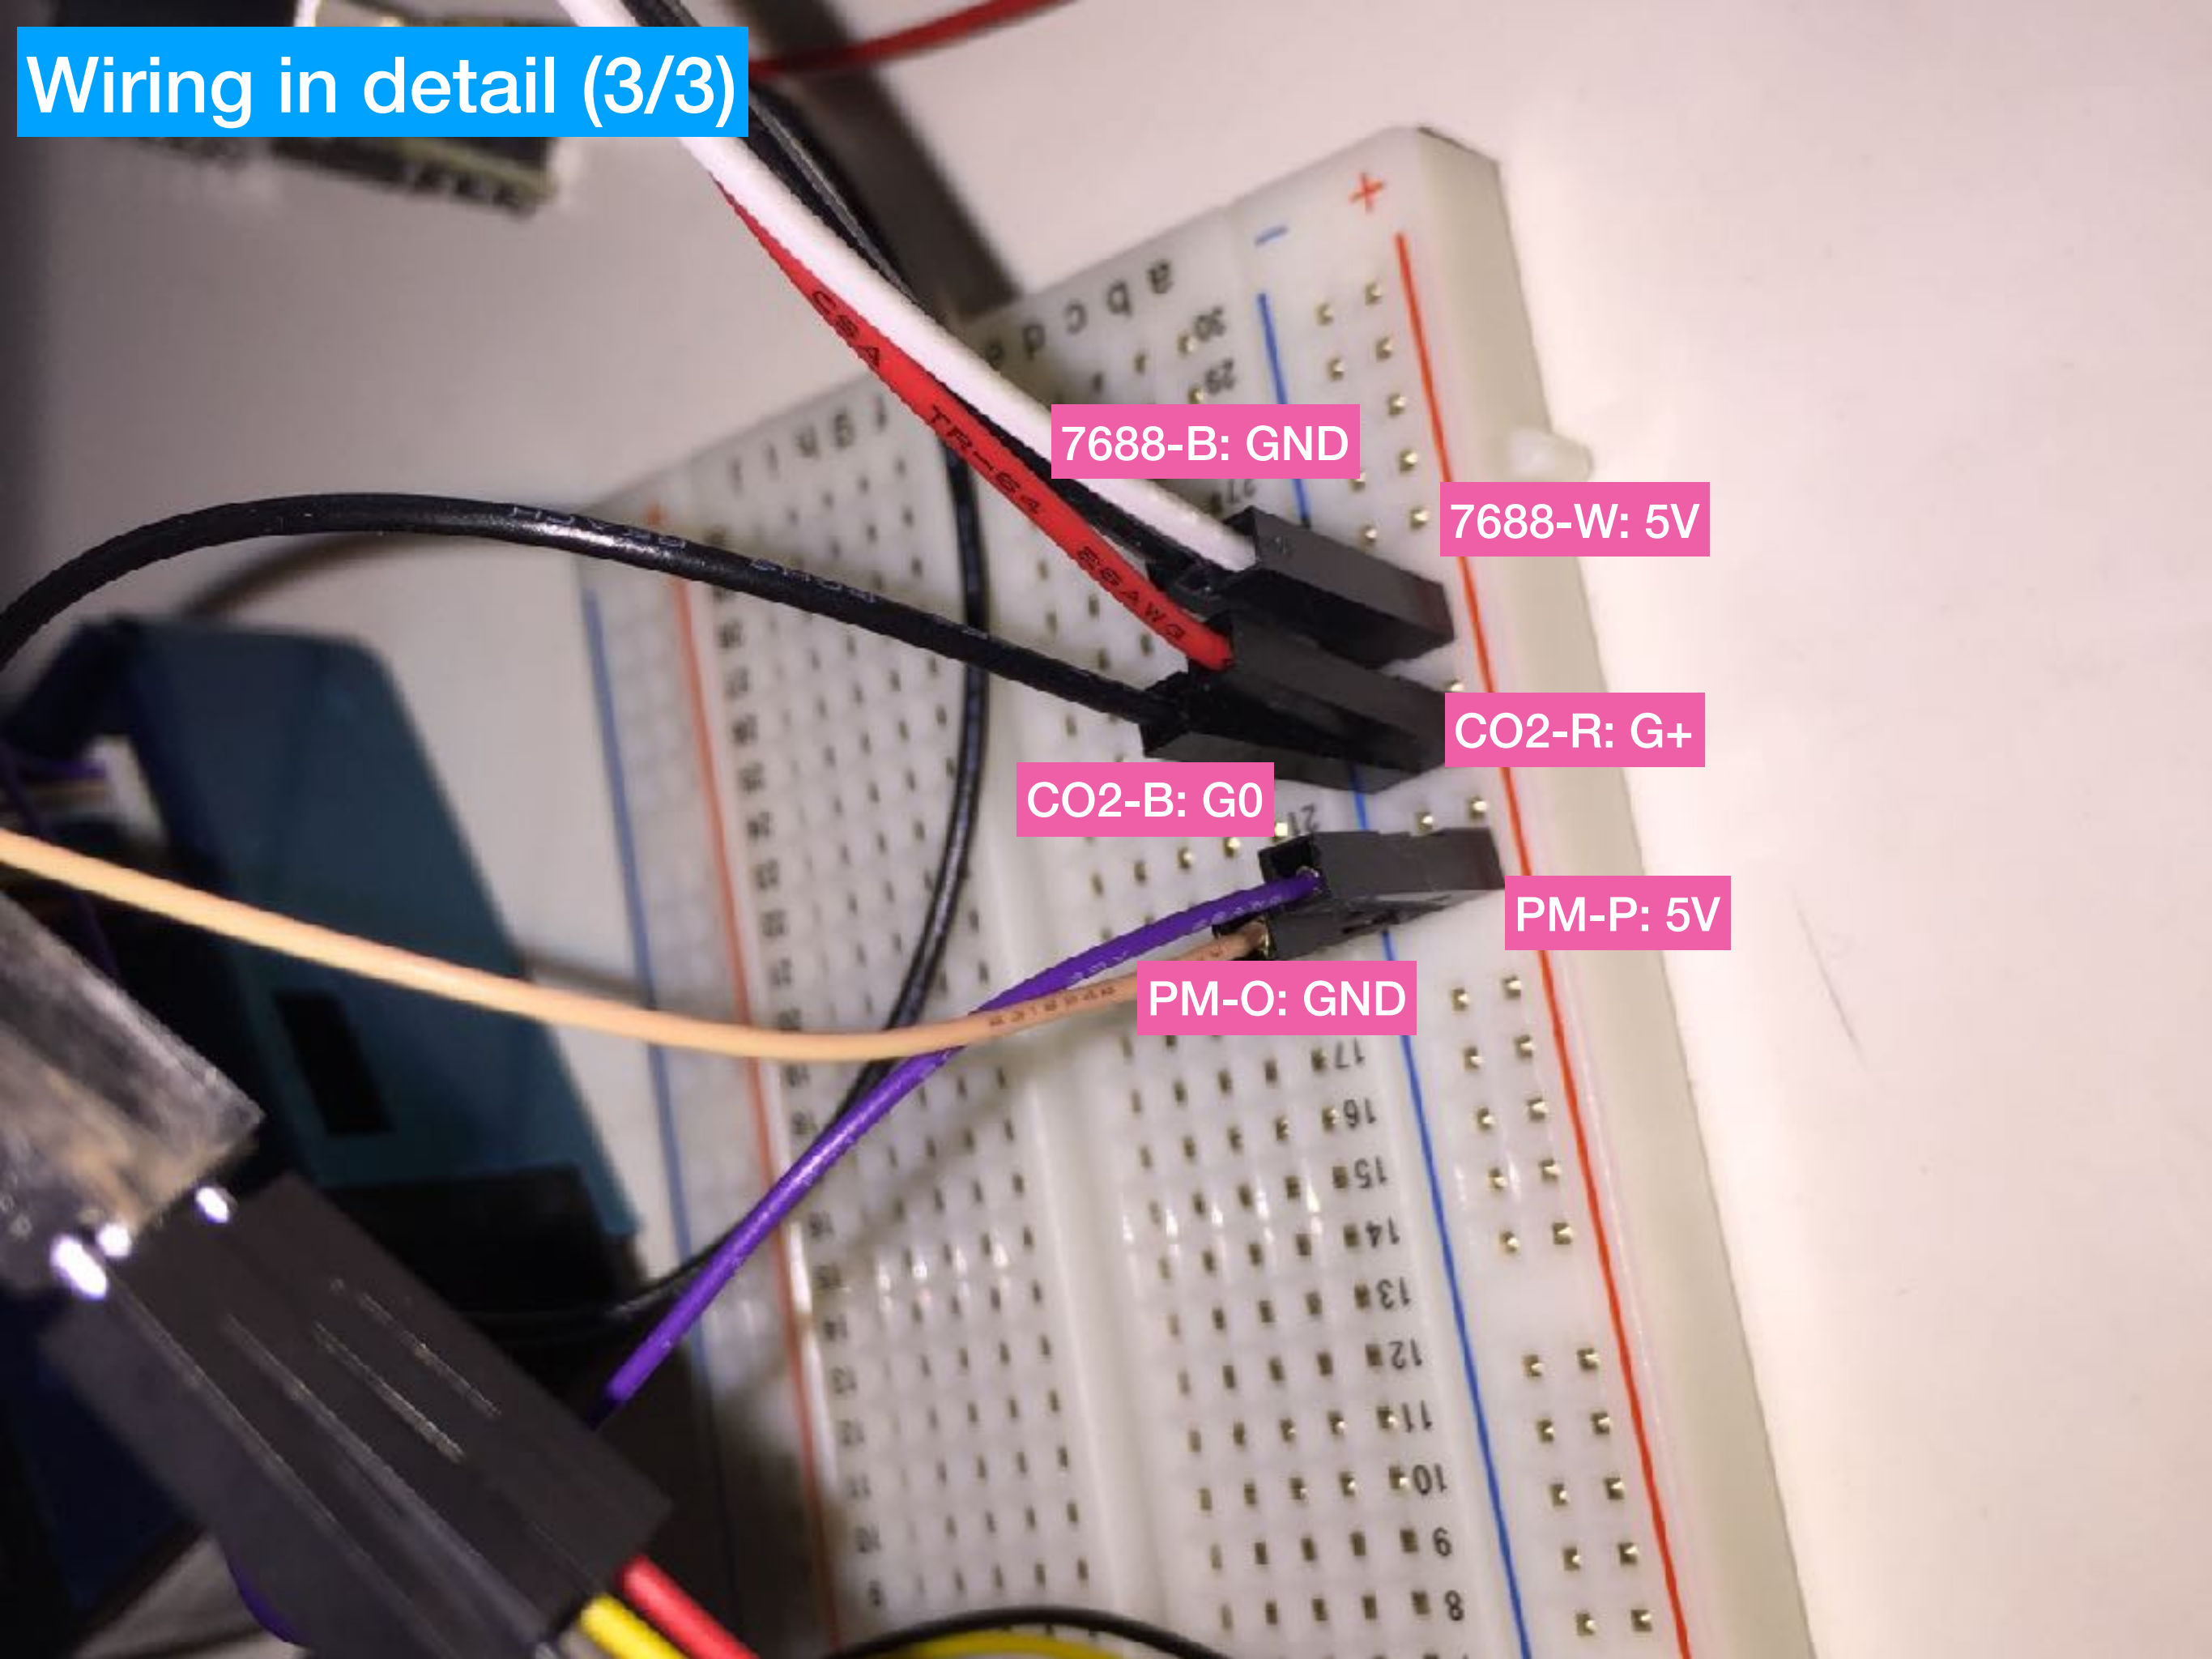

7688-B: GND

7688-W: 5V

CO2-R: G+

CO2-B: G0

PM-P: 5V

PM-O: GND