



User Guide

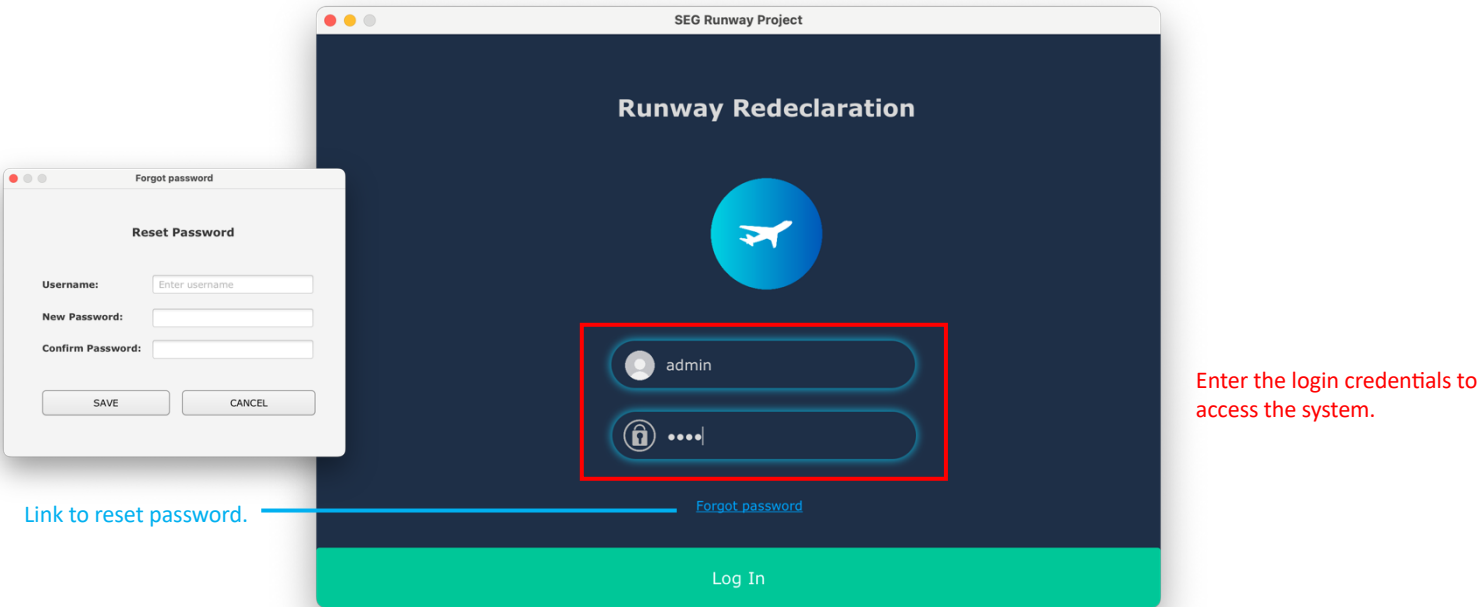

- Menu bar
- File : Export details, Logout
  - Go : Navigate to other interfaces (Airport Manager and User Manager)
  - Tools : Reset system or view, switch between visualization tabs, view calculation breakdown and notification history
  - Info : System information such as project definition, user guide and copyright information
  - View : Switch color theme (color blind), interact with visualization (rotate or zoom)

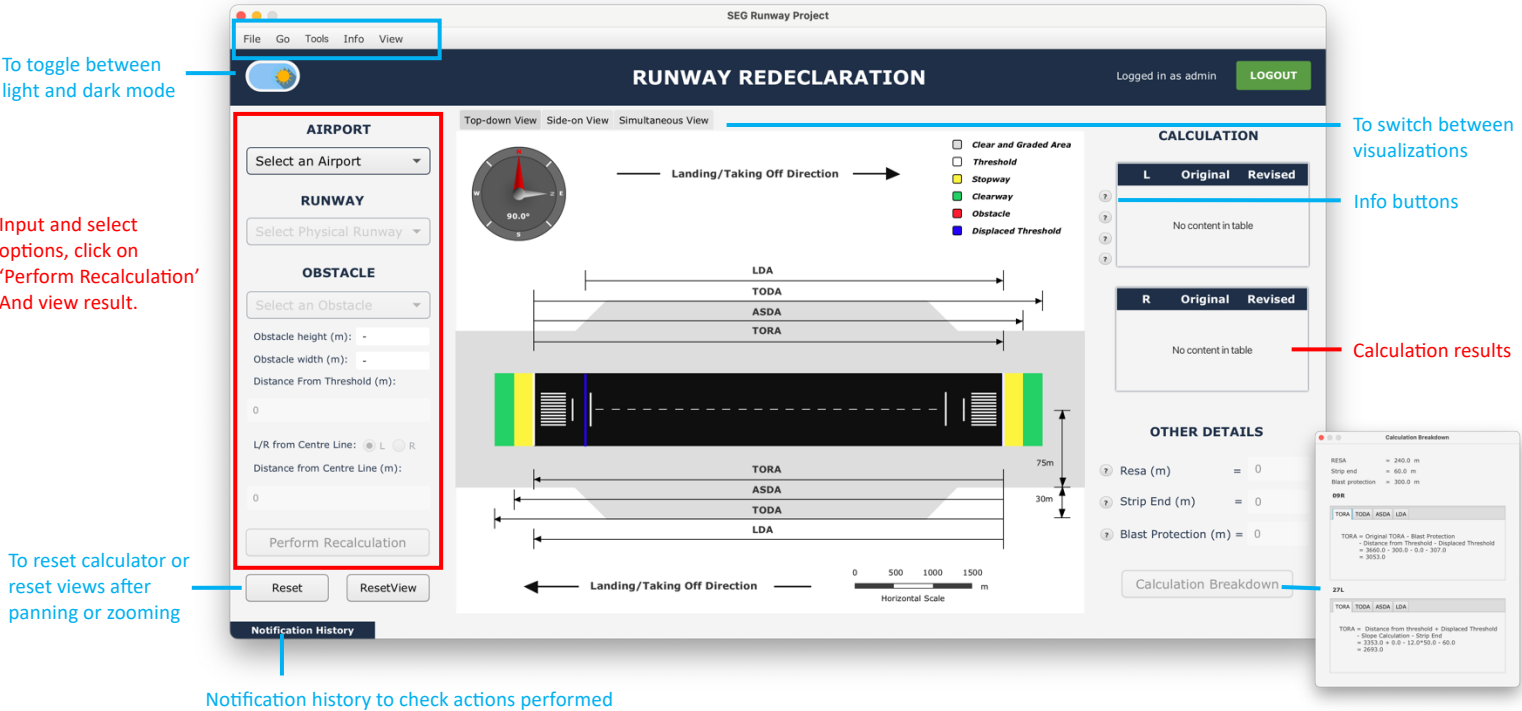

Notification History	
2023-04-30 08:42:01	Status: View Reset
2023-04-30 08:42:09	Status: RESA Value Changed to 240.0
2023-04-30 08:42:09	Status: Strip End Value Changed to 60.0
2023-04-30 08:42:09	Status: Blast Protection Value Changed to 300.0
2023-04-30 08:42:09	Status: Calculation performed

Select an airport in the table to view its details

Select an airport in the table to edit details

Export airport details as TXT or XML files

Cancel and discard all changes



## **Frequently asked questions**

**Q: Why am I not able to access the airport manager or user manager ?**

A: We have implemented access control so that some users have limited access to functionalities like airport manager and user manager. If you do not have access to those two features, it is most likely that you are logged in as normal user who only has access to the calculator.