

Installing USB Drivers for CP210x

This document shows how to install driver for the USB-RS232 module.

Step #1: Install Driver

Locate the driver on CDROM in USB Drivers Folder


Install a driver according to your operating system

Windows 2000, XP Driver Win98SE driver



Step #2: Plug in your USB Module to PC

Note: This LED will glow only after successful driver installation

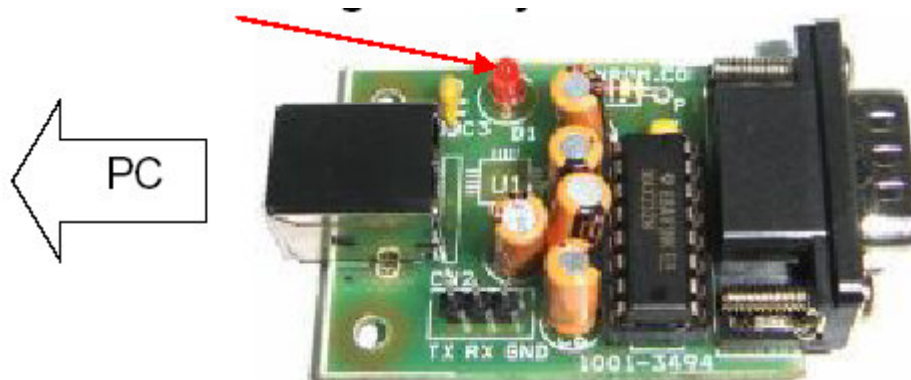

Step #3: Install Hardware Driver

The found new hardware popup will be shown



Step #3: Install Hardware Driver


Install the driver from your CD



After finishing The installation LED will glow

Checking for COM port

To check where driver is install right click My Computer > Properties>Device Manager
As shown

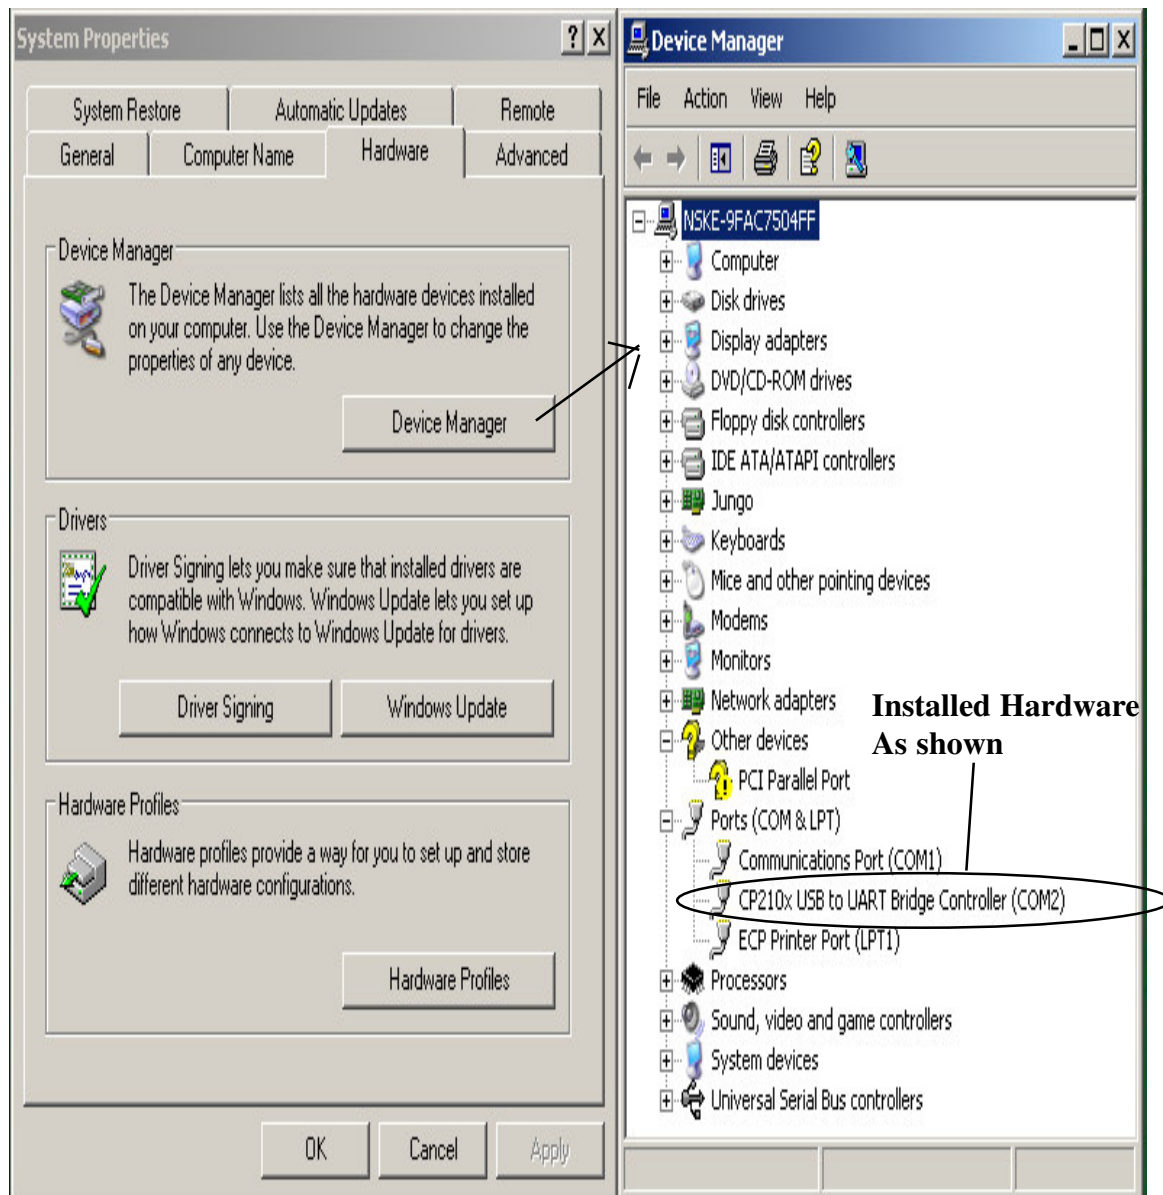



Contact information

For additional information, please visit <http://www.nskelectronics.com>

For sales office addresses, send e-mail to: info@nskelectronics.com

NSK Electronics

No 66/3 , Sabari Complex

S.P. Road , Bangalore - 560 002

Karnataka , India

PH NO : 91- 080 - 41575115 , 22892194

Mobile : 09945263589,09448937489