


Check you have everything



1. Device to program

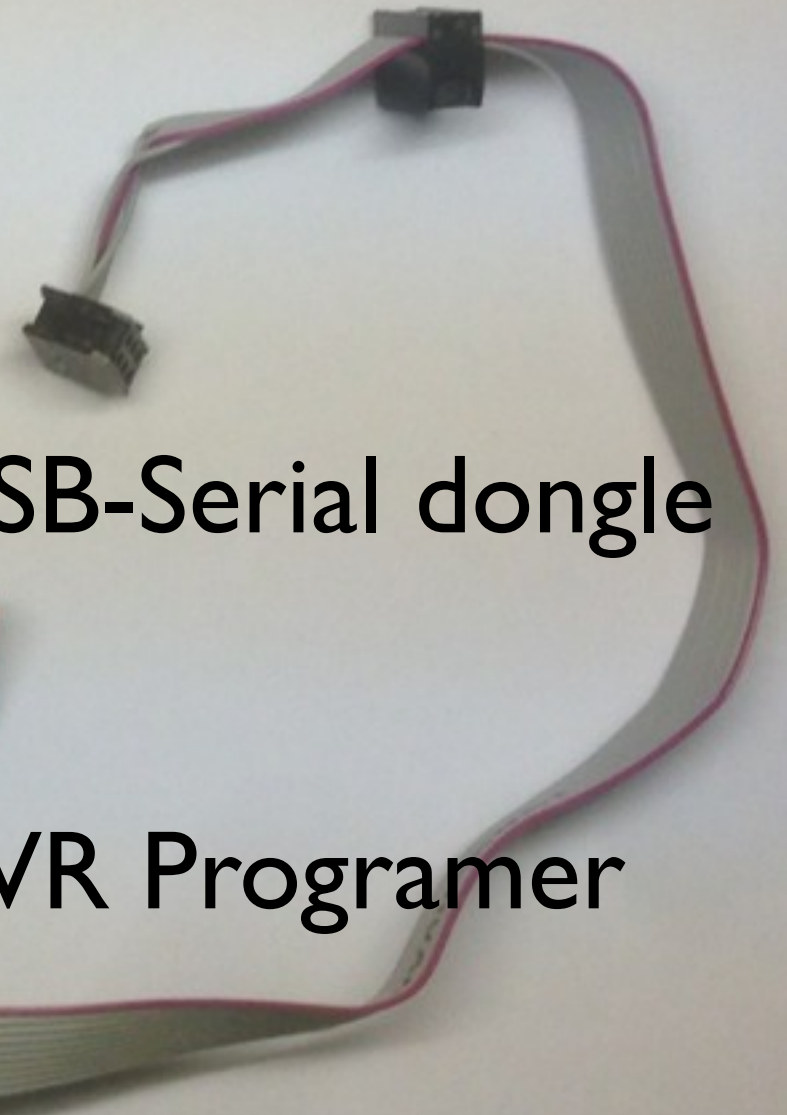

2. USB-Serial dongle

3. AVR Programmer

