

Normal mode



Key	Strip turned on	Strip turned off
1	Brightness +	-
2	Brightness -	-
3	Off	-
4	Settings mode (press twice in 5secs)	On
5-11	Change color (Static or Pulse)	-
13-14		
17-19		
21-23		
12	Change music effect	-
15	Change color to custom one	-
16	Change replication amount	-
20	Change strip selection	-
24	Change smooth effect color	-

Turning off causes saving settings on EEPROM. (Only 100,000 write cycles!)

Settings mode



Key	Strip turned on
1	Backlight maximum +
2	Backlight maximum -
3	Off (and leave settings mode)
4	Leave settings mode
5-11	Change backlight color 8 = warm white
13-14	
17-19	
21-23	
12	Show colors by fading through spectrum*
16	Toggle keystroke showing (green flash)
20	Toggle 'shiftOneRight'
24	Reset all settings to defaults

*

Key	Strip turned on
1 or 2	Save current color as backlight color
12	Save current color as custom color
Other	Return to settings mode