


9

Circuit break panel 1st Row all in

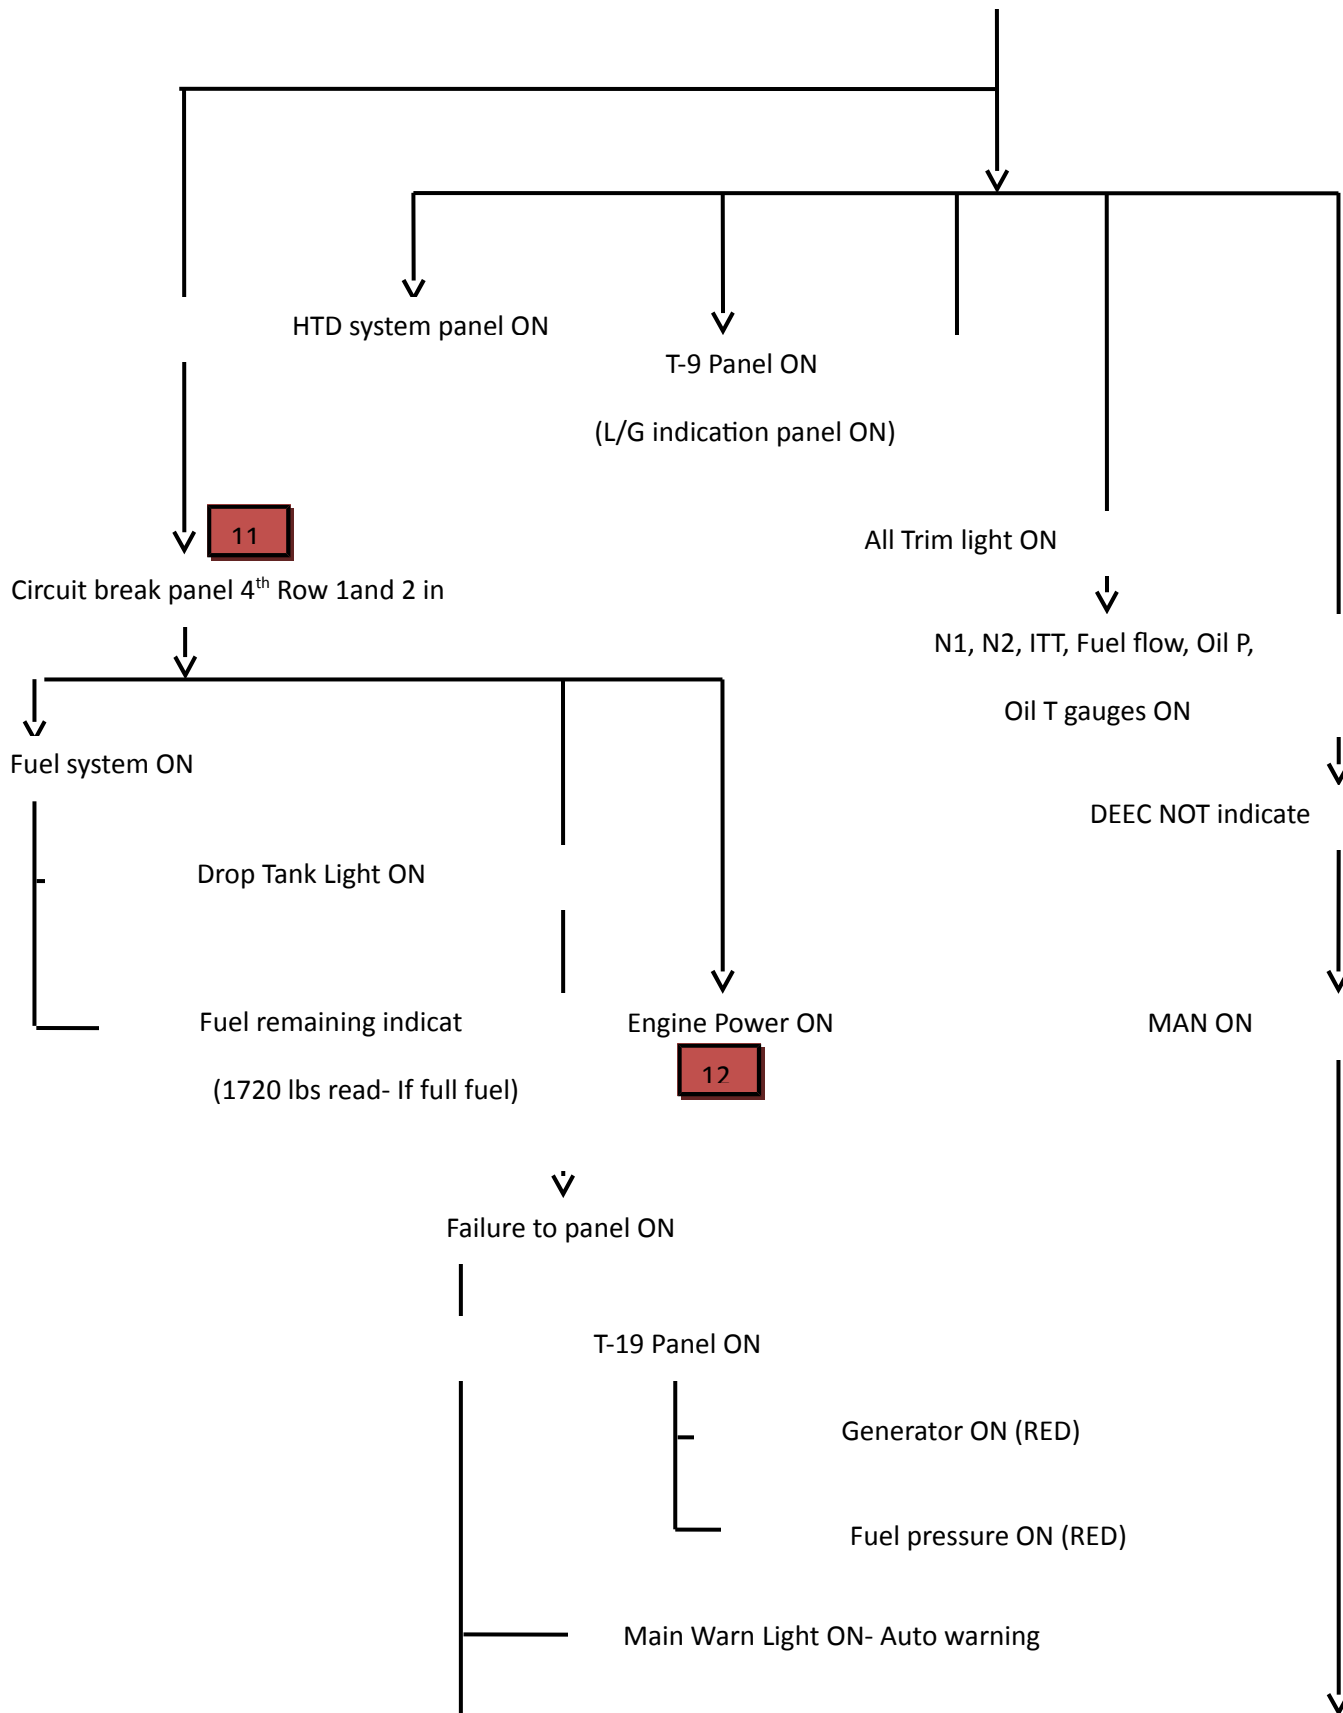

11

Circuit break panel 4th Row 1 and 2 in

Fuel system ON

Drop Tank Light ON

Fuel remaining indicat
(1720 lbs read- If full fuel)

Engine Power ON

12

▼


Failure to panel ON

T-19 Panel ON

Generator ON (RED)

Fuel pressure ON (RED)

Main Warn Light ON- Auto warning

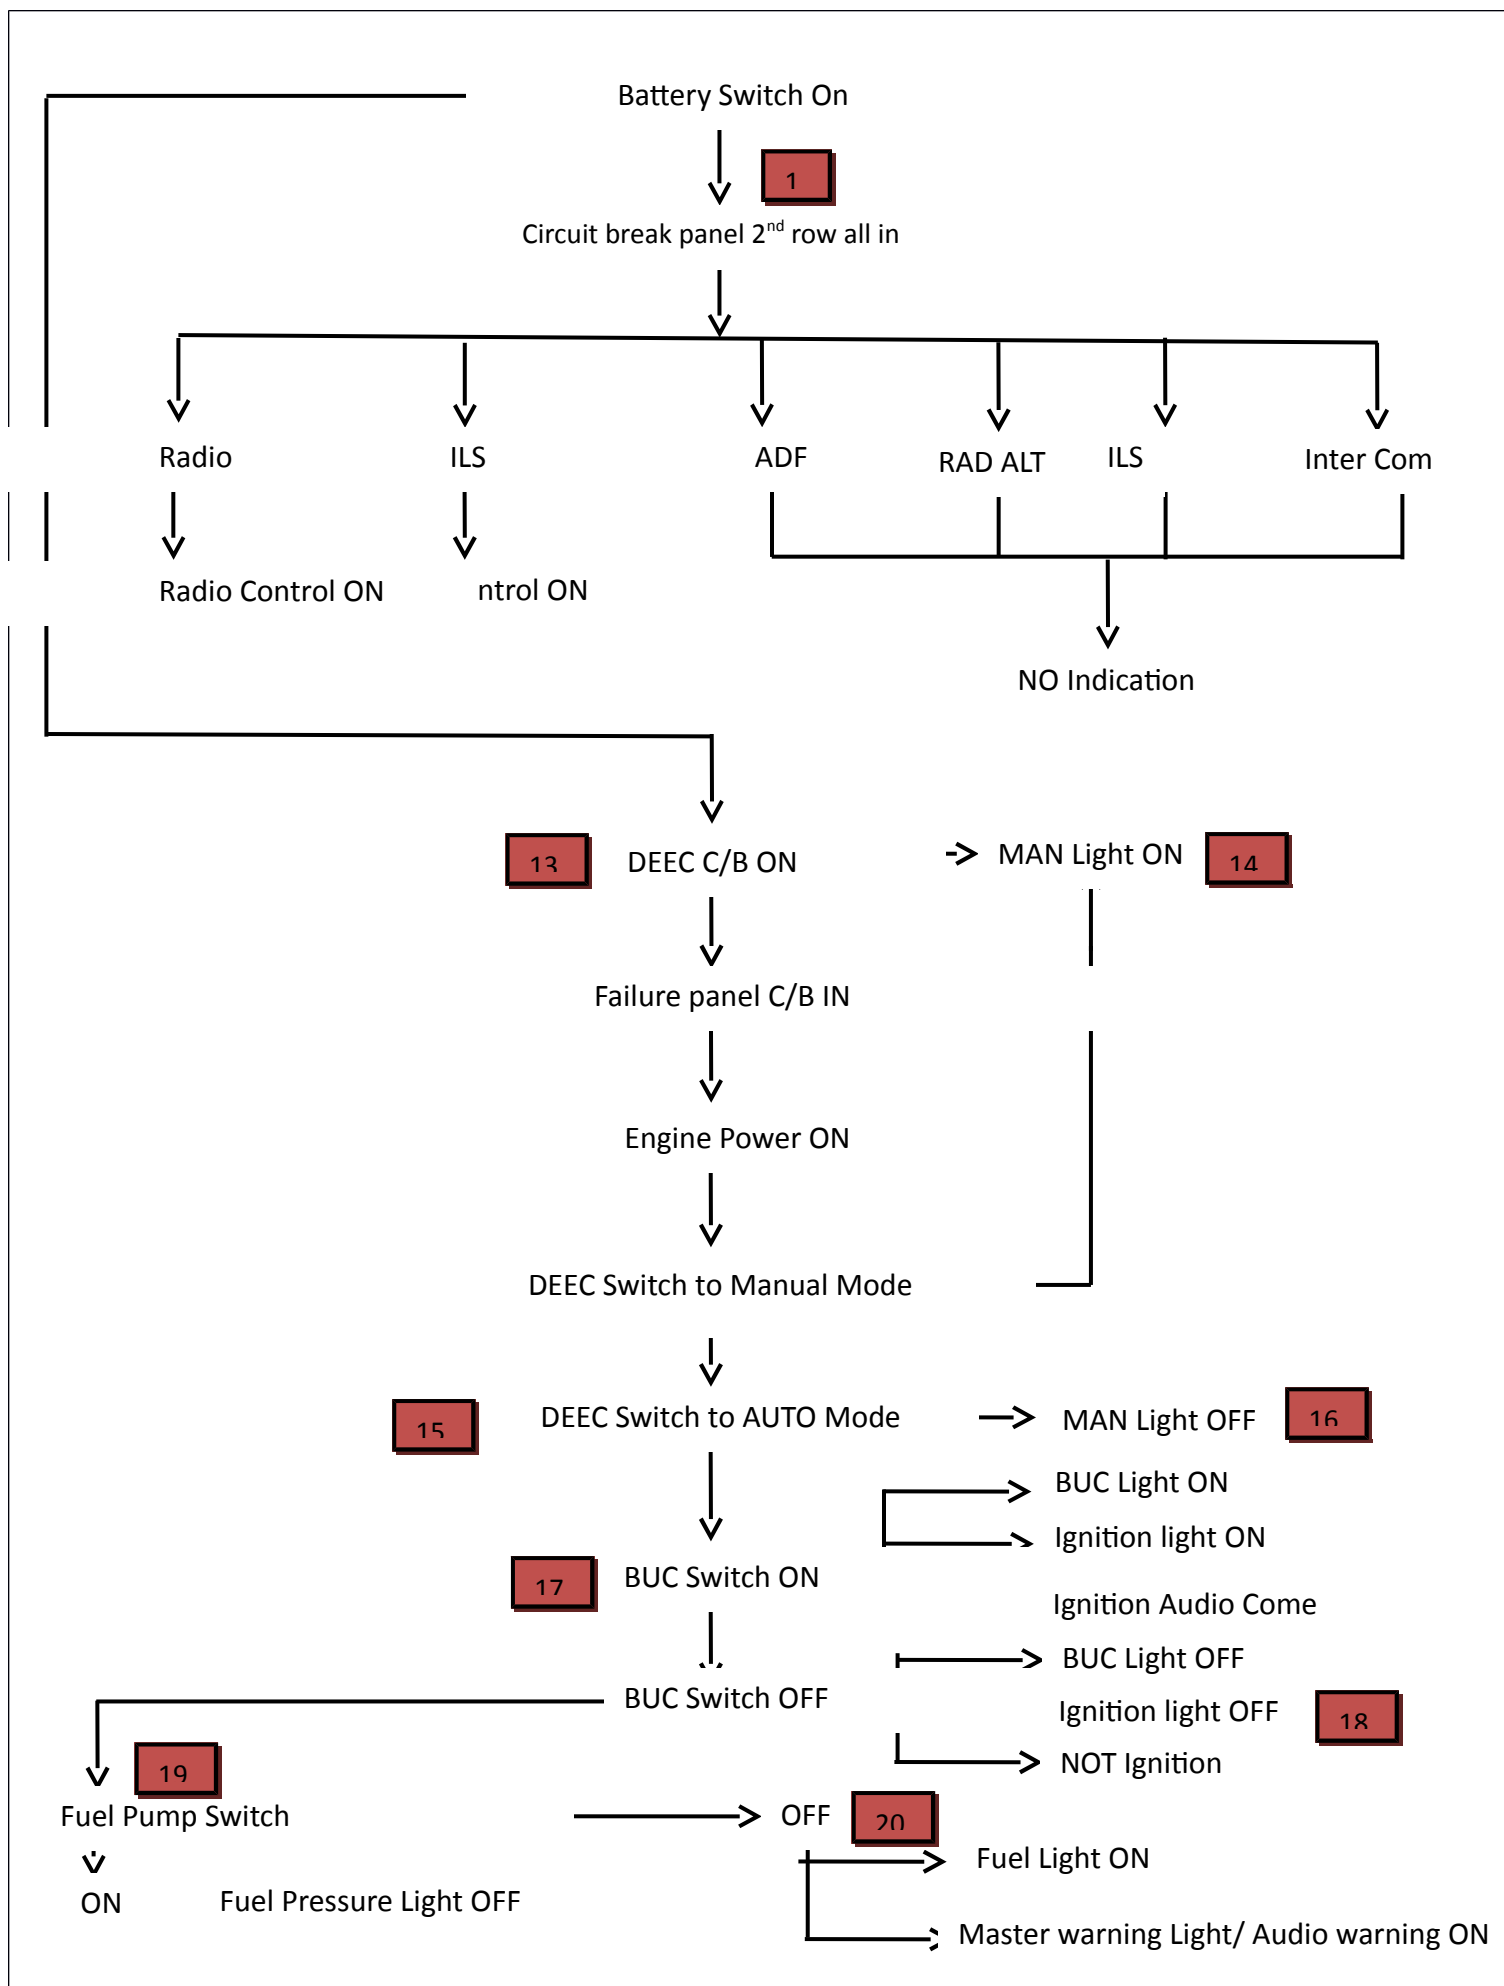

These steps to be completed before go to step 21

Battery Switch ON



Fire Switch ON



Engine power switch ON



Failure panel C/B IN



Main warn light ON

Audio warning

21

Fire and overheat warning Switch forward

- OHW Light ON (T-19 PANEL)
- Fire Light ON
- Master Caution light ON
- Audio warning

22

Fire and overheat warning Switch backward

- Fire Light ON
- Fire- Fail Light ON
- Master caution light on
- Audio Warning

23

Fire and overheat warning switch neutral

Fire Light OFF

Fire Fail Light OFF / Master caution OFF

Battery Switch ON

