


iXpand Drive - Quick Start Guide

Take photos / videos and save to iXpand Drive directly. No need to worry about space on your phone!

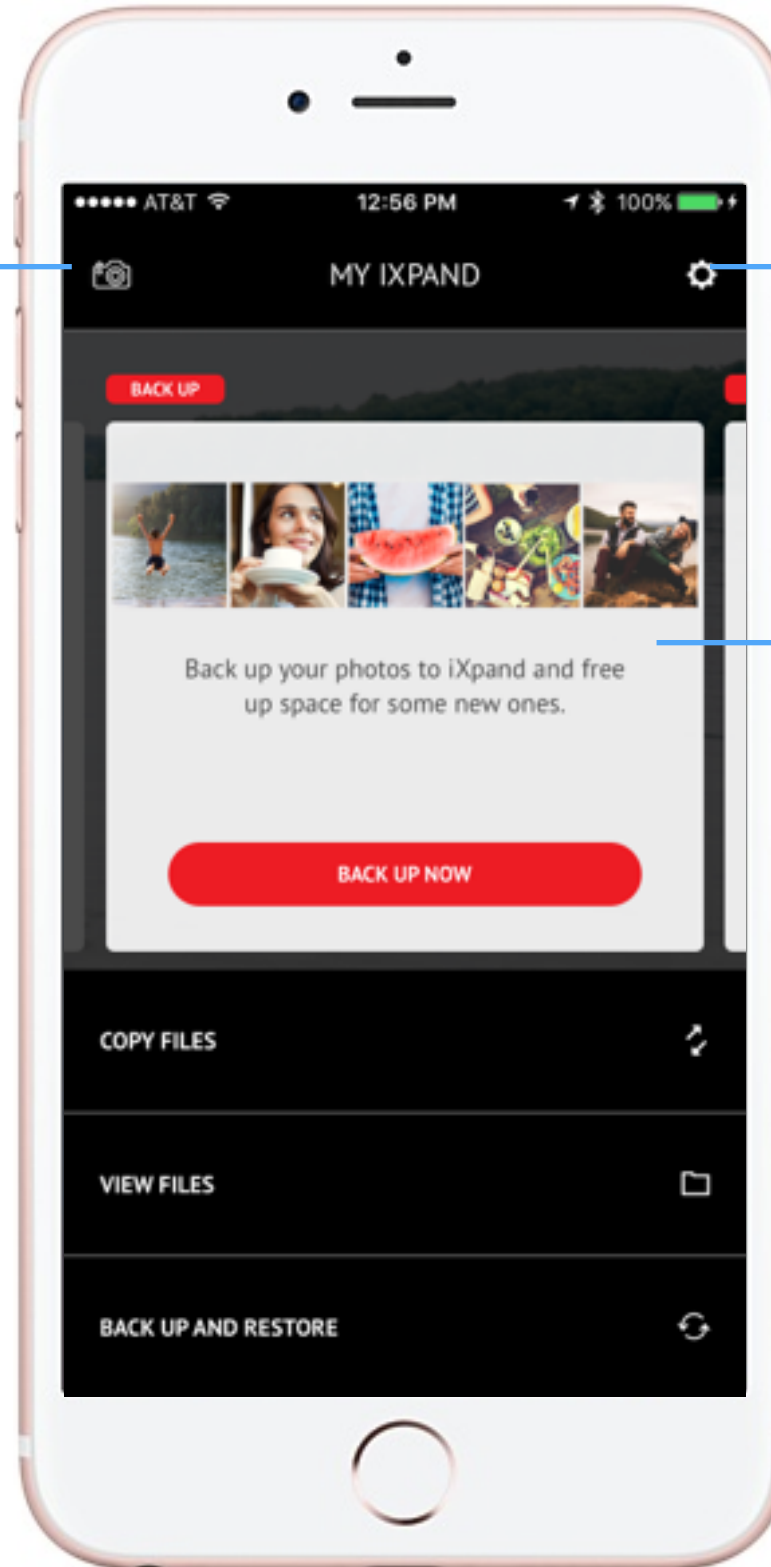

Click App Settings for more help and to customize your Drive

Quick Action Cards - is a shortcut to get to most frequently features like Backup. *Swipe up to delete a card.*

Home screen menu. Select an option to proceed to next step

iXpand Drive - Quick Start Guide

