

Port settings

Baud rate	data bits	stop bits	Parity	Flow
9600	8	1	None	None

Notes:

/E. initialization command breaks communication -> turn off and on
if commands work, but no response -> /E. -> turn off and on again

For other commands refer to the PW2102 manual

Data is in hex and some symbols have a custom ascii character which can be
found in the manual

Command structure:

"/" + Command + parameter + data + "."

Type	Command + parameter	Example	Outcome
DC offset	/DD	/DD800.	0
Duty cycle	/DC	/DC00.	93.5
Output level	/DB	/DB>40.	20
CMOS level	/DG	/DG1<.	14
Frequency value	/DK or /D+	/DK0708.	1.8 in current range
Frequency range	/G0	/G06.	2MHz range