

Medtronic

CoreValve™ Evolut™ PRO System

CoreValve™ Evolut™ PRO Transcatheter Aortic Valve Delivery Catheter System Loading System

Caution: Implantation of the Medtronic CoreValve™ Evolut™ PRO system should be performed only by physicians who have received Medtronic CoreValve™ Evolut™ PRO training.
























These devices are supplied sterile for single use only. After use, dispose of the delivery catheter system and the loading system in accordance with local regulations and hospital procedures. Do not resterilize.

Instructions for Use

Caution: Federal (USA) law restricts this device to sale by or on the order of a physician.

Medtronic and Medtronic logo are trademarks of Medtronic. ^{TM*} Third-party brands are trademarks of their respective owners. All other brands are trademarks of a Medtronic company.

Explanation of symbols on package labeling

	Use by
	Consult instructions for use at this website
	Do not reuse
	Do not re sterilize
	Size
	Serial number
	Sterile LC: Device has been sterilized using liquid chemical sterilants according to EN/ISO 14160.
	Catalog number
	Lower limit of temperature
	Quantity
	Lot number
	Sterilized using ethylene oxide
	Nonpyrogenic
	MR Conditional
	Do not use if package is damaged
	Manufacturer
	Date of manufacture
	Model
	For US audiences only
	Keep dry
	Keep away from sunlight
	Manufactured in
	Maximum guidewire diameter

1.0 Device description

The Medtronic CoreValve™ Evolut™ PRO system is a recapturable transcatheter aortic valve replacement system, which includes the CoreValve Evolut PRO transcatheter aortic valve (bioprosthesis)^a, the delivery catheter system (catheter), and the loading system (LS).

1.1 CoreValve Evolut PRO transcatheter aortic valve (bioprosthesis)



Figure 1: 23 mm bioprosthesis



Figure 2: 26 mm bioprosthesis



Figure 3: 29 mm bioprosthesis

The bioprosthesis is manufactured by suturing 3 valve leaflets and an inner skirt, made from a single layer of porcine pericardium, onto a self-expanding, multi-level, radiopaque frame made of Nitinol. The bioprosthesis has a porcine pericardial tissue outer skirt (wrap), which is 1.5 cells in height and is sutured to the inflow section of the bioprosthesis. It is designed to replace the native or surgical bioprosthetic aortic heart valve without open heart surgery and without concomitant surgical removal of the failed valve.

The bioprosthesis is processed with alpha-amino oleic acid (AOA™), which is a compound derived from oleic acid, a naturally occurring long-chain fatty acid. The bioprosthesis is available for a range of aortic annulus diameters (Table 1).

Table 1: Patient anatomical criteria

Bioprosthesis model	Size	Aortic annulus diameter	Aortic annulus perimeter ($\pi \times$ aortic annulus diameter)
EVOLUTPRO-23-US	23 mm	17 ^b /18 mm to 20 mm	53.4 ^c /56.5 mm to 62.8 mm
EVOLUTPRO-26-US	26 mm	20 mm to 23 mm	62.8 mm to 72.3 mm
EVOLUTPRO-29-US	29 mm	23 mm to 26 mm	72.3 mm to 81.7 mm

1.2 Delivery catheter system (catheter)

The catheter comes in different models: the EnVeo™ PRO catheter (Model ENVPRO-16-US) and the EnVeo™ R catheter (Model ENVEOR-N-US).

^a The terms “bioprosthesis” and “transcatheter aortic valve” are synonymous terms and are used interchangeably throughout the document to refer to the CoreValve Evolut PRO device.

^b Diameter for surgical aortic valve (SAV)

^c 53.4 mm for surgical bioprosthetic aortic annulus

The catheter facilitates the placement of the bioprosthesis within the annulus of the aortic valve. The catheter assembly is flexible and compatible with a 0.035 in (0.889 mm) guidewire. The distal (deployment) end of the system features an atraumatic, radiopaque catheter tip and a capsule that covers and maintains the bioprosthesis in a crimped position. The capsule includes a distal flare to enable the bioprosthesis to be partially or fully recaptured after partial deployment. A stability layer is fixed at the handle and extends down the outside of the catheter shaft. It provides a barrier between the retractable catheter and the introducer sheath and vessel walls, thus enabling the catheter to retract freely. An EnVeo inline sheath is assembled over the stability layer, which functions as a hemostatic introducer sheath and minimizes the access site size to the capsule diameter. The catheter is compatible with a 20 Fr (6.7 mm) introducer sheath.

The delivery catheter system consists of a catheter with an integrated handle to provide the user with accurate and controlled deployment. The handle is on the proximal end of the catheter and is used to load, deploy, recapture, and reposition the bioprosthesis. The handle features a gray front grip used to stabilize the system. The deployment knob turns to deploy the bioprosthesis precisely. Arrows on the deployment knob indicate the direction of rotation required to deploy the bioprosthesis. If desired, the deployment knob can be turned in the opposite direction to partially or fully recapture the bioprosthesis if the radiopaque capsule marker band has not yet reached the distal end of the radiopaque paddle attachment. Once the radiopaque capsule marker band reaches the distal end of the radiopaque paddle attachment, it is at the point of no recapture. The deployment knob also features a trigger, which can be engaged to make macro adjustments to the capsule position. A blue hand rest connects to the deployment knob. The end of the handle features a tip-retrieval mechanism, which can be used to withdraw the catheter tip to meet the capsule after the device has been fully deployed.

The catheter packaging contains an integrated loading bath and a removable tray with 3 rinsing bowls for loading and rinsing the bioprosthesis. The integrated loading bath features a mirror, which aids in accurate placement of the bioprosthesis frame paddles during loading. In addition to these features, the device packaging is swiveled and secured to facilitate the bioprosthesis loading procedure.

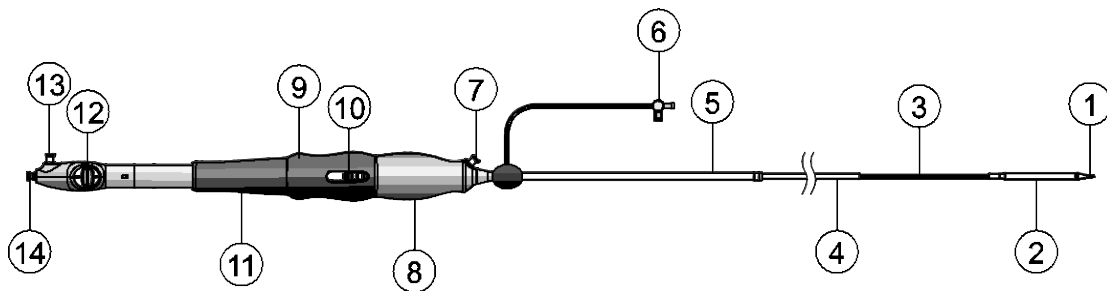


Figure 4: Catheter

1. Catheter tip
2. Capsule (20 Fr [6.7 mm] outer diameter [OD])
3. Catheter shaft
4. Stability layer

5. 16 Fr equivalent EnVeo inline sheath (20 Fr [6.7 mm] OD)
6. EnVeo inline sheath flush port
7. Stability layer flush port
8. Gray front grip
9. Deployment knob
10. Trigger
11. Blue hand rest
12. Tip-retrieval mechanism
13. Capsule flush port
14. Wire lumen flush port

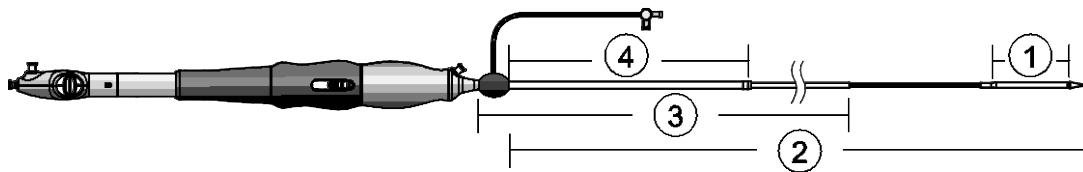


Figure 5: Catheter

1. 7.7 cm
2. 107 cm
3. 88.6 cm
4. 30 cm

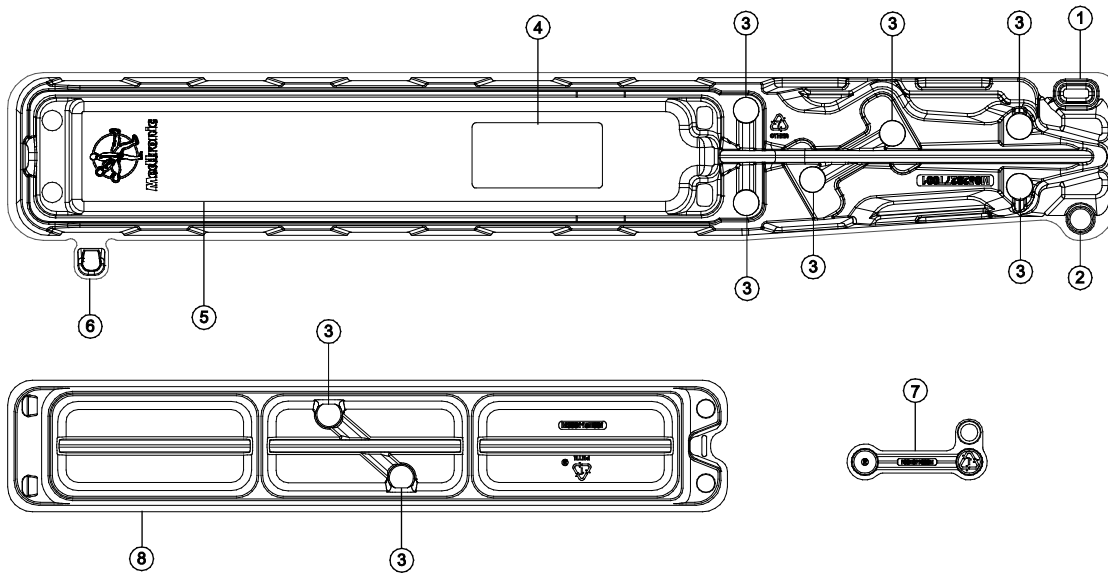


Figure 6: Catheter distal tray

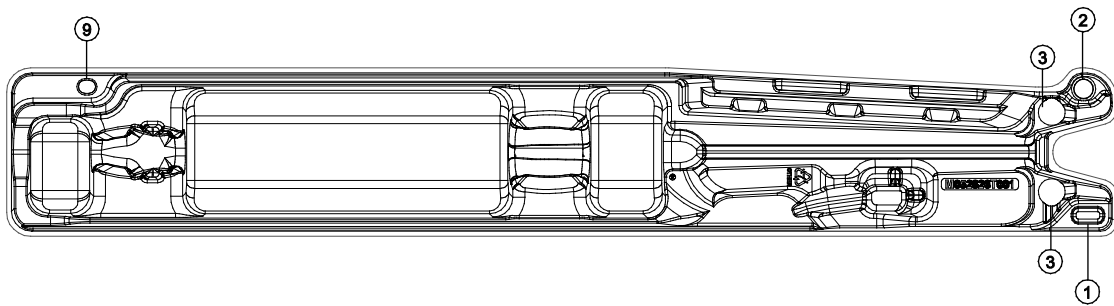


Figure 7: Catheter proximal tray

1. Tray connector
2. Swivel hinge
3. Clip holder
4. Mirror
5. Integrated loading bath
6. Tray tab
7. Locking clip
8. Rinsing bowls
9. Tray tab holder

1.3 Loading system (LS)

The LS compresses the bioprosthesis into the catheter. The LS comes in different models: the EnVeo PRO LS (Models L-ENVPRO-1623US and L-ENVPRO-16-US) and the EnVeo R LS (Models LS-MDT2-23-US and LS-MDT2-2629-US).

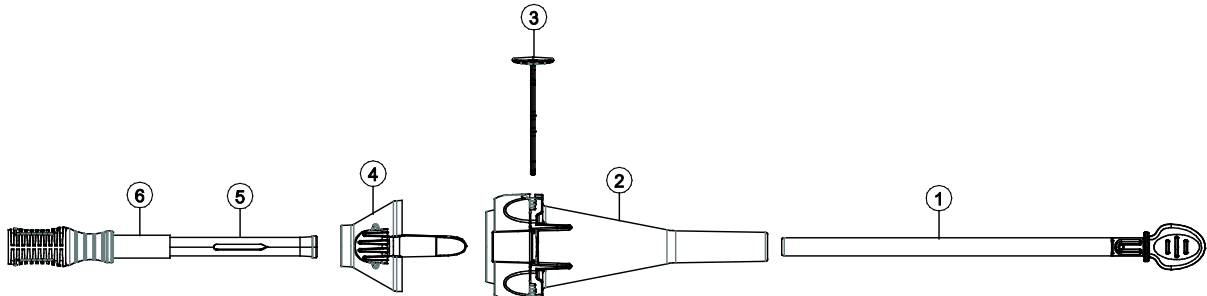


Figure 8: EnVeo PRO LS

1. Catheter tip guide tube
2. Inflow cone
3. Backplate
4. Outflow cone
5. Capsule guide tube
6. Locking collar

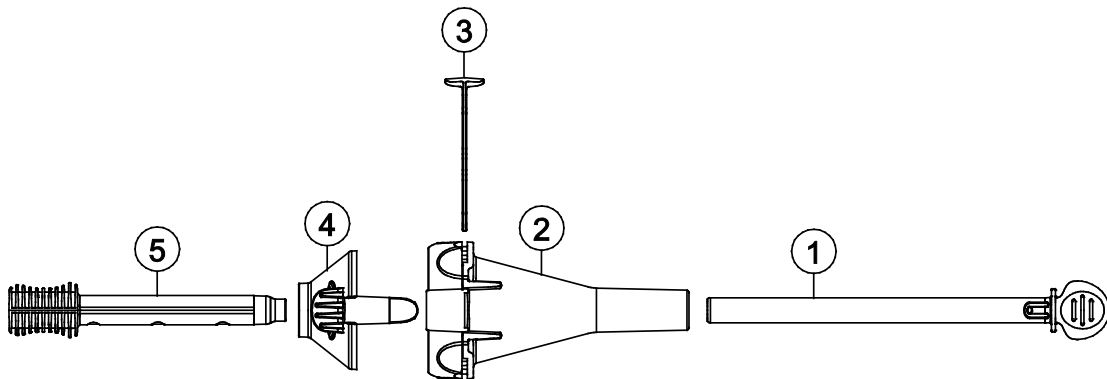


Figure 9: EnVeo R LS

1. Catheter tip guide tube
2. Inflow cone
3. Backplate
4. Outflow cone
5. Capsule guide tube

Refer to Table 2 for system compatibility.

Table 2: System compatibility

Bioprosthesis model	Compatible LS models	Compatible catheter models
EVOLUTPRO-23-US	L-ENVPRO-1623US LS-MDT2-23-US	ENVPRO-16-US ENVEOR-N-US
EVOLUTPRO-26-US	L-ENVPRO-16-US	
EVOLUTPRO-29-US	LS-MDT2-2629-US	

2.0 Indications

The Medtronic CoreValve Evolut PRO system is indicated for relief of aortic stenosis in patients with symptomatic heart disease due to severe native calcific aortic stenosis who are judged by a heart team, including a cardiac surgeon, to be appropriate for the transcatheter heart valve replacement therapy.

The Medtronic CoreValve Evolut PRO system is indicated for use in patients with symptomatic heart disease due to failure (stenosed, insufficient, or combined) of a surgical bioprosthetic aortic valve who are judged by a heart team, including a cardiac surgeon, to be at high or greater risk for open surgical therapy (i.e., STS predicted risk of operative mortality score $\geq 8\%$ or at a $\geq 15\%$ risk of mortality at 30 days).

3.0 Contraindications

The CoreValve Evolut PRO system is contraindicated in patients who cannot tolerate Nitinol (titanium or nickel), an anticoagulation/antiplatelet regimen, or who have active bacterial endocarditis or other active infections.

4.0 Warnings and precautions

Carefully read all warnings, precautions, and instructions for use for all components of the system before use. Failure to read and follow all instructions or failure to observe all stated warnings could cause serious injury or death to the patient.

4.1 Warnings

General

- Implantation of the Medtronic CoreValve Evolut PRO system should be performed only by physicians who have received Medtronic CoreValve Evolut PRO training.
- The transcatheter aortic valve is to be used only in conjunction with the delivery catheter system and the loading system.
- System failure could occur if an incorrect combination of devices is used. Refer to Table 2 for system compatibility.
- This procedure should only be performed where emergency aortic valve surgery can be performed promptly.
- **Do not** use any of the Medtronic CoreValve Evolut PRO system components if any of the following has occurred:
 - It has been dropped, damaged, or mishandled in any way
 - The Use By date has elapsed
- Mechanical failure of the delivery catheter system and/or accessories may result in patient complications.

Transcatheter aortic valve (bioprosthesis)

- **Do not** use the bioprosthesis if any of the following conditions is observed:
 - There is any damage to the container (for example, cracked jar or lid, leakage, broken or missing seals)
 - The serial number tag does not match the container label
 - The freeze indicator in the secondary package has activated
 - The storage solution does not completely cover the bioprosthesis
- Accelerated deterioration of the bioprosthesis due to calcific degeneration may occur in:
 - Children, adolescents, or young adults
 - Patients with altered calcium metabolism (for example, chronic renal failure, or hyperparathyroidism)

4.2 Precautions

General

- **Do not** contact any of the Medtronic CoreValve Evolut PRO system components with cotton or cotton swabs.
- **Do not** expose any of the Medtronic CoreValve Evolut PRO system components to organic solvents, such as alcohol.
- **Do not** introduce air into the catheter.
- **Do not** expose the bioprosthesis to solutions other than the storage and rinse solutions.
- **Do not** add antibiotics or any other substance to either the storage or rinse solutions. **Do not** apply antibiotics or any other substance to the bioprosthesis.
- **Do not** allow the bioprosthesis to dry. Maintain tissue moisture with irrigation or immersion.
- **Do not** attempt to repair a damaged bioprosthesis.
- **Do not** handle or use forceps to manipulate the bioprosthesis leaflet tissue.
- **Do not** deform the bioprosthesis in excess of what is experienced during crimping, loading, and implantation.
- Clinical long-term durability has not been established for the bioprosthesis. Evaluate bioprosthesis performance as needed during patient follow-up.
- The safety and effectiveness of the Medtronic CoreValve Evolut PRO system have not been evaluated in the pediatric population.
- The safety and effectiveness of the bioprosthesis for aortic valve replacement have not been evaluated in the following patient populations:
 - Patients who do not meet the criteria for symptomatic severe native aortic stenosis as defined below:
 - **Symptomatic severe high-gradient aortic stenosis:** aortic valve area $\leq 1.0 \text{ cm}^2$ or aortic valve area index $\leq 0.6 \text{ cm}^2/\text{m}^2$, a mean aortic valve gradient $\geq 40 \text{ mmHg}$, or a peak aortic-jet velocity $\geq 4.0 \text{ m/s}$
 - **Symptomatic severe low-flow/low-gradient aortic stenosis:** aortic valve area $\leq 1.0 \text{ cm}^2$ or aortic valve area index $\leq 0.6 \text{ cm}^2/\text{m}^2$; a mean aortic valve gradient $< 40 \text{ mmHg}$; and a peak aortic-jet velocity $< 4.0 \text{ m/s}$
 - With untreated, clinically significant coronary artery disease requiring revascularization
 - With a preexisting prosthetic heart valve with a rigid support structure in either the mitral or pulmonic position if either the preexisting prosthetic heart valve could affect the implantation or function of the bioprosthesis or the implantation of the bioprosthesis could affect the function of the preexisting prosthetic heart valve

- Patients with liver failure (Child-Pugh Class C)
- With cardiogenic shock manifested by low cardiac output, vasopressor dependence, or mechanical hemodynamic support
- Patients who are pregnant or breastfeeding
- The safety and effectiveness of a CoreValve Evolut PRO bioprosthesis implanted within a failed preexisting transcatheter bioprosthesis have not been demonstrated.
- Implanting a CoreValve Evolut PRO bioprosthesis in a degenerated surgical bioprosthetic valve (transcatheter aortic valve in surgical aortic valve [TAV in SAV]) should be avoided in the following conditions. The degenerated surgical bioprosthetic valve presents with a:
 - Significant concomitant paravalvular leak (between the prosthesis and the native annulus), is not securely fixed in the native annulus, or is not structurally intact (for example, wireform frame fracture)
 - Partially detached leaflet that in the aortic position may obstruct a coronary ostium
 - Stent frame with a manufacturer's labeled inner diameter <17 mm
- The safety and effectiveness of the bioprosthesis for aortic valve replacement have not been evaluated in patient populations presenting with the following:
 - Blood dyscrasias as defined: leukopenia (WBC <1000 cells/mm³), thrombocytopenia (platelet count <50,000 cells/mm³), history of bleeding diathesis or coagulopathy, or hypercoagulable states
 - Congenital unicuspid valve
 - Mixed native aortic valve disease (aortic stenosis and aortic regurgitation with predominant aortic regurgitation [3–4+])
 - Moderate to severe (3–4+) or severe (4+) mitral or severe (4+) tricuspid regurgitation
 - Hypertrophic obstructive cardiomyopathy
 - New or untreated echocardiographic evidence of intracardiac mass, thrombus, or vegetation
 - Native aortic annulus size <18 mm or >26 mm per the baseline diagnostic imaging or surgical bioprosthetic aortic annulus size <17 mm or >26 mm
 - Transarterial access not able to accommodate a 20 Fr introducer sheath or the 16 Fr equivalent EnVeo inline sheath
 - Prohibitive left ventricular outflow tract calcification
 - Sinus of Valsalva anatomy that would prevent adequate coronary perfusion
 - Significant aortopathy requiring ascending aortic replacement

- Moderate to severe mitral stenosis
- Severe ventricular dysfunction with left ventricular ejection fraction (LVEF) <20%
- Symptomatic carotid or vertebral artery disease
- Severe basal septal hypertrophy with an outflow gradient
- A known hypersensitivity or contraindication to any of the following that cannot be adequately pre-medicated:
 - Aspirin or heparin (HIT/HITTS) and bivalirudin
 - Ticlopidine and clopidogrel
 - Nitinol (titanium or nickel)
 - Contrast media

Before use

- Accelerated deterioration due to calcific degeneration of bioprostheses may occur in:
 - Children, adolescents, or young adults
 - Patients with altered calcium metabolism (for example, chronic renal failure, or hyperparathyroidism)
- The bioprosthesis size must be appropriate to fit the patient's anatomy. Proper sizing of the device is the responsibility of the physician. Refer to Table 1 for available sizes. Failure to implant a device within the sizing matrix could lead to adverse effects such as those listed in Section 5.0.
- Patients must present with transarterial access vessels with diameters that are ≥ 5.5 mm, or patients must present with an ascending aortic (direct aortic) access site ≥ 60 mm from the basal plane.
- Implantation of the bioprosthesis should be avoided in patients with aortic root angulation (angle between plane of aortic valve annulus and horizontal plane/vertebrae) of $>30^\circ$ for right subclavian/axillary access or $>70^\circ$ for femoral and left subclavian/axillary access.
- For subclavian access, patients with a patent Left Internal Mammary Artery (LIMA) graft must present with access vessel diameters of ≥ 6 mm. Use caution when using the subclavian/axillary approach in patients with a patent Left Internal Mammary Artery (LIMA) graft (for left subclavian/axillary approach only) or patent Right Internal Mammary Artery (RIMA) graft (for right subclavian/axillary approach only).
- For direct aortic access, ensure the access site and trajectory are free of patent RIMA or a preexisting patent RIMA graft.
- For transfemoral access, use caution in patients who present with multiplanar curvature of the aorta, acute angulation of the aortic arch, an ascending aortic aneurysm, or severe calcification in the aorta and/or vasculature. If ≥ 2 of these factors are present, consider an alternative access route to prevent vascular complications.

- Limited clinical data are available for transcatheter aortic valve replacement in patients with a congenital bicuspid aortic valve who are deemed to be at low surgical risk. Anatomical characteristics should be considered when using the valve in this population. In addition, patient age should be considered as long-term durability of the valve has not been established.
- Exposure to glutaraldehyde may cause irritation of the skin, eyes, nose, and throat. Avoid prolonged or repeated exposure to the vapors. Use only with adequate ventilation. If skin contact occurs, immediately flush the affected area with water (minimum of 15 minutes). In the event of eye contact, flush with water for a minimum of 15 minutes and seek medical attention immediately.
- The bioprosthesis and the glutaraldehyde storage solution are **sterile**. The outside of the bioprosthesis container is **nonsterile** and must not be placed in the sterile field.
- Damage may result from forceful handling of the catheter. Prevent kinking of the catheter when removing it from the packaging.
- This device was designed for single patient use only. Do not reuse, reprocess, or resterilize this product. Reuse, reprocessing, or resterilization may compromise the structural integrity of the device and/or create a risk of contamination of the device, which could result in patient injury, illness, or death.
- Before catheter insertion, remove the loading stylet.

During use

- For direct aortic and subclavian access procedures, care must be exercised when using the tip-retrieval mechanism to ensure adequate clearance to avoid advancement of the catheter tip through the bioprosthesis leaflets during device closure.
- For direct aortic access procedures, use a separate introducer sheath; do not use the EnVeo inline sheath. Maintain the EnVeo inline sheath at the proximal end of the catheter throughout the procedure.
- Adequate rinsing of the bioprosthesis with sterile saline, as described in the Instructions for Use, is mandatory before implantation. No other solutions, drugs, chemicals, or antibiotics should ever be added to the glutaraldehyde or rinse solutions, as irreparable damage to the leaflet tissue, which may not be apparent under visual inspection, may result.
- During rinsing, do not touch the leaflets or squeeze the bioprosthesis.
- If a misload is detected, unsheath the bioprosthesis and examine the bioprosthesis for damage (for example, permanent frame deformation, frayed sutures, or valve damage). Do not attempt to reload a damaged bioprosthesis; if no issues are found, a second attempt may be made to load an undamaged bioprosthesis. However, the catheter, LS, loading tray, and saline must be replaced with new sterile components. Do not load the bioprosthesis onto the catheter more than 2 times or after it has been inserted into a patient.

- Prevent contamination of the bioprosthesis, its storage solution, the catheter, and the LS with glove powder.
- If a bioprosthesis and catheter have been removed from a patient, dispose of both the bioprosthesis and catheter; do not attempt to reuse either component. Both the bioprosthesis and catheter must be replaced with new sterile components.
- While the catheter is in the patient, ensure the guidewire is extending from the proximal end of the catheter. Do not remove the guidewire from the catheter while the catheter is inserted in the patient.
- There will be some resistance when the catheter is advanced through the vasculature. If there is a significant increase in resistance, stop advancement and investigate the cause of the resistance (for example, magnify the area of resistance) before proceeding. Do not force passage. Forcing passage could increase the risk of vascular complications (for example, vessel dissection or rupture).
- Use the deployment knob to deploy and recapture the bioprosthesis. Do not use the trigger for deploying or recapturing because it could cause inaccurate placement of the bioprosthesis.
- From annular contact to just before the point of no recapture, the bioprosthesis will occlude cardiac output. Promptly deploy or recapture the valve during this occlusive phase as prolonged obstruction or occlusion of blood flow may lead to hypotension, bradycardia, conduction disturbance, congestive heart failure, pulmonary edema, or death.
- If the radiopaque capsule marker band has not yet reached the distal end of the radiopaque paddle attachment, the bioprosthesis can be recaptured or repositioned. During deployment, the deployment knob provides a tactile indication as a notification before the point of no recapture.
- Once the radiopaque capsule marker band reaches the distal end of the radiopaque paddle attachment (point of no recapture), retrieval of the bioprosthesis from the patient (for example, use of the catheter) is not recommended. Retrieval after the point of no recapture may cause mechanical failure of the delivery catheter system, aortic root damage, coronary artery damage, myocardial damage, vascular complications, prosthetic valve dysfunction (including device malposition), embolization, stroke, and/or emergent surgery.
- During deployment, the bioprosthesis can be advanced or withdrawn as long as annular contact has not been made. Once annular contact is made, the bioprosthesis cannot be advanced in the retrograde direction; recapture until the bioprosthesis is free from annular contact, and then reposition in the retrograde direction. If necessary, and the radiopaque capsule marker band has not yet reached the distal end of the radiopaque paddle attachment, the bioprosthesis can be withdrawn (repositioned) in the antegrade direction. However, use caution when moving the bioprosthesis in the antegrade direction.

Caution: Use the handle of the delivery system to reposition the bioprosthesis. Do not use the outer catheter sheath.

- Physicians should use judgment when considering repositioning a fully deployed bioprosthesis (for example, using a snare, balloon, and/or forceps). Repositioning the bioprosthesis is not recommended, except in cases where imminent serious harm or death is possible (for example, coronary occlusion). Repositioning of a deployed valve may cause aortic root damage, coronary artery damage, myocardial damage, vascular complications, prosthetic valve dysfunction (including device malposition), embolization, stroke, and/or emergent surgery.
- Do not attempt to retrieve or to recapture a bioprosthesis if any one of the outflow struts is protruding from the capsule. If any one of the outflow struts has deployed from the capsule, the bioprosthesis must be released from the catheter before the catheter can be withdrawn.
- Ensure the capsule is closed before catheter removal.
- When using a separate introducer sheath, if increased resistance is encountered when removing the catheter through the introducer sheath, do not force passage. Increased resistance may indicate a problem and forced passage may result in damage to the device and/or harm to the patient. If the cause of resistance cannot be determined or corrected, remove the catheter and introducer sheath as a single unit over the guidewire, and inspect the catheter and confirm that it is complete.
- Postprocedure, administer appropriate antibiotic prophylaxis as needed for patients at risk for prosthetic valve infection and endocarditis.
- Postprocedure, administer anticoagulation and/or antiplatelet therapy per physician/clinical judgment.
- Excessive contrast media may cause renal failure. Preprocedure, measure the patient's creatinine level. During the procedure, monitor contrast media usage.
- Conduct the procedure under fluoroscopy. Fluoroscopic procedures are associated with the risk of radiation damage to the skin, which may be painful, disfiguring, and long-term.
- The safety and efficacy of a CoreValve Evolut PRO bioprosthesis implanted within a transcatheter bioprosthesis have not been demonstrated. However, in the event that a CoreValve Evolut PRO bioprosthesis must be implanted within a transcatheter bioprosthesis to improve valve function, valve size and patient anatomy must be considered before implantation of the CoreValve Evolut PRO bioprosthesis to ensure patient safety (for example, to avoid coronary obstruction).

Post-implant balloon dilatation considerations

If valve function or sealing is impaired due to excessive calcification or incomplete expansion, a post-implant balloon dilatation (PID) of the bioprosthesis may improve valve function and sealing. If the heart team determines that balloon dilatation is appropriate, consider all of the following factors when selecting the dilatation parameters to ensure patient safety:

- Balloon model
- Balloon size

- Balloon position
- Inflation pressure
- Patient anatomy

Two primary factors must be considered when selecting a maximum balloon diameter for post-implant balloon dilatation:

- To mitigate trauma to the annulus
 - A compliant or semi-compliant balloon (for example, B. Braun Z-Med I™* / Z-Med II™*, InterValve V8™*) should not exceed the diameter of the native aortic annulus. For TAV in SAV, the balloon should not exceed the inner diameter of the surgical bioprosthetic valve.
 - A non-compliant balloon (for example, Bard TRUE™* Dilatation) should be at least 1 mm smaller than the diameter of the native aortic annulus. For TAV in SAV, the balloon should be at least 1 mm smaller than the inner diameter of the surgical bioprosthetic valve.
- To mitigate trauma to the Evolut TAV bioprosthetic leaflets
 - The maximum balloon size chosen for dilatation using a compliant or semi-compliant balloon should not exceed the TAV waist diameter beyond the level set forth in Table 3 with an applied inflation pressure of no greater than 2 atm.
 - The maximum balloon size chosen for dilatation using a non-compliant balloon should not exceed 1 mm more than the TAV waist diameter with an applied inflation pressure of no greater than 2 atm (see Table 3).

Table 3: Post-implant balloon dilatation sizing

CoreValve Evolut PRO size	23 mm			26 mm				29 mm			
Native annulus (SAV inner) diameter (in mm)	17 ^d /18	19	20	20	21	22	23	23	24	25	26
TAV waist diameter (in mm)	20	20	20	22	22	22	22	23	23	23	23
Maximum balloon diameter (in mm) for compliant and semi-compliant balloons @ 2 atm	17 ^d /18	19	20	20	21	22	23	23	24	25	26
Maximum balloon diameter (in mm) for non-compliant balloons @ 2 atm	16 ^d /17	18	19	19	20	21	22	22	23	24	24

^d Diameter for surgical aortic valve (SAV)

Caution: Overexpansion of the narrowest portion (waist) of the CoreValve Evolut PRO TAV beyond the levels set forth in Table 3 has been demonstrated through bench data to cause damage to the bioprosthetic leaflets. Complaints of damage to the bioprosthetic leaflets during post-implant balloon dilatation have been reported in some clinical cases, resulting in moderate to severe aortic insufficiency, which may be detected acutely or during follow-up.

It is important to note that the mechanical compliance properties of the selected balloon influence the dilatation dynamics.

Balloons should not be inflated beyond 2 atm of applied pressure.

Compliant and semi-compliant (softer) balloons will more readily conform to the hourglass profile of the TAV bioprosthesis at lower pressures, but must be inflated at pressures that preserve the hourglass profile of the TAV.

Conversely, non-compliant (stiffer) balloons will achieve the nominal diameter during inflation irrespective of the underlying annulus or TAV resistance and should be downsized (see Table 3).

For additional instructions on the use of balloon catheter devices refer to the specific balloon catheter manufacturer's labeling.

In the event that larger balloon diameters than those listed in Table 3 are required to expand the CoreValve Evolut PRO TAV due to clinically important residual aortic regurgitation or stenosis, using “bailout” intraventricular balloon positioning when performing PID avoids expansion of the narrowest portion (waist) of the CoreValve Evolut PRO TAV. This can mitigate the risk of leaflet damage. Dilatation with intraventricular balloon positioning should be performed with caution in the setting of a smaller ventricle cavity, presence of LVOT calcification, or wire positioning that interferes with mitral valve function, in order to avoid any unintended balloon interaction with anatomy. The balloon’s length and diameter, along with the individual patient anatomy, must be considered. Care should also be taken not to exceed the annular diameters when performing PID with intraventricular balloon positioning (see Table 3).

In the event that a bailout PID with intraventricular balloon positioning is performed, the nominal diameter of the balloon should not exceed the annular diameter when using compliant or semi-compliant balloons; the nominal diameter of the balloon should be at least 1 mm smaller than the annular diameter when using non-compliant balloons.

4.3 Magnetic resonance imaging (MRI)

MRI may be used on the bioprosthesis only under specific conditions. See Section 6.2: MRI Safety Information for more information.

5.0 Potential adverse events

Potential risks associated with the implantation of the CoreValve Evolut PRO bioprosthesis may include, but are not limited to, the following:

- Death
- Myocardial infarction, cardiac arrest, cardiogenic shock, cardiac tamponade
- Coronary occlusion, obstruction, or vessel spasm (including acute coronary closure)
- Cardiovascular injury (including rupture, perforation, tissue erosion, or dissection of vessels, ascending aorta trauma, ventricle, myocardium, or valvular structures that may require intervention)
- Emergent surgical or transcatheter intervention (for example, coronary artery bypass, heart valve replacement, valve explant, percutaneous coronary intervention [PCI], balloon valvuloplasty)
- Prosthetic valve dysfunction (regurgitation or stenosis) due to fracture; bending (out-of-round configuration) of the valve frame; underexpansion of the valve frame; calcification; pannus; leaflet wear, tear, prolapse, or retraction; poor valve coaptation; suture breaks or disruption; leaks; mal-sizing (prosthesis-patient mismatch); malposition (either too high or too low)/malplacement
- Prosthetic valve migration/embolization
- Prosthetic valve endocarditis
- Prosthetic valve thrombosis
- Delivery catheter system malfunction resulting in the need for additional re-crossing of the aortic valve and prolonged procedural time
- Delivery catheter system component migration/embolization
- Stroke (ischemic or hemorrhagic), transient ischemic attack (TIA), or other neurological deficits
- Individual organ (for example, cardiac, respiratory, renal [including acute kidney failure]) or multi-organ insufficiency or failure
- Major or minor bleeding that may require transfusion or intervention (including life-threatening or disabling bleeding)
- Vascular access-related complications (for example, dissection, perforation, pain, bleeding, hematoma, pseudoaneurysm, irreversible nerve injury, compartment syndrome, arteriovenous fistula, stenosis)
- Mitral valve regurgitation or injury
- Conduction system disturbances (for example, atrioventricular node block, left-bundle branch block, asystole), which may require a permanent pacemaker
- Infection (including septicemia)

- Hypotension or hypertension
- Hemolysis
- Peripheral ischemia
- Bowel ischemia

General surgical risks applicable to transcatheter aortic valve implantation:

- Abnormal lab values (including electrolyte imbalance)
- Allergic reaction to antiplatelet agents, contrast medium, or anesthesia
- Exposure to radiation through fluoroscopy and angiography
- Permanent disability

6.0 Patient information

6.1 Registration information

A patient registration form is included in each bioprosthesis package. After implantation, please complete all requested information. The serial number is located on both the package and the identification tag attached to the bioprosthesis. Return the original form to the Medtronic address indicated on the form and provide the temporary identification card to the patient prior to discharge.

Medtronic will provide an Implanted Device Identification Card to the patient. The card contains the name and telephone number of the patient's physician as well as information that medical personnel would require in the event of an emergency. Patients should be encouraged to carry this card with them at all times.

6.2 MRI safety information

Nonclinical testing and modeling have demonstrated that the Medtronic CoreValve Evolut PRO bioprosthesis is MR Conditional. A patient with this device can be safely scanned in an MR system meeting the following conditions:

- Static magnetic field of 1.5 T and 3.0 T
- Maximum spatial field gradient of 2500 gauss/cm (25 T/m)
- Maximum MR system reported, whole body averaged specific absorption rate (SAR) of 2.0 W/kg (Normal Operating Mode)

Based on nonclinical testing and modeling, under the scan conditions defined above, the Medtronic CoreValve Evolut PRO bioprosthesis is expected to produce a maximum in vivo temperature rise of less than 4.0°C after 15 minutes of continuous scanning. Based on nonclinical data, the image artifact caused by the device will extend no greater than 7 mm from the Medtronic CoreValve Evolut PRO bioprosthesis when imaged with a gradient echo pulse sequence and a 3.0 T MRI system.

Scanning under the conditions defined above may be performed immediately after implantation.

The presence of other implants or medical circumstances of the patient may require lower limits on some or all of the above parameters. For deployment of a Medtronic CoreValve Evolut PRO bioprosthesis inside of a failed surgical bioprosthetic valve, consult the MRI labeling pertaining to the failed valve for additional artifact information.

7.0 How supplied

7.1 Packaging

The bioprosthesis is supplied **sterile** and **nonpyrogenic** in a glass container and a screw cap with a liner. The outside of the container is **nonsterile** and must not be placed in the sterile field. A freeze indicator is placed inside the labeled carton. If the freeze indicator has been activated, do not use the bioprosthesis.

The catheter is packaged in a single-pouch configuration and sterilized with ethylene oxide gas. The catheter is sterile if the package is undamaged and unopened. The outer surfaces of the pouch are **nonsterile** and must not be placed in the sterile field.

The LS is packaged in a double-pouch configuration. The LS is sterile if the pouches are undamaged and unopened. The outer surfaces of the outer pouch are **nonsterile** and must not be placed in the sterile field. The LS is sterilized with ethylene oxide gas.

7.2 Storage

Store the bioprosthesis at room temperature. Avoid exposing to extreme fluctuations of temperature. Avoid freezing. Appropriate inventory control should be maintained so that bioprostheses with earlier Use By dates are implanted preferentially.

Store the catheter and LS in a cool, dry environment.

8.0 Additional equipment

Note: While extensive, this equipment list is not meant to cover all possible scenarios.

Transesophageal echocardiogram (TEE) or transthoracic echocardiography (TTE) on standby

Temporary pacer insertion

- Temporary pacemaker lead
- Sterile sleeve for pacemaker lead
- Hemostatic vessel introducer sheath
- Temporary pacemaker generator
- Sterile temporary pacemaker-to-generator cable

If indicated, pulmonary artery catheter insertion

- Standard pulmonary artery catheter
- Hemostatic vessel introducer sheath
- Saline flush line connected to pressure transducer

Baseline aortography via radial, brachial, or femoral approach

- 5 Fr or 6 Fr pigtail angiographic catheter
- 6 Fr hemostatic vessel introducer sheath
- 2-port manifold with saline flush line and pressure tubing or transducer
- Power injector syringe
- Contrast media
- High-pressure power injector tubing

Predilatation of implant site

- 2-port manifold with saline flush and transducer
- 9 Fr hemostatic vessel introducer sheath and a 16 Fr or 20 Fr hemostatic vessel introducer sheath

Note: The catheter is compatible with a 20 Fr introducer sheath.

- Standard length 0.035 in (0.889 mm) straight guidewire
- Appropriate suture-mediated closure system, if applicable
- Angiographic catheter
- 0.035 in (0.889 mm) × 260 cm standard high support guidewire to be shaped with a pigtail loop

- Balloon valvuloplasty catheters, ≤ 4 cm length \times 18 mm, 20 mm, 22 mm or 23 mm, and 25 mm diameters
- Inflation device or syringe and diluted 1:5 contrast media

Bioprosthesis implantation

- 20 Fr hemostatic vessel introducer sheath

Note: The catheter is compatible with a 20 Fr introducer sheath.

Note: A separate introducer sheath is optional for transfemoral and subclavian access procedures.

Standby supplies (must be available in the room)

- Pericardiocentesis tray
- 35 mm \times 120 cm single loop snare
- Standard percutaneous coronary intervention (PCI) equipment
- 14 Fr and 16 Fr hemostatic vessel introducer sheaths
- Standard cardiac catheterization lab equipment
- Intra-aortic balloon pump (IABP)

9.0 Instructions for use

9.1 Inspection and bioprosthesis loading procedure

Caution: Once the bioprosthesis is removed from its container and the catheter and LS are removed from their packaging, ensure all subsequent procedures are performed in a sterile field.

Caution: Do not allow the bioprosthesis to dry. Maintain tissue moisture with irrigation or immersion.

9.1.1 Inspection before use and swivel tray setup

1. Before removing the bioprosthesis, catheter, or LS from its primary packaging, carefully inspect the packaging for any evidence of damage that could compromise the sterility or integrity of the device (for example, cracked jar or lid, leakage, broken or missing seals, torn or punctured pouch).

Caution: Do not use after the Use By date or if there is evidence of damage.

Caution: Do not use the bioprosthesis if the freeze indicator has been activated.

2. Remove the product from the protective package.
3. Visually check that the product is free of defects. Do not use if any defects are noted.
4. Remove the locking clip attached to the rinsing bowls.
5. Remove the rinsing bowls from the integrated loading bath.
6. Remove the locking clips that connect the distal and proximal trays.
7. Lift the tray connector from the distal tray, and swivel the distal tray 180° counterclockwise.
8. Clip the tray tab on the distal tray to the tray tab holder on the proximal tray.
9. Fill the integrated loading bath with cold, sterile saline (0°C to 8°C [32°F to 46°F]).

9.1.2 Preparation of the catheter and LS

1. Attach a 10 mL syringe filled with sterile saline to the capsule flush port on the proximal end of the handle. Leave the syringe in place until loading is complete.
2. Carefully lift the distal end of the catheter to a near vertical orientation. To prevent kinking, do not bend the catheter severely.
3. Open the capsule and expose the paddle attachment.

Note: Use the deployment knob to open the capsule completely until the paddle attachment is fully exposed.

4. With the capsule held vertically, flush the capsule flush port. Verify that no catheter leakage is observed during any of the flushing steps. If leakage is observed, use a new system.

5. Submerge the capsule completely in the cold saline bath while flushing the capsule flush port. Continue flushing the capsule until it is completely submerged in the bath to prevent air from entering the catheter (Figure 10).

Note: After the bioprosthesis has been loaded into the capsule, the capsule flush port can no longer be flushed.

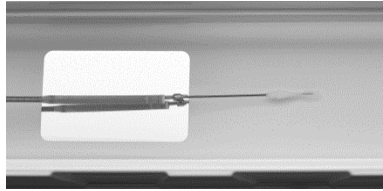


Figure 10

Note: The bioprosthesis, catheter, and LS may look slightly different from the figures in Section 9.0. The functionality of the system is the same.

6. Secure a locking clip in the clip holder to angle the catheter tip into the integrated loading bath.
7. Place the LS components in the integrated loading bath.

9.1.3 Bioprosthesis rinsing procedure

1. Fill each of the 3 rinsing bowls (provided within the packaging) with approximately 500 mL of fresh, sterile saline at ambient temperature (15°C to 25°C [59°F to 77°F]).

Caution: Do not handle or manipulate the bioprosthesis with sharp or pointed objects. Use atraumatic forceps only.

2. Confirm the integrity of the primary bioprosthesis container. Remove the bioprosthesis from its container by carefully grasping one of the bioprosthesis frame paddles with a pair of blunt tipped forceps. Do not use the forceps to grasp the tissue portion of the bioprosthesis. Let any remaining solution drain from the bioprosthesis completely.

Note: Retain the container with the original solution. It may be needed to store and return a rejected bioprosthesis.

3. Compare the serial number on the container with the serial number on the tag attached to the bioprosthesis.

Caution: If the serial numbers do not match, do not use the bioprosthesis.

4. Carefully remove the serial number tag from the bioprosthesis and retain the tag.
5. Immerse the entire bioprosthesis in a sterile rinsing bowl.
6. Gently agitate the bioprosthesis by hand for 15 seconds to remove the glutaraldehyde from the bioprosthesis.
7. Repeat steps 5 and 6 in one of the remaining rinsing bowls.

8. Leave the bioprosthesis submerged in sterile saline in the third rinsing bowl until it is ready to be loaded.

9.1.4 Bioprosthesis loading procedure

If using the EnVeo PRO LS, follow the steps in Section 9.1.4.1. If using the EnVeo R LS, follow the steps in Section 9.1.4.2.

9.1.4.1 EnVeo PRO LS

Perform the bioprosthesis loading procedure while the distal end of the catheter is immersed in the integrated loading bath filled with cold, sterile saline (0°C to 8°C [32°F to 46°F]). The bioprosthesis should remain immersed in saline during the loading process to minimize the introduction of air into the loaded system.

Note: Confirm the LS and catheter sizes are compatible with the bioprosthesis size (Table 2).

Note: Refer to Figure 8 for EnVeo PRO LS components.

Caution: Rapid capsule advancement can contribute to difficulties with loading the valve. Slowly advancing the capsule helps facilitate successful loading.

1. Submerge and cool the bioprosthesis in the integrated loading bath filled with cold, sterile saline.
2. Ensure that the capsule guide tube is fully open (unlocked) with the locking collar at the proximal end of the capsule guide tube (Figure 11).



Figure 11

3. Advance the capsule guide tube over the catheter shaft toward the handle and across the catheter tip (Figure 12).



Figure 12

4. Once the catheter tip has been crossed, fully advance the locking collar to the distal end of the capsule guide tube until it is closed (locked).
5. Continue to advance the capsule guide tube over the catheter shaft towards the handle until it contacts the distal end of the capsule (Figure 13).

Caution: Do not attempt to advance the capsule guide tube over the capsule; this will prevent the capsule flare from expanding fully and prevent proper loading.

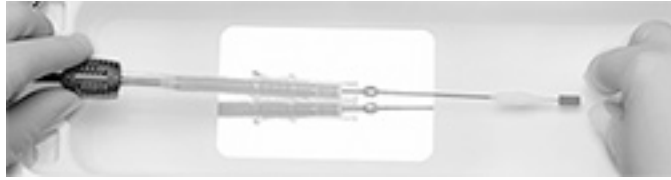


Figure 13

6. Ensure that the backplate has been inserted into the inflow cone and the exposed part of the backplate is facing up.
7. Insert the inflow portion of the bioprosthesis frame into the inflow cone. Ensure that the bioprosthesis frame paddle marked with a “C” is facing up and that the paddles are aligned with the paddle attachment pockets (Figure 14).

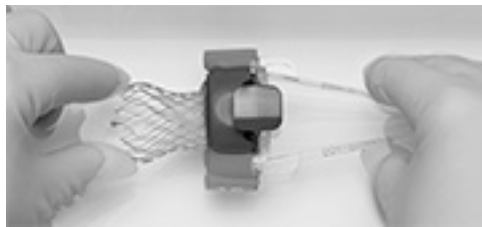


Figure 14

8. Secure the outflow cone onto the inflow cone (Figure 15) until it locks.

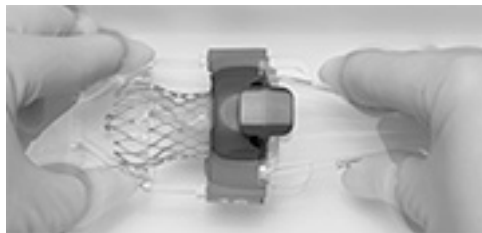


Figure 15

9. Insert the catheter tip guide tube completely into the distal end of the inflow cone (Figure 16). Inspect the outflow struts of the bioprosthesis and, if needed, manually manipulate so that they are evenly spaced and the bioprosthesis frame paddles are approximately 180° apart.



Figure 16

10. Insert the distal catheter tip into the catheter tip guide tube.

Note: Allow the loading tool to rest on the loading bath floor to ensure coaxial alignment with the catheter to assist in seating the bioprosthesis frame paddles within the paddle attachment pockets.

11. Retract the catheter tip guide tube to set the bioprosthesis frame paddles into the paddle attachment pockets (Figure 17).

Note: If the bioprosthesis frame paddles do not seat properly within the paddle attachment pockets upon retracting the catheter tip guide tube, slightly manipulate the position of the loading tool until paddle seating is achieved.

Note: If necessary, it is acceptable to manually compress the bioprosthesis frame paddles with fingertips to help seat the paddles within the paddle attachment pockets.



Figure 17

Note: Ensure both bioprosthesis frame paddles are completely seated within the paddle attachment pockets (Figure 18) before continuing to the next step.

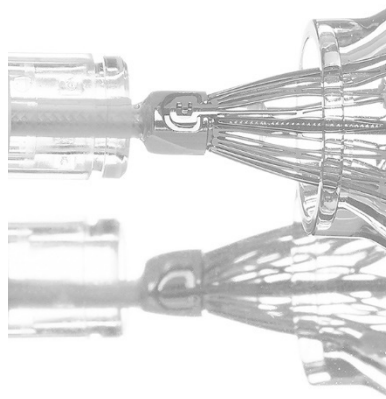


Figure 18

12. Hold the loading tool stationary with one hand, and with the other hand manually advance the capsule guide tube so that the distal section covers the paddle attachment pockets and the top portion of the outflow struts (Figure 19).



Figure 19

Use the mirror to ensure that both bioprosthesis frame paddles are positioned correctly in the paddle attachment pockets and the outflow struts are within the distal tip of the capsule guide tube (Figure 20).

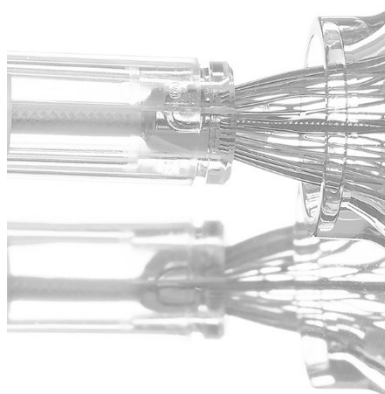


Figure 20

13. Advance the capsule to cover the bioprosthesis frame paddles (Figure 21), pausing when the capsule covers the proximal half of the paddles to confirm the paddles are both still properly seated before advancing further.

Use the mirror to ensure that both paddles are captured in the capsule.

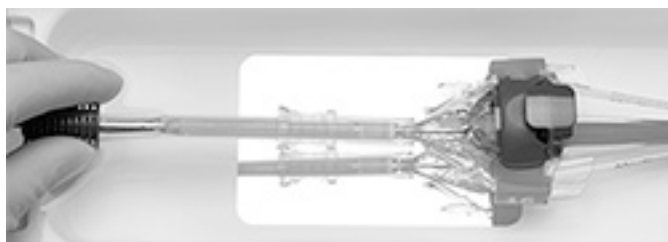


Figure 21

Caution: Do not advance the capsule over the bioprosthesis frame paddles unless they are fully seated in the center of the paddle attachment pockets. Advancing the capsule before the paddles are fully seated could damage the capsule and result in emboli.

14. Advance the capsule to capture the bioprosthesis outflow struts (Figure 22).

Use the mirror to ensure that all bioprosthesis outflow struts are symmetrical and captured in the capsule.



Figure 22

15. Continue to advance the capsule until the distal end of the capsule guide tube covers the distal end of the commissure pad of the bioprosthesis (Figure 23). The capsule guide tube should completely cover the commissure pad.

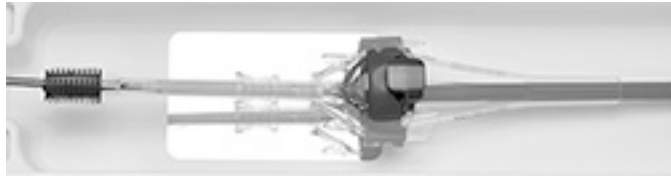


Figure 23

16. Remove the backplate and the catheter tip guide tube from the outflow cone.
17. While holding the capsule guide tube stationary, advance the inflow cone to crimp the inflow portion of the bioprosthesis frame until the outflow cone contacts the capsule guide tube (Figure 24). During this step, the outflow cone contacts the locking collar component and moves the locking collar to the proximal end of the capsule guide tube.

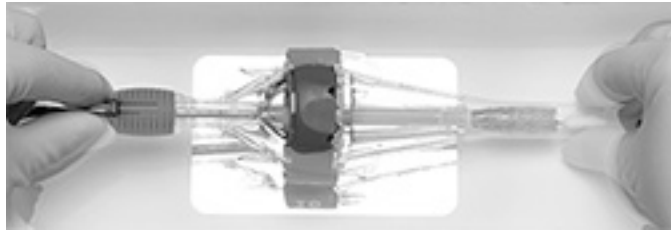


Figure 24

Note: The capsule guide tube will be in the unlocked configuration after this step.

Note: Ensure the bioprosthesis frame axis is visually aligned (coaxial) with the inflow cone axis during the insertion of the bioprosthesis into the inflow cone. Complete the insertion of the bioprosthesis into the inflow cone in one uninterrupted movement.

18. Advance the capsule over the bioprosthesis until the capsule comes within 5 mm of the catheter tip (Figure 25).

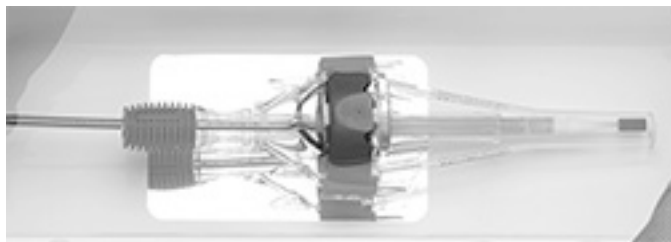


Figure 25

19. Remove the capsule guide tube together with the outflow cone and inflow cone from the catheter (Figure 26).

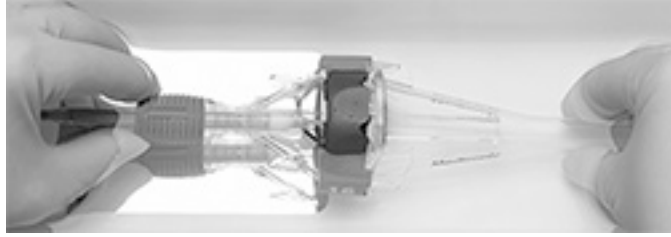


Figure 26

20. Advance the capsule to close the gap between the capsule and catheter tip completely (Figure 27).

Caution: Stop advancing the capsule once the gap to the catheter tip is closed. Advancing the capsule farther could damage the capsule.



Figure 27

21. Slightly rotate the deployment knob in the direction of the arrows to relieve stress. Ensure that the capsule does not separate from the catheter tip.
Note: After the bioprosthesis has been loaded into the capsule, the capsule flush port can no longer be flushed.
22. Visually and tactilely inspect the capsule for a misloaded bioprosthesis. The capsule should be straight, smooth, and free of any bends, protrusions, or discolorations. If any of these conditions are felt or observed, the bioprosthesis is likely to be misloaded.
Note: If a misload is detected, unsheath the bioprosthesis and examine the bioprosthesis for damage (for example, permanent frame deformation, frayed sutures, or valve damage). Do not attempt to reload a damaged bioprosthesis; if no issues are found, a second attempt may be made to load an undamaged bioprosthesis. However, the catheter, LS, loading tray, and saline must be replaced with new sterile components. Do not load the bioprosthesis onto the catheter more than 2 times or after it has been inserted into a patient.
23. Attach a 10 mL syringe filled with sterile saline to the stability layer flush port on the distal end of the handle and flush.
24. Remove the loading stylet from the guidewire lumen at the capsule.
25. Attach a 10 mL syringe filled with sterile saline to the wire lumen flush port on the proximal end of the handle and flush.

26. Attach a 10 mL syringe filled with sterile saline to the EnVeo inline sheath flush port and flush.

27. Before inserting into a patient, visually inspect the loaded bioprosthesis under fluoroscopy.

Note: If a misload is detected, unsheath the bioprosthesis and examine the bioprosthesis for damage (for example, permanent frame deformation, frayed sutures, or valve damage). Do not attempt to reload a damaged bioprosthesis; if no issues are found, a second attempt may be made to load an undamaged bioprosthesis. However, the catheter, LS, loading tray, and saline must be replaced with new sterile components. Do not load the bioprosthesis onto the catheter more than 2 times or after it has been inserted into a patient.

28. Leave the bioprosthesis submerged in sterile saline until implantation.

9.1.4.2 EnVeo R LS

Perform the bioprosthesis loading procedure while the distal end of the catheter is immersed in the integrated loading bath filled with cold, sterile saline (0°C to 8°C [32°F to 46°F]). The bioprosthesis should remain immersed in saline during the loading process to minimize the introduction of air into the loaded system.

Note: Confirm the LS and catheter sizes are compatible with the bioprosthesis size (Table 2).

Note: Refer to Figure 9 for EnVeo R LS components.

Caution: Rapid capsule advancement can contribute to difficulties with loading the valve. Slowly advancing the capsule helps facilitate successful loading.

1. Submerge and cool the bioprosthesis in the integrated loading bath filled with cold, sterile saline.
2. Advance the capsule guide tube over the catheter shaft toward the handle until the flexible tip is completely proximal to the paddle attachment and the end of the capsule is even with the edge of the rigid portion of the capsule guide tube (Figure 28).

Caution: Do not attempt to advance the flexible tip of the capsule guide tube over the capsule; this will prevent the capsule flare from expanding fully and prevent proper loading.

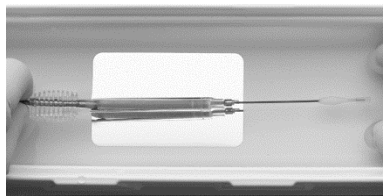


Figure 28

3. Ensure that the backplate has been inserted into the inflow cone and the exposed part of the backplate is facing up (Figure 29).

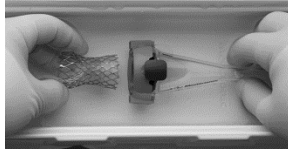


Figure 29

4. Insert the inflow portion of the bioprosthesis frame into the inflow cone. Ensure that the bioprosthesis frame paddle marked with a “C” is facing up and that the paddles are aligned with the paddle attachment pockets (Figure 30).

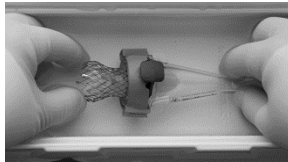


Figure 30

5. Secure the outflow cone onto the inflow cone until it locks (Figure 31).

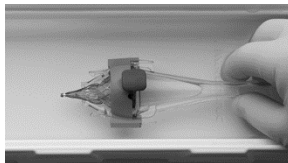


Figure 31

6. Insert the catheter tip guide tube completely into the distal end of the inflow cone (Figure 32). Inspect the outflow struts of the valve and if needed, manually manipulate so they are evenly spaced and the bioprosthesis frame paddles are approximately 180° apart.

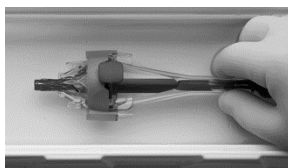


Figure 32

7. Insert the distal catheter tip into the catheter tip guide tube (Figure 33).

Note: Allow the loading tool to rest on the loading bath floor to ensure coaxial alignment with the catheter to assist in seating the bioprosthesis frame paddles within the paddle attachment.

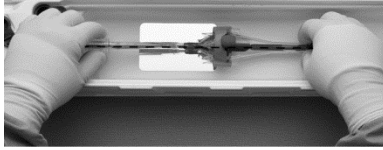


Figure 33

8. Retract the catheter tip guide tube to set the bioprosthesis frame paddles into the paddle attachment pockets (Figure 34).

Note: If the bioprosthesis frame paddles do not seat properly within the paddle attachment pockets upon retracting the catheter tip guide tube, slightly manipulate the position of the loading tool until paddle seating is achieved.

Note: If necessary, it is acceptable to manually compress the bioprosthesis frame paddles with fingertips to help seat the paddles within the paddle attachment pockets.

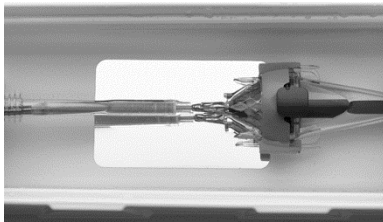


Figure 34

Note: Ensure both bioprosthesis frame paddles are completely seated within the paddle attachment pockets (Figure 35) before continuing to the next step.

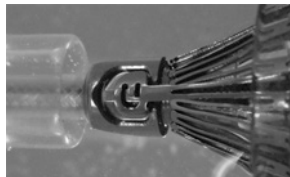


Figure 35

9. Hold the loading tool stationary with one hand, and with the other hand manually advance the capsule guide tube so that the flexible section covers the paddle attachment pockets (Figure 36) and the top portion of the outflow struts.

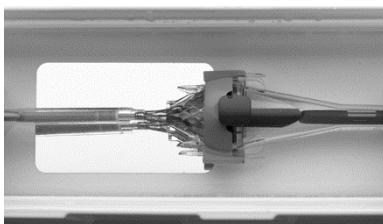


Figure 36

Use the mirror to ensure that both bioprosthesis frame paddles are positioned correctly in the paddle attachment pockets and the outflow struts are within the flexible tip (Figure 37).

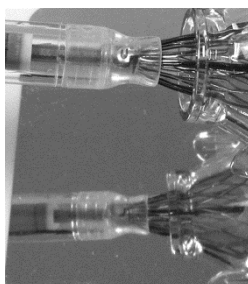


Figure 37

10. Advance the capsule to cover the bioprosthesis frame paddles (Figure 38), pausing when the capsule covers the proximal half of the paddles to confirm the paddles are both still properly seated before advancing further.

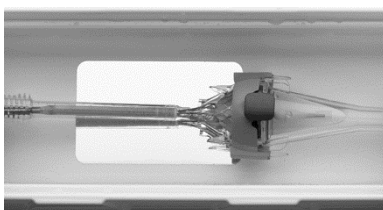


Figure 38

Use the mirror to ensure that both paddles are captured in the capsule (Figure 39).

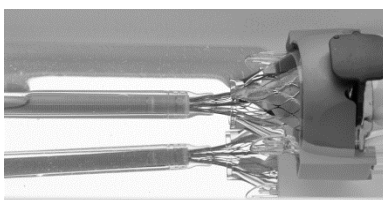


Figure 39

Caution: Do not advance the capsule over the bioprosthesis frame paddles unless they are fully seated in the center of the paddle attachment pockets. Advancing the capsule before the paddles are fully seated could damage the capsule and result in emboli.

11. Advance the capsule to capture the bioprosthesis outflow struts (Figure 40).

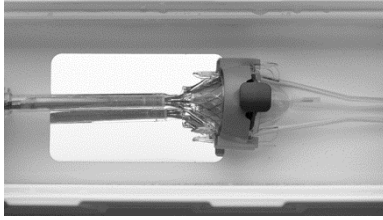


Figure 40

Use the mirror to ensure that all bioprosthesis outflow struts are symmetrical and captured in the capsule (Figure 41).

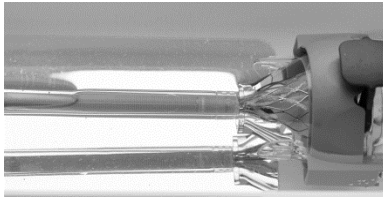


Figure 41

12. Continue to advance the capsule until it reaches the distal end of the commissure pad of the bioprosthesis (Figure 42). The capsule should completely cover the commissure pad.

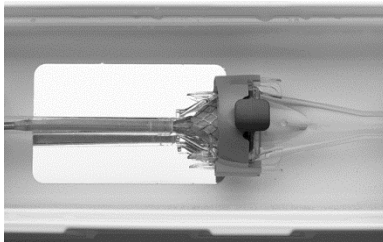


Figure 42

13. Remove the backplate and the catheter tip guide tube from the outflow cone (Figure 43).

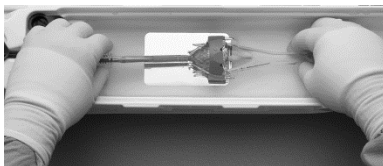


Figure 43

14. While holding the capsule guide tube stationary, advance the inflow cone to crimp the inflow portion of the bioprosthesis frame until the outflow cone contacts the capsule guide tube (Figure 44).

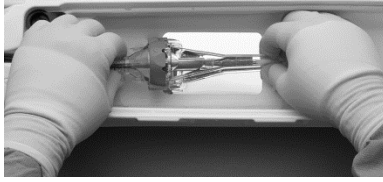


Figure 44

Note: Ensure the bioprosthesis frame axis is visually aligned (coaxial) with the inflow cone axis during the insertion of the bioprosthesis into the inflow cone. Complete the insertion of the bioprosthesis into the inflow cone in one uninterrupted movement.

15. Advance the capsule over the bioprosthesis until the capsule comes within 5 mm of the catheter tip (Figure 45).

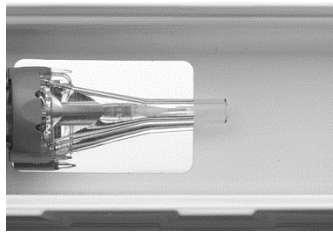


Figure 45

16. Remove the outflow cone and inflow cone from the catheter (Figure 46).

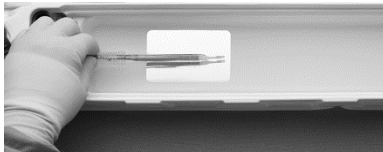


Figure 46

17. Advance the capsule to close the gap between the capsule and catheter tip completely.

Caution: Stop advancing the capsule once the gap to the catheter tip is closed. Advancing the capsule farther could damage the capsule.

18. Remove the capsule guide tube from the catheter. Slightly rotate the deployment knob in the direction of the arrows to relieve stress. Ensure that the capsule does not separate from the catheter tip (Figure 47).

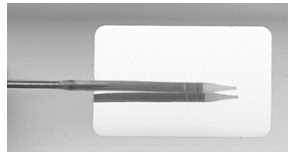


Figure 47

Note: After the bioprosthesis has been loaded into the capsule, the capsule flush port can no longer be flushed.

19. Visually and tactilely inspect the capsule for a misloaded bioprosthesis. The capsule should be straight, smooth, and free of any bends, protrusions, or discolorations. If any of these conditions are felt or observed, the bioprosthesis is likely to be misloaded.

Note: If a misload is detected, unsheath the bioprosthesis and examine the bioprosthesis for damage (for example, permanent frame deformation, frayed sutures, or valve damage). Do not attempt to reload a damaged bioprosthesis; if no issues are found, a second attempt may be made to load an undamaged bioprosthesis. However, the catheter, LS, loading tray, and saline must be replaced with new sterile components. Do not load the bioprosthesis onto the catheter more than 2 times or after it has been inserted into a patient.

20. Attach a 10 mL syringe filled with sterile saline to the stability layer flush port on the distal end of the handle and flush.
21. Remove the loading stylet from the guidewire lumen at the capsule.
22. Attach a 10 mL syringe filled with sterile saline to the wire lumen flush port on the proximal end of the handle and flush.
23. Attach a 10 mL syringe filled with sterile saline to the EnVeo inline sheath flush port and flush.
24. Before inserting into a patient, visually inspect the loaded bioprosthesis under fluoroscopy.

Note: If a misload is detected, unsheath the bioprosthesis and examine the bioprosthesis for damage (for example, permanent frame deformation, frayed sutures, or valve damage). Do not attempt to reload a damaged bioprosthesis; if no issues are found, a second attempt may be made to load an undamaged bioprosthesis. However, the catheter, LS, loading tray, and saline must be replaced with new sterile components. Do not load the bioprosthesis onto the catheter more than 2 times or after it has been inserted into a patient.

25. Leave the bioprosthesis submerged in sterile saline until implantation.

9.2 Bioprosthesis implantation

Note: Use systemic anticoagulation during the implantation procedure based on physician/clinical judgment. If heparin is contraindicated, consider an alternative anticoagulant.

9.2.1 Vascular access

Note: Vascular access should be achieved per standard practice (either percutaneously or via surgical cutdown).

Note: The primary access artery will be used to introduce the CoreValve Evolut PRO device and, if predilatation is performed, the balloon catheter; the secondary access artery will be used to introduce the reference pigtail.

1. Establish a central venous line. Insert a temporary pacemaker lead via the right internal jugular vein (or other appropriate access vessel) per physician/clinical judgment.
2. Insert an introducer sheath into the secondary access artery.
3. Insert an introducer sheath into the primary access artery.
4. Administer anticoagulant according to physician/clinical judgment. If heparin is administered as an anticoagulant, check activated clotting time (ACT) and monitor every 30 minutes after initial bolus of heparin. Maintain ACT ≥ 250 seconds.

Note: Anticoagulant may be administered at any time prior to this point, but avoid delaying beyond this point.

9.2.2 Crossing the valve

1. Advance the graduated pigtail catheter to the ascending aorta and position the distal tip in the noncoronary cusp of the aortic valve.
2. Identify the ideal annular viewing plane using contrast injections at various angiographic angles.
Note: It is recommended that a dedicated individual prepare and operate the contrast injector.
3. Insert an angiographic catheter over a standard J-tip guidewire into the primary access sheath and advance to the ascending aorta.
4. Exchange the J-tip guidewire for a 0.035 in (0.889 mm) straight-tip guidewire. Advance the straight-tip guidewire across the aortic valve into the left ventricle (LV).
5. After crossing the aortic valve with the guidewire, advance the angiographic catheter into the LV.
6. Exchange the straight-tip guidewire for an exchange length J-tip guidewire.
7. Exchange the angiographic catheter for a 6 Fr pigtail catheter.
8. Remove the guidewire and connect the catheter to the transducer. Using both catheters, record the aortic pressure gradient.
9. Using a right anterior oblique (RAO) projection, advance the previously pigtail-shaped, 0.035 in (0.889 mm) high support guidewire through the pigtail catheter and position in the apex of the LV.
10. Remove the pigtail catheter while maintaining guidewire position in the LV.

9.2.3 Predilatation of the implant site

Note: The need for predilatation of the native valve is determined by the heart team.

Predilatation may be useful to prepare the valve for crossing by the delivery catheter system and implantation of the transcatheter valve but may also confer some additional risk to the patient (for example, liberation of embolic debris, damage to the tissue, or perforation of the aortic root). Patient anatomical characteristics (for example, bicuspid anatomy, excessive or

asymmetric leaflet calcification, and possible leaflet fusion) should be considered by the heart team when evaluating and determining the risk/benefit of predilatation and treatment plan for each patient.

Information for failed surgical bioprosthetic valve: Balloon predilatation of a stenotic surgical aortic bioprosthetic valve has not been evaluated. In cases where there is severe stenosis, predilatation of the surgical aortic bioprosthetic valve may be done at the discretion of the heart team and the steps used are identical to native valve predilatation.

1. Insert the valvuloplasty balloon through the introducer sheath in the primary access artery and advance it to the ascending aorta.
2. Reposition the angiographic equipment to the ideal viewing plane. Position the valvuloplasty balloon across the valve, while maintaining strict fluoroscopic surveillance of the distal tip of the guidewire in the LV.
3. Perform balloon valvuloplasty per standard practice and remove the valvuloplasty balloon while maintaining guidewire position across the aortic valve.

9.2.4 Deployment

1. Insert the device over the 0.035 in (0.889 mm) guidewire with the delivery catheter flush ports oriented at 3 o'clock (toward the left side of the patient) to better facilitate commissure alignment (flush ports shown in Figure 4, callouts 7 and 13). Insert the catheter tip and capsule through the access site, while maintaining the EnVeo inline sheath tip against the proximal end of the capsule. Then, insert the EnVeo inline sheath through the access site, maintaining contact with the capsule. When advancing the delivery system, allow the catheter handle to rotate freely after insertion of the system. Maintain strict fluoroscopic surveillance of the guidewire in the LV.

Note: The catheter is compatible with a 20 Fr introducer sheath.

Note: For transfemoral and subclavian access procedures, a separate introducer sheath is optional. For direct aortic access procedures, use a separate introducer sheath; do not use the EnVeo inline sheath. Maintain the EnVeo inline sheath at the proximal end of the catheter throughout the procedure.

2. Under fluoroscopic guidance, advance the catheter over the guidewire to the aortic annulus. To assist capsule advancement, the capsule orientation may be adjusted by rotating the handle a quarter turn before the capsule crosses into the arch. If adjustment to capsule orientation is required after crossing the arch, withdraw the system until the capsule is in the descending aorta and rotate the handle a quarter turn before readvancing.

Caution: Stop handle rotation if resistance is encountered or the capsule does not respond to rotation under fluoroscopic visualization. Do not rotate the handle when the capsule is at or beyond the arch. Continued attempts to rotate the capsule during resistance may result in product failure and/or patient harm.

Caution: There will be some resistance when the catheter is advanced through the vasculature. If there is a significant increase in resistance, stop advancement and

investigate the cause of the resistance (for example, magnify the area of resistance) before proceeding. Do not force passage. Forcing passage could increase the risk of vascular complications (for example, vessel dissection or rupture).

Caution: Persistent force on the catheter can cause the catheter to kink, which could increase the risk of vascular complications (for example, vessel dissection or rupture).

Note: When crossing the aortic arch, it is critical that the guidewire is controlled to prevent it from moving forward. Without proper management of the distal tip of the guidewire, the guidewire could move forward and cause trauma to the LV.

3. Advance the device through the valve. Perform an angiogram to confirm that the pigtail catheter is in position within the noncoronary cusp of the aortic root. Fluoroscopically identify the appropriate landmarks.
4. Position the catheter so that the bioprosthesis is at the recommended target depth of 3 mm relative to the valve annulus. If the implant depth is ≤ 1 mm or > 5 mm, consider recapture (Section 9.2.5).

Caution: Bioprosthesis implant depth ≤ 1 mm may contribute to an increased risk of prosthetic valve dislodgement during valve release, DCS retrieval, or post-implant dilatation. Bioprosthesis implant depth > 5 mm may contribute to an increased risk of conduction disturbances, which may require a permanent pacemaker.

Note: For surgical bioprosthetic valves, consider the features of the valve when determining the optimal placement of the bioprosthesis.

Note: Physicians should consider patient anatomy when determining implant depth.

5. To deploy the bioprosthesis, rotate the deployment knob in the direction of the arrows. The capsule retracts and exposes the bioprosthesis. Continue deploying the bioprosthesis in a controlled manner, adjusting valve position as necessary and noting the position of the radiopaque capsule marker band and paddle attachment.

Warning: Use the deployment knob to deploy and recapture the bioprosthesis. Do not use the trigger for deploying or recapturing because it could cause inaccurate placement of the bioprosthesis.

Note: Consider pacing to increase valve stability during deployment, especially in patients with larger anatomies. Pace at a rate sufficient to achieve a desired decrease in systolic pressure. If pacing at a high rate, consider stepping the pacing rate down incrementally.

Note: Slight antegrade repositioning of a partially deployed bioprosthesis (before the radiopaque capsule marker band reaches the distal end of the radiopaque paddle attachment) can be achieved by carefully withdrawing the catheter.

Caution: Use the catheter handle to reposition the bioprosthesis. **Do not** use the outer catheter shaft.

6. Before the radiopaque capsule marker band reaches the distal end of the radiopaque paddle attachment, evaluate the bioprosthesis position.

Note: When the bioprosthesis is approximately 2/3 deployed, the deployment knob provides a tactile indication as a notification before the point of no recapture. Once the radiopaque capsule marker band reaches the distal end of the radiopaque paddle attachment, it is at the point of no recapture.

7. Either complete bioprosthesis deployment or initiate bioprosthesis recapture.

Note: Shortly after annular contact, the blood pressure will be reduced until approximately the 2/3 deployment point, when the bioprosthesis leaflets are exposed and are functioning.

9.2.5 Bioprosthesis recapture (optional)

The bioprosthesis is recapturable during deployment before the radiopaque capsule marker band reaches the distal end of the radiopaque paddle attachment. Deployment of the bioprosthesis can be attempted 3 times. If the bioprosthesis is recaptured a third time, it must be removed from the patient.

1. Rotate the deployment knob in the opposite direction of the arrows to recapture the bioprosthesis. A partially recaptured bioprosthesis can be repositioned or fully recaptured.

Warning: Use the deployment knob to deploy and recapture the bioprosthesis. Do not use the trigger for deploying or recapturing because it could cause inaccurate placement of the bioprosthesis.

2. To fully recapture the bioprosthesis, continue rotating the deployment knob until the gap between the capsule and catheter tip is closed.

Caution: Stop advancing the capsule once the gap between the capsule and the catheter tip is closed. Advancing the capsule farther could damage the capsule.

3. Reposition the recaptured bioprosthesis at the recommended target depth of 3 mm relative to the valve annulus. If the implant depth is ≤ 1 mm or > 5 mm, consider recapture.

Caution: Bioprosthesis implant depth ≤ 1 mm may contribute to an increased risk of prosthetic valve dislodgement during valve release, DCS retrieval, or post-implant dilatation. Bioprosthesis implant depth > 5 mm may contribute to an increased risk of conduction disturbances, which may require a permanent pacemaker.

Note: For surgical bioprosthetic valves, consider the features of the valve when determining the optimal placement of the bioprosthesis.

Note: Physicians should consider patient anatomy when determining implant depth.

4. Redeploy the bioprosthesis (Section 9.2.4, steps 5 and 6).
5. Either complete bioprosthesis redeployment or initiate bioprosthesis recapture. If the bioprosthesis has been recaptured 3 times, withdraw the recaptured bioprosthesis.

Note: Shortly after annular contact, the blood pressure will be reduced until approximately the 2/3 deployment point, when the bioprosthesis leaflets are exposed and are functioning.

9.2.6 Postdeployment

1. Perform an angiogram to assess the location of the bioprosthesis.
2. Under fluoroscopic guidance, confirm that the catheter tip is coaxial with the inflow portion of the bioprosthesis.
3. Withdraw the catheter to the aorta while maintaining guidewire position.

Note: For transfemoral access, withdraw the catheter until the catheter tip is positioned in the descending aorta. For direct aortic access and subclavian access, withdraw the catheter until the catheter tip is close to the distal tip of the introducer sheath.

4. Under fluoroscopic guidance, close the catheter capsule.

Caution: Close the capsule until it is aligned with the catheter tip. Do not overcapture the catheter tip, because it could interfere with catheter withdrawal through the introducer sheath or cause vessel trauma upon removal.

Caution: Ensure the capsule is closed before catheter removal.

Caution: When using a separate introducer sheath, if increased resistance is encountered when removing the catheter through the introducer sheath, do not force passage. Increased resistance may indicate a problem and forced passage may result in damage to the device and/or harm to the patient. If the cause of resistance cannot be determined or corrected, remove the catheter and introducer sheath as a single unit over the guidewire, and inspect the catheter and confirm that it is complete.

5. Withdraw the catheter until the capsule meets the distal end of the EnVeo inline sheath.

Note: For direct aortic access procedures, maintain the EnVeo inline sheath at the proximal end of the catheter.

6. Withdraw the catheter and EnVeo inline sheath together, and dispose of the device in accordance with local regulations and hospital procedures.
7. Advance a 6 Fr pigtail catheter over the guidewire into the LV.
8. Remove the guidewire and connect the pigtail catheter to the transducer.
9. Using both pigtail catheters, record aortic pressure gradient.
10. Remove the 6 Fr pigtail over a standard, J-tip guidewire.
11. Perform a post-implant aortogram with the reference pigtail to ensure coronary patency and assess aortic regurgitations.

Caution: Overexpansion of the narrowest portion (waist) of the CoreValve Evolut PRO TAV beyond the levels set forth in Table 3 has been demonstrated through bench data to cause damage to the bioprosthetic leaflets. Complaints of damage to the bioprosthetic leaflets during post-implant balloon dilatation have been reported in some clinical cases, resulting in moderate to severe aortic insufficiency, which may be detected acutely or during follow-up.

12. Remove the introducer sheath (if used) and complete the puncture site closure per standard practice.
13. Perform contrast angiography to verify the absence of any vascular complications.
14. Remove the reference pigtail catheter over a standard guidewire. Remove the 6 Fr introducer sheath and close the access site per standard practice.
15. Administer anticoagulation and/or antiplatelet therapy as required according to physician/clinical judgment.

10.0 Return of explanted bioprostheses

Medtronic is interested in obtaining recovered bioprostheses. Specific pathological studies of the explanted bioprosthesis will be conducted under the direction of a consulting pathologist. A written summary of the findings will be returned to the physician. To obtain a product return kit, contact a Medtronic distribution center or a Medtronic Representative. If a kit is not available, place the explanted bioprosthesis in a container of glutaraldehyde or 10% buffered formalin immediately after excision. For further instructions on the return of an explanted device, contact a Medtronic Representative.

11.0 Clinical studies

Information regarding clinical studies and post-approval studies that are applicable to CoreValve Evolut PRO are available on the Medtronic Manual Library website:

1. Point your browser to www.medtronic.com/manuals.
2. Select the geography and language, and then search by product name for CoreValve Evolut PRO. The instructions for use and premarket and post-approval study summaries are listed. The clinical study summaries include the following: study name, applicable device, patient population and indication, sample size, and follow-up duration.

If you do not have web access, you can order printed copies of the clinical study summaries from your Medtronic representative or by calling the toll-free number located on the back cover.

12.0 Disclaimer of warranty

The following disclaimer of warranty applies to United States customers only:

DISCLAIMER OF WARRANTY

ALTHOUGH THE MEDTRONIC COREVALVE™ EVOLUT™ PRO TRANSCATHETER AORTIC VALVE (MODELS EVOLUTPRO-23-US, EVOLUTPRO-26-US, AND EVOLUTPRO-29-US), ENVEO™ PRO DELIVERY CATHETER SYSTEM (MODEL ENVPRO-16-US), ENVEO™ R DELIVERY CATHETER SYSTEM (MODEL ENVEOR-N-US), ENVEO™ PRO LOADING SYSTEM (MODELS L-ENVPRO-1623US AND L-ENVPRO-16-US), AND ENVEO™ R LOADING SYSTEM (MODELS LS-MDT2-23-US AND LS-MDT2-2629-US), HEREAFTER REFERRED TO AS “PRODUCT”, HAVE BEEN MANUFACTURED UNDER CAREFULLY CONTROLLED CONDITIONS, MEDTRONIC HAS NO CONTROL OVER THE CONDITIONS UNDER WHICH THIS PRODUCT IS USED. MEDTRONIC THEREFORE DISCLAIMS ALL WARRANTIES, BOTH EXPRESS AND IMPLIED, WITH RESPECT TO THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. MEDTRONIC SHALL NOT BE LIABLE TO ANY PERSON OR ENTITY FOR ANY MEDICAL EXPENSES OR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY ANY USE, DEFECT, FAILURE OR MALFUNCTION OF THE PRODUCT, WHETHER A CLAIM FOR SUCH DAMAGES IS BASED UPON WARRANTY, CONTRACT, TORT OR OTHERWISE. NO PERSON HAS ANY AUTHORITY TO BIND MEDTRONIC TO ANY REPRESENTATION OR WARRANTY WITH RESPECT TO THE PRODUCT.

The exclusions and limitations set out above are not intended to, and should not be construed so as to, contravene mandatory provisions of applicable law. If any part or term of this DISCLAIMER OF WARRANTY is held by any court of competent jurisdiction to be illegal, unenforceable or in conflict with applicable law, the validity of the remaining portion of the DISCLAIMER OF WARRANTY shall not be affected, and all rights and obligations shall be construed and enforced as if this DISCLAIMER OF WARRANTY did not contain the particular part or term held to be invalid.

Medtronic



Medtronic, Inc.
710 Medtronic Parkway
Minneapolis, MN 55432
USA
www.medtronic.com
+1 763 514 4000
LifeLine Technical Support,
24-hour consultation service:
1 877 526 7890

Protected by one or more of the following United States Patents: 8,226,710 and 7,914,569.



© 2022 Medtronic
M970312A001 Rev. AH