




Power (Wall Jack , USB, Remote Battery, PoE)

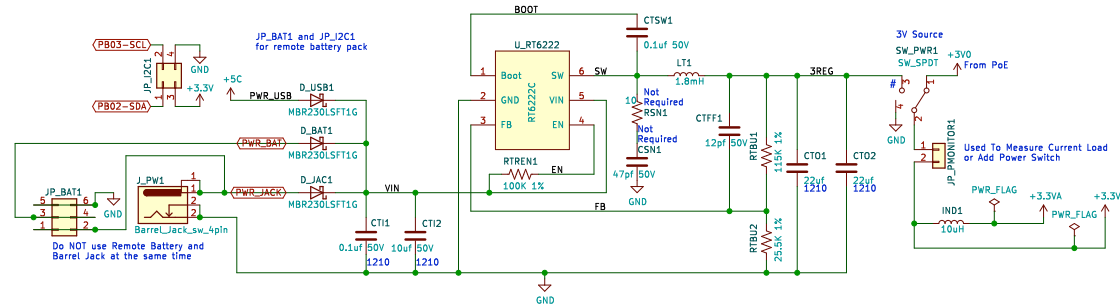


Default LED

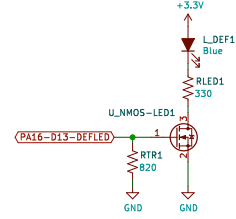


RA8875 TFT Display Jack

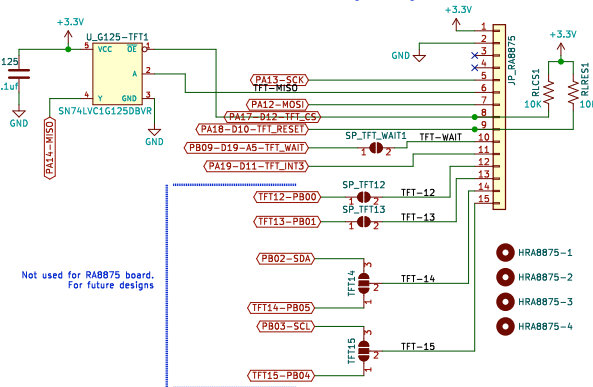


Flash Memory (4BIT or SPI)

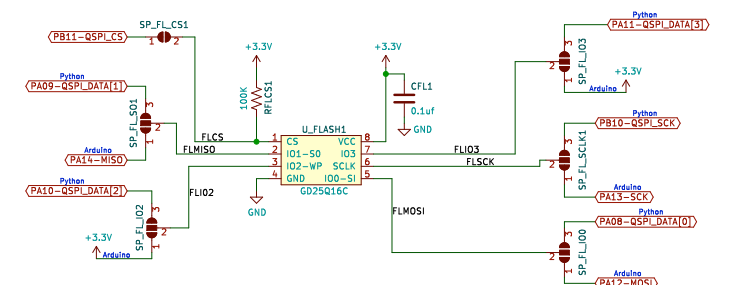


MCP23008

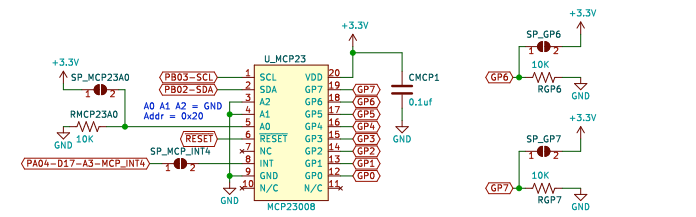


ATSAMD51J19A CPU

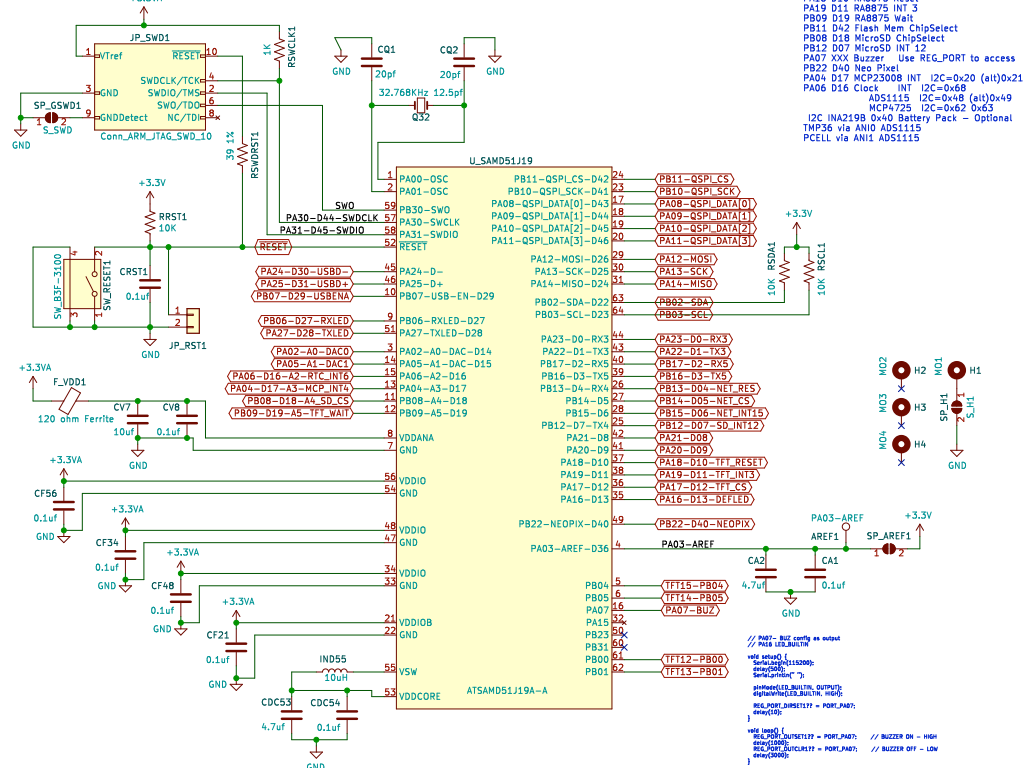


USB

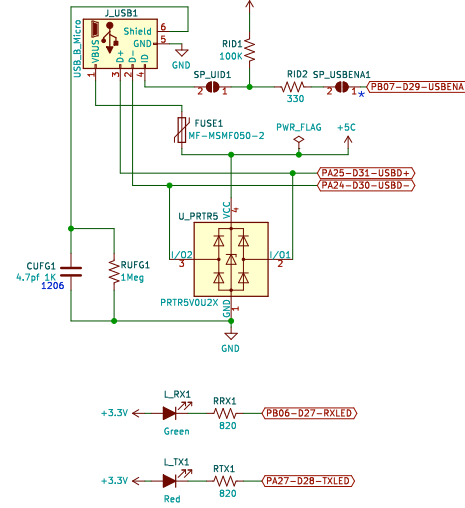


AtoD 12bit

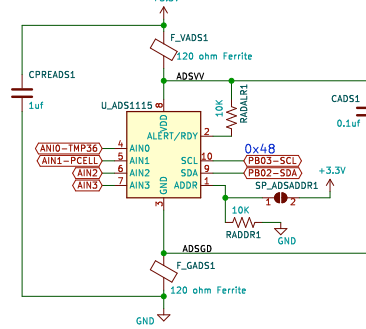


DtoA 12bit

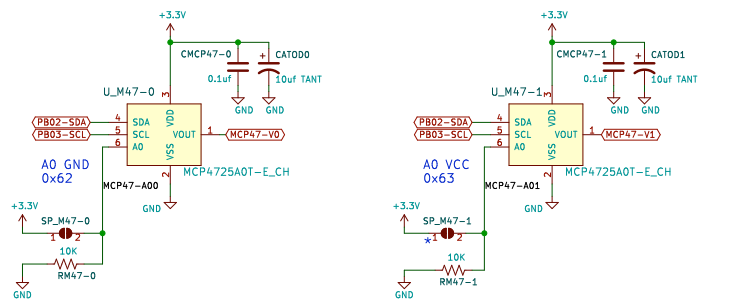


External Jacks

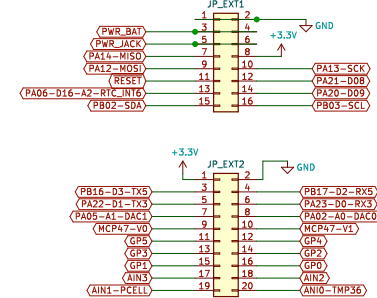


NEO

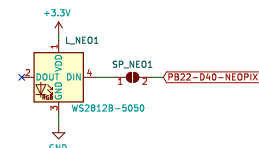


Micro SD

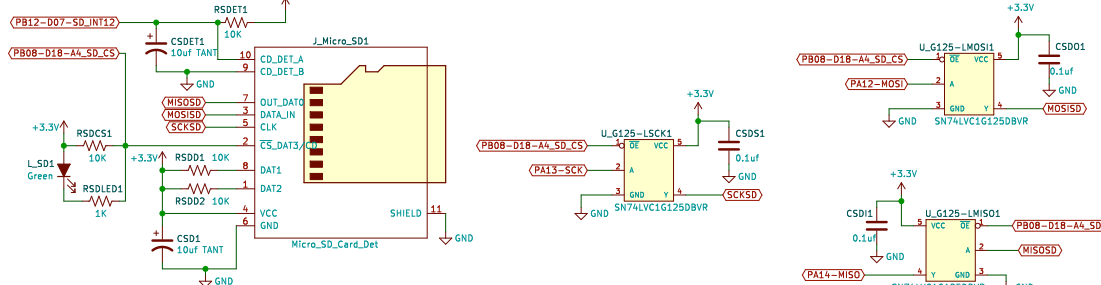


RTC Clock

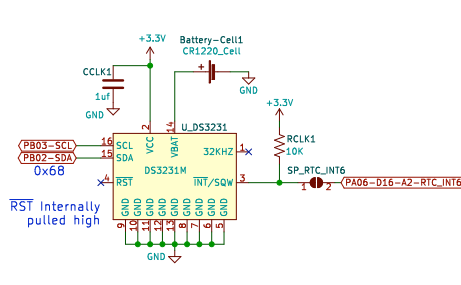

To Network Link

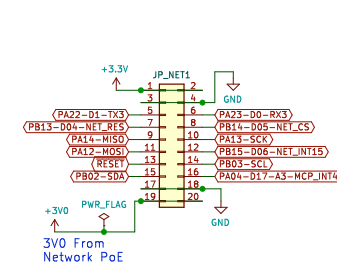

Buzzer

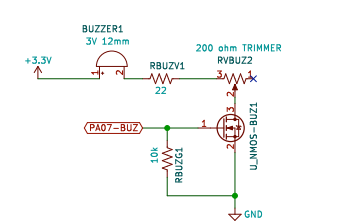

TMP36


 


Photo Cell

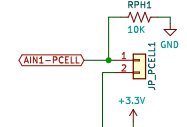

Copyright S. Cooper 2020.
You may redistribute and modify this documentation under the terms of the CERN OHL v1.2.
This documentation is distributed WITHOUT ANY EXPRESS OR IMPLIED WARRANTY.
INCLUDING OF MERCHANTABILITY, SATISFACTORY QUALITY AND FITNESS FOR A PARTICULAR PURPOSE.
Please see the CERN OHL v1.2 for applicable conditions. (<http://ohw.org/cern/ohl>).

Sheet: /
File: Mini51Pad_v01a.sch

Title: Mini51Pad

Size: User Date: 2020-09-03
KiCad E.D.A. kicad (5.1.6-0-10-14)

Rev: 01a
Id: 1/1