

MNemo v2 User Manual v2.6.1


Table of contents

Version	2
Change Log Firmware	3
Change Log MNemoLink	8
Device description	9
Switching Mnemo ON	11
Menu Navigation	12
Main Menu	13
Calibrating the unit	14
Recording the surface pressure	15
Setting the Unit System	16
Setting the water type	17
Calibrating the distance measurement	18
Calibrating the compass	20
Survey Operations	22
Verbose Mode (legacy)	23
BASIC Mode (Recommended)	27
BASIC Mode Click Commands	31
LRUD (Cave Profile description)	33
About Stabilization	35
Interference Marker	36
Surveying - The big picture -	37
Survey History and Direct View	38
Memory management	40
Display Settings	41
Battery	42
Extras	45
MnemoLink - Data Transfer	48
Wireless Data transfer	52
Firmware Update	57
Maintenance	59
Tips and Tricks	60

Version

This user manual applies to firmware v2.6.2 and higher.

This firmware requires MNemoLink 1.4.5 / Ariane 24.1.1 or higher.


 the latest firmware is available here (<https://github.com/SebKister/Mnemo-V2/releases>) and the upgrade procedure is explained here ([Firmware Update](#))

If you wish to contribute to this user manual, it can be done on its public repository on GitHub (<https://github.com/SebKister/MNemoV2Documentation>).

The documentation is written in Markdown (<https://www.markdownguide.org/>) language and structured using WriterSide (<https://www.jetbrains.com/writerside/>)

Change Log Firmware

Firmware v2.6.2

- Added icon  to signal the depth variation is bigger than length of line.

Firmware v2.6.1

- Support for MNemoLink network scan

Firmware v2.6.0

- Added 2 new click sequences ([BASIC Mode Click Commands](#)), active during "Stand By", to set survey direction in BASIC mode. LEFT-LEFT-LEFT-LEFT for IN survey and RIGHT-RIGHT-RIGHT-RIGHT for OUT survey.
- During the **Stand By** screen a index of the click combination is displayed.
- In basic mode Naming of section is now incremental (B01,B02 etc), counter gets reset when memory is.
- The name of the section as well as the direction get displayed beneath the shot counter

v2.5.4

- Add a marker with a unique ID to a station in basic mode by using a combination of clicks: LEFT-LEFT-LEFT-RIGHT
- Marker number gets displayed on live and history map
- Live survey map can be displayed in BASIC mode using a combination of clicks: LEFT-RIGHT-LEFT-RIGHT
- You can access the LRUD entry mode in BASIC mode using a combination of clicks: RIGHT-RIGHT-RIGHT-LEFT

- Added statistics page in history section after displaying the map
- In settings there's a new option to use Icons instead of text for BASIC survey indications
- In settings there's a new option to adjust the contrast of the display.
- Menu simplified for water type, unit and survey mode settings. All testing and debugging mode are now regrouped in Test Mode.
- Bold font used in BASIC mode to increase readability.
- BASIC mode input progress bar optimized to show smoother progress.
- Bug Fix: the device would enter sleep mode in Verbose survey, this could lead to DMP corruption (*no data loss*)
- Bug Fix: Update was missing from Menu

v2.4.12

- Battery voltage display has been replaced by a percentage of charge available.
- On the main menu voltage gets displayed in red when <20% (+/- 40 min of survey left)
- During survey an icon is displayed in BASIC and VERBOSE survey mode indicating low battery (<20%)
- When battery reaches 0% the device is safely shutdown avoiding memory corruption that could occur if this happened during the survey phase.
- Improvement in the Extra>Test mode, more data displayed and possibility to adjust parameter live with CLI in this mode.

v2.4.9

Feature update:

- Changed doze and sleep time to 5 min and 20 min
- Double Tap sensitivity can now be adjusted
- Support for HW variant with RV-3028-C7 RTC

- Improved accuracy of slider button
- Randomize position of screen saver image

Bug Fixes:

- Fix issue where double tap light threshold was reset
- Pressure sensor change gets now saved after change
- Fixed display pixelization on startup
- When last shot is erased in Verbose mode it gets now also erased from current map
- Allow lower values of click threshold than 20
- Progress bar no longer erases shot number in verbose mode

v2.4.0

- Added interface to save values for LRUD (Left-Right-Up-Down) profile measured or estimated values. This feature is available in Verbose survey mode only for the moment.
- Fixed issue in Double Tap activated map display.
- When in and out azimuth difference is bigger than 5deg an icon will indicate it.
- Added display of Wi-Fi connection quality on main screen. Wi-Fi auto turn off after 5 min of inactivity.
- Added Setting page to webserver allowing to adjust most MNemo settings through the Wi-Fi interface.
- Text display uses now anti antialiased fonts.

v2.3.0

- Added Warning icon on display when magnetic interference detected
- Record temperature and time at each station.
- Increased size of font in the menu of the Verbose survey mode

- Added CSV file download to the webserver
- Added individual Section CSV download link on the main webpage
- Check for valid date at start
- When wheel mode (WM) is different than 0, reverse direction functionality is disabled
- Fixed bug in display when depth >100

v2.2.18

- Added MN logo to flash screen instead of white background
- Added reset default settings to menu.
- When compass calibration is finished progress bar turns from red to yellow
- Added command to adjust pic switch on threshold. New firmware for PIC

v2.2.16

- Replaced blinking led in Doze mode by blinking screen
- Changed OLED refresh rate

v2.2.14

- Added white blinking led in Doze Mode
- Fixed bug with surface pressure setting getting corrupted

v2.2.13

- Added CLI command to activate/deactivate the requirement to move the cursor right to turn on the MNemo: `activatesafeon` / `deactivatesafeon`
- Added message indicating that parameters have been updated with the firmware

v2.2.12

- Changed BASIC mode display, added display of station number and color change on whole screen.
- Added setting to deactivate double tap map display. Accessible through CLI: `activatedoubletap/deactivatedoubletap`
- Added setting to control length of click in BASIC mode. Accessible through CLI: `setBMclickfactor factor` (factor between 20% and 150%).
- Support for BNO085 as secondary compass.
- Fixed bug when SSID or wifi password contain whitespace character.
- Fixed bug in month settings

Change Log MNemoLink

MNemoLink v1.4.5


- Network scan for MNemo
- Support for Android platform

MNemoLink v1.4.0

- Automated firmware update process

Device description

Thank you for your interest in the MNemo (<https://www.arianesline.com/mnemo/>)! We will start with a short description of the components of the device

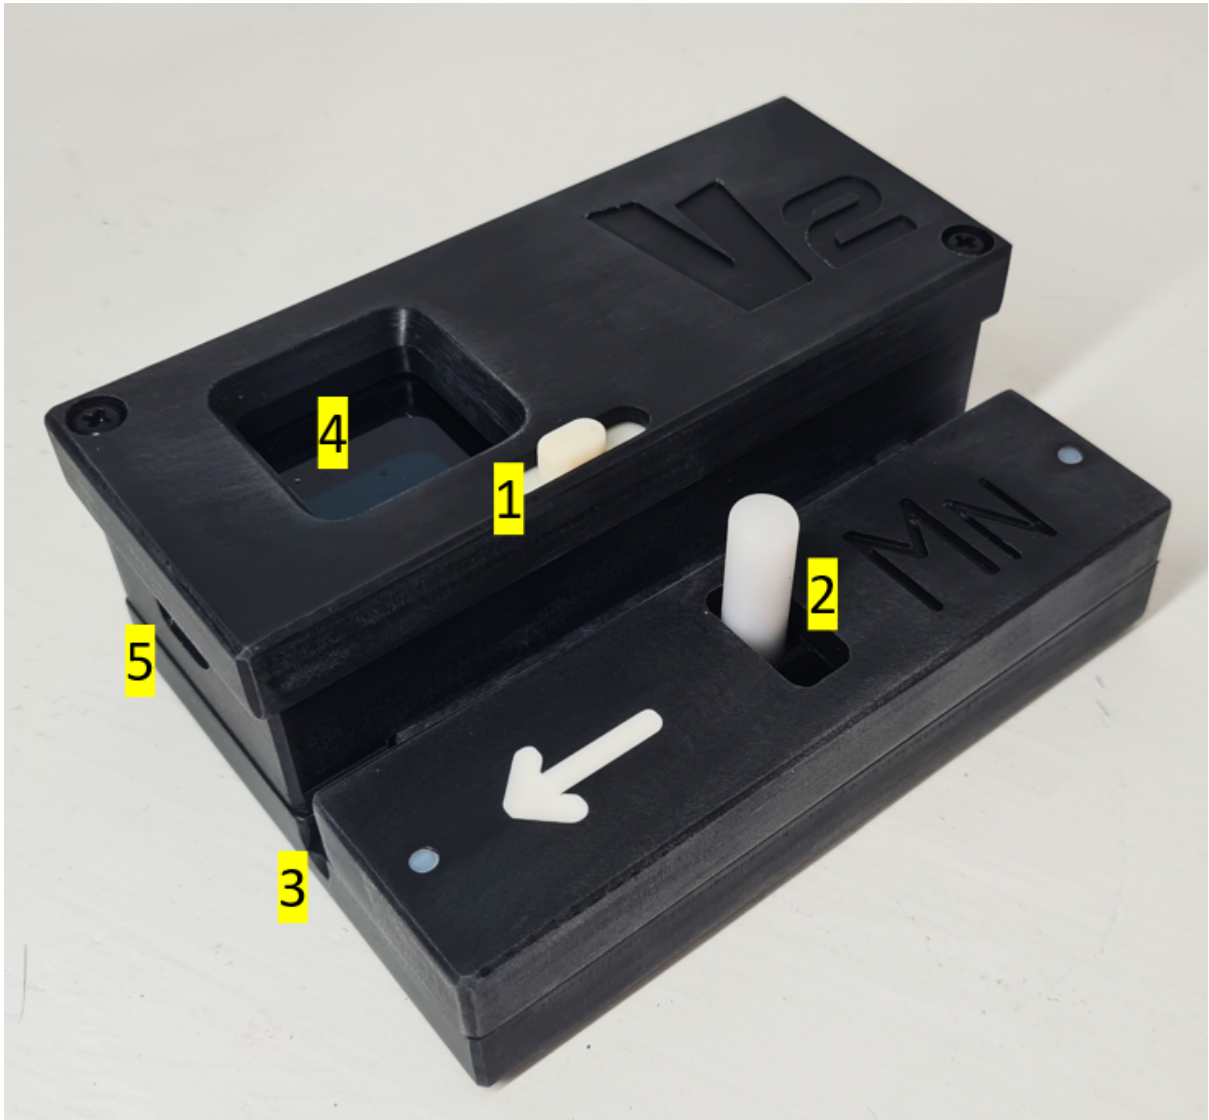

image_1.png


1 - Slider Control

It's through this slider that you're gonna interact with the MNemo.

- Moving the slider **Left** is the equivalent of an *Enter* or *Select* order.
- Moving the slider **Right** is the equivalent of a *Next* or *Scroll* order.


2 - Pressure Plate lever

This is the part you will have to pull back to open the device and lock the cave line in it.

 Tip: When pulling the plate back apply the pressure at the bottom of the lever

3 - Line Slot

This is where the cave line will slide through the device after opening and releasing the pressure plate lever.


 The device will fit line up to 6mm diameter

4 - Display

The device has an OLED graphical color display. The text, icon and background colors will guide you through the survey process.

5 - USB Port

This is the port used to connect your device to your computer to adjust settings or download data


 The recommended way to download data is through wifi either by connecting your device to the local network or activating it as Wifi Access Point

It is also the port used for charging the device. Any 5V USB charger or computer USB port can be used to recharge the MNemo.


Switching Mnemo ON

There's no **ON/OFF** switch on the device. You'll switch the device ON using the slider control described in the previous section.

- Move the slider control to the **left** and hold it there until a led turns on, on the right side of the screen. At that moment move the slider to the right and the device will turn on displaying info about the firmware and the serial number of the device.


 Tip: If you can't see the led just count to 6 before moving the slider to the right.

- When this appears, it means MNemo has booted properly, and all the sensors are working. Move again the slider to the left and you'll be in the main menu.

 Tip: You can deactivate the requirement to move the cursor to the right with the *SwitchONSafety* setting.

Menu Navigation

Each menu will have an active or selected item that will be surrounded by >....< or **highlighted**.

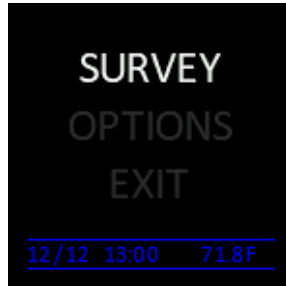

screencap1702386075.png



screencap1702386094.png

Moving the slider to the **right** is shifting the selected item to the next one (Either on the right or beneath).

Moving the slider to the **left** is equivalent to the “Enter” key of your keyboard. It selects the current item or starts the action highlighted or selected.

Main Menu

You will notice that the bottom line of the menu is displaying a stream of information:

26/03 11:26 27.6°C	<i>Day/Month Hour:Minute Water Temperature</i>
84% (FW)(m) M:0%	<i>Battery Charge % - Type of water - Unit - Memory usage</i>

The date and time format can be adjusted in MNemoLink (<https://www.arianesline.com/mnemo/>), the software used to interface the Mnemo with your computer. It is synchronized automatically with the date/time of your computer each time you connect it and download the data within the software.



Tip: If the date is not set or set incorrectly it will be adjusted to a default date. You'll get a message indicating this when you turn the Mnemo on.

Calibrating the unit

Before starting a survey MNemo's sensors need to be calibrated and certain parameters need to be adjusted

- Setting the units used by MNemo (Meter or feet)
- Selecting the type of water you are diving in (Fresh or Salt)
- Adjusting the surface pressure
- Adjusting the line measurement factor
- Calibrating the Compass


⚠ All the settings and calibration are kept in memory when you turn MNemo off. *This is a major difference with Mnemo v1 that required calibration of the compass for each session.*

Recording the surface pressure

The device calculates the depth by measuring the variation of pressure between the surface and where it is located under water. Therefore it needs to have a reference measurement of the surface pressure. This can be done by navigating to :

OPTIONS > SENSORS > DEPTH > SURFACE

Once you get the *CALIBRATED* message on the screen that means the device recorded the current atmospheric pressure as reference.

 This needs to be recalibrated mainly when diving at altitude or diving during extreme weather conditions

 Obviously ... ***DO NOT ADJUST SURFACE PRESSURE IN THE WATER***

Setting the Unit System

You can select either the metric system (using meter and °C) or the imperial system (using feet and °F) to be displayed on the MNemo. In the menu navigate to :

OPTIONS > SETTINGS > UNIT (*m or ft*) to select the active unit system.



The unit system used on the device can be different from the one used in your mapping software

Setting the water type

You have the choice between fresh and salt water and you can access the option by navigating in the menu to :

OPTIONS > SENSORS > DEPTH > WATER (*fresh or salt*)


Calibrating the distance measurement

Manual Calibration

In the menu navigate to :

OPTIONS > SETTINGS > SENSORS > DISTANCE

and adjust the factor by small changes using the + and - menu entries. After each change take a length measurement of a line with a known length and compare the result. If the measurement is too short increase the factor otherwise decrease it.

 This is not the recommended way to calibrate the length. The Auto mode described below is recommended.

Automatic Calibration

- Put in place a line with markers separated by 5m precisely if the unit is set to METER, or 15 ft if set to IMPERIAL.
- Select **OPTIONS > SETTINGS > SENSORS > DISTANCE > AUTO**
- Take a measure between those two markers as if they were two stations(tie-offs) in a cave.

 The Standard survey process is explained here ([Verbose Mode \(legacy\)](#))

- Once done you'll get a message Adjustment : X , X being the adjustment factor (*How much the factor needs to be changed to have a good measure*).
- Repeat that operation until you get an adjustment factor of **0** or **1**.



Tip: If at any point during a survey dive you realize that the line measurement is not working anymore, change the parameter WM to the value 1 or 2 instead of 0. Try both setting to find the one that is still working.

Calibrating the compass

This is by far the most important calibration of the MNemo.


- To have a precise and correct calibration it is CRUCIAL to be far away from any magnetic or electromagnetic disturbance, in particular : Scooters, steel tanks, compasses, dive computers, dive light canisters.
- Avoid also: Electric line, cars, any electric motor, metallic structure, reinforced concrete walls etc ...

From the main menu select

OPTIONS > SETTINGS > SENSORS > COMPASS > CALIBRATE or CALIBRATE FAST


You must rotate slowly (as in one full rotation per 4s) randomly the Mnemo on all of its 3 axis in order to perform the calibration.

If you are not using the *fast calibration* mode, the device will expect a measures uniformly distributed in the 3D sphere around it. That can take some time and practice to get done.

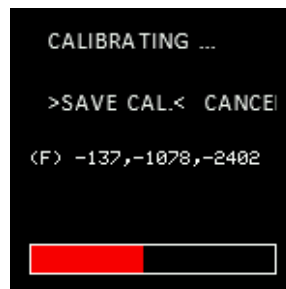

screencap1702386279.png

The display will show a red progress bar indicating the advance or the calibration process.

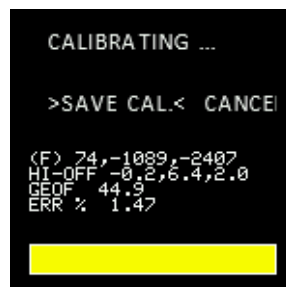

screencap1702386404.png

Once the calibration gets close to completion it will turn green and you'll have more information displayed on the screen

The relevant information is the amount after ERR% which indicates how close the calibration brought the compass to the theoretical model (uniform magnetic field in any orientation). This value should be smaller than 1%.

GEOF is the approximation of the magnetic field at that location. The compass of the Mnemo is not calibrated to give precise absolute magnetic measurements, nevertheless that gives you an indication of the strength of the magnetic field at your location and should be close to the theoretical value (NCEI Geomagnetic Calculators

(<https://www.ngdc.noaa.gov/geomag/calculators/magcalc.shtml?useFullSite=true>))

⚠ After a firmware update is generally recommended to redo a calibration of the compass but it is important to turn the device completely off before doing the calibration or you'll get incoherent measurements

⚠ I can't insist enough on the fact that there's NO WAY to get a precise survey without a precise and correct calibration of the compass. The average calibration time is 1min in fast mode and up to 10min in standard calibration. If the calibration is not finished after 10min, turn MNemo off and on again and restart the calibration.

Survey Operations

The Mnemo has two survey mode, you can select which one you preferably want to use in


OPTIONS > SETTINGS > SURVEY (BASIC *or* Verbose)

- **BASIC:** This is the recommended survey mode. It does not require from you to read the display, just recognise the background color.
- **Verbose** (*legacy - it will be removed in future versions of the firmware*) This one is easier to start with and offers some options not available in BASIC mode. It requires to have the ability to read the text on the LCD.

Verbose Mode (legacy)

Starting a survey

From the main menu select **SURVEY** The screen will display options similar to:

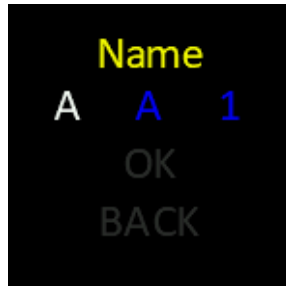

screencap1702386471.png


In this menu you can choose the name of the section you are surveying.

Section in this case means the section of the survey which can differ from the section of the cave you are working in.

In our example the section is called AA1. You can navigate from one letter to the other moving the slider to the *right* and change the current letter by moving the slider to the *left*. Once done select OK.

The menu will give you the choice of the direction you are surveying, IN or OUT.

- **IN** means you are going from already surveyed stations to new ones
- **OUT** means you are coming from new stations going towards already known ones.

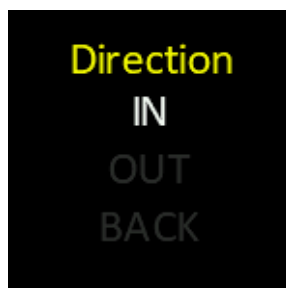

screencap1702386497.png

⚠ NOTE : The reference shot that you had in Mnemo v1 are no longer used in v2

Surveying a shot

To survey a shot:

- pull the pressure plate lever
- insert the line into the slot
- release the lever
- make sure the line is not trapped
- slide the device to the beginning of the shot (Entry Station)

Select **START**



screencap1702386517.png

The display will show a *RED* square:



screencap1702386533.png

At that point the device is waiting to be stabilized to measure the azimuth.

⚠ THE ONE THING TO REMEMBER FROM THIS USER MANUAL: Don't hold the device in your hand, rather support it from beneath so it can use the tension in the line to self align and take the most accurate measurement possible.

The display shows a *BLUE* or *PURPLE* square with a dot in it when the compass has measured the first azimuth.



screencap1702387226.png

You can now move the device along the line all the way to the next station. The display will be flickering that BLUE/PURPLE square indicating that the wheel is spinning and measuring the length of the line. The device measures the line in both direction allowing you to compensate for big diameter tie-offs. *If the line is too loose the length reading will be incorrect.*



You can use Mnemo v2 in reverse direction of the engraved arrow, the device will automatically reverse the azimuth

If the device is flickering BLUE/RED that means it has been dragged along the line before the stabilization phase was over, you should start the survey of that shot again.

When you reach the next station, select **STOP**

The display turns red waiting to stabilize and measure the second azimuth.

Repeat the operation ...

Once you reached the last shot of your section select **END**

This will save the section. You are back to the main menu ready to survey the next section !

Cancelling / Retaking a measure

If you want to retake a measure, there are two possibilities:

- Either you are still in reading mode (BLUE/PURPLE background), in this case just select BACK and you can retake the measure you were taking.


- You finished the measure (WHITE background waiting for next measure), in this case you can select UNDO to erase the last saved measure and take it again.

BASIC Mode (Recommended)

From the main menu select **SURVEY**

⚠ NOTE: The KNOT mode of Mnemo v1 has been removed

You'll notice a flashing **green** screen displaying STANDBY or an icon as well as the direction selected for the survey (IN is default but it can be changed using a click command ([BASIC Mode Click Commands](#)))

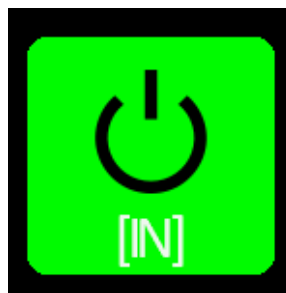

screencap1702908880.png

⚠ You can select in **OPTIONS > SETTINGS > UI(ICON or TEXT)** if you wish to have the text or the icon displayed in each phase of the survey

From now on you don't need to be able to read what's displayed on the screen. The color alone will give you information on which phase of the survey you are in.


⚠ In BASIC mode the slider button doesn't work by impulses, you'll have to hold the slider during a certain amount of time (more or less 2s) to give and validate a SELECT or NEXT command. A red progress bar on the top screen will show the progress, the command only gets validated once the progress bar is complete.



screencap1702387287.png

⚠ You can adjust the amount of time required to validate a command in the Setting section of MnemoLink

- From STANDBY mode, to start a section hold the slider left the screen turns WHITE, this indicates READY mode.

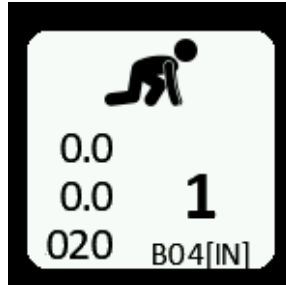

screencap1702908903.png

⚠ By default, in any BASIC survey mode all surveys are recorded IN and are named “BAS”. You can then later sort out the data on your favorite survey software.

- Clip the device on the line at the beginning of the first shot.
- Hold the slider left the background turns RED, you are in STABILIZE mode (same as in Verbose survey mode).



screencap1702387334.png

- Once stabilized, the device goes in READING mode, you can now move along the line, you'll recognize the flickering BLUE/VIOLET square you already had in Verbose survey mode indicating the wheel is measuring the line



screencap1702909323.png

- Once you reach the end of the shot hold the slider left again, the background turns RED, you are in STABILIZE mode.



screencap1702387334.png

- Once stabilized the background becomes white again, you are back in READY mode.



screencap1702909377.png

- You can repeat the operation for the following shots.



INOUT

The curve icon you can see in the last picture indicates that the measurement of the azimuth at the start and the end of the shot has a difference of more than 5 degrees.




You might also find this icon which signals the change in depth is bigger than the length of the line. This usually happens on very steep shots.

Once you have finished the section, when you are in READY mode, to save the section move the cursor to the right. This will save the data and put the device back in STANDBY mode (Blinking GREEN).

To exit BASIC survey mode, from the STANDBY mode, hold the cursor to the right during 3s.

BASIC Mode Overview

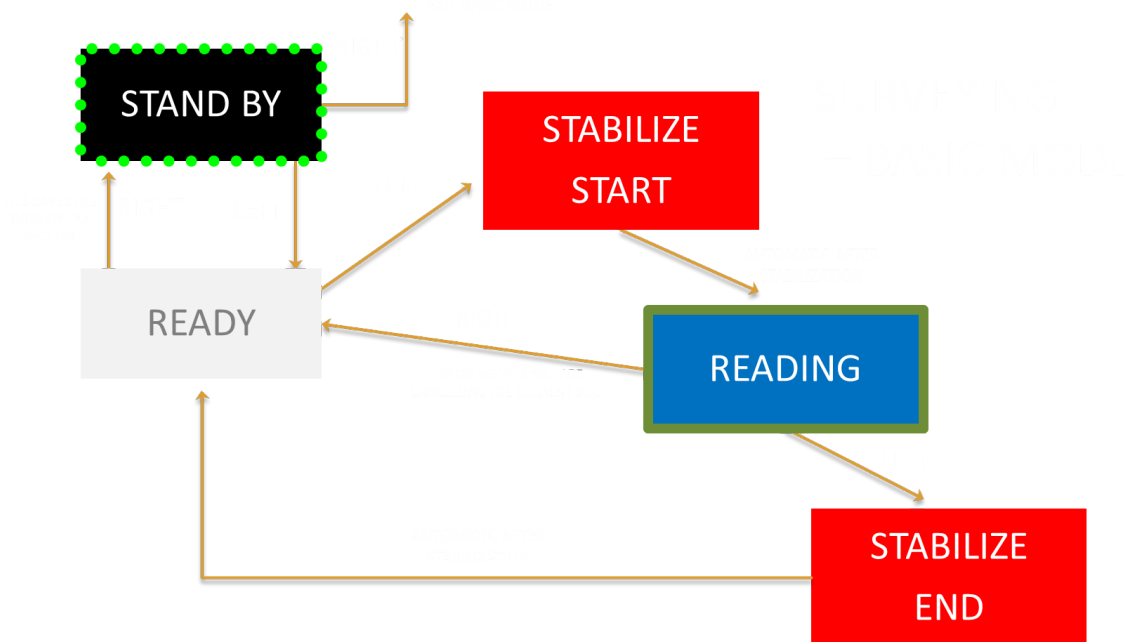

image_4.png

BASIC Mode Click Commands

This is a new feature introduced in v2.5.4


Whereas the BASIC mode uses long clicks to validate the main commands you can use shorter click combinations for auxiliary actions in BASIC mode:



screencap1702908871.png

- You can **add a marker**  with a unique ID to a station:

LEFT-LEFT-LEFT-RIGHT

 Markers will appear on the live map with their unique ID

- You can display the live **survey map**:

LEFT-RIGHT-LEFT-RIGHT

- You can access the LRUD ([LRUD \(Cave Profile description\)](#)) entry mode:


RIGHT-RIGHT-RIGHT-LEFT

- You can select the *survey direction* as **IN**:


LEFT-LEFT-LEFT-LEFT

- You can select the *survey direction* as **OUT**:

RIGHT-RIGHT-RIGHT-RIGHT

 Changing the survey direction can only be done while in Stand By (Green) mode

⚠ In Basic mode when you do short clicks you'll notice dots appearing at the top of the screen, RED for left clicks and GREEN for right, they are here to help you enter click commands

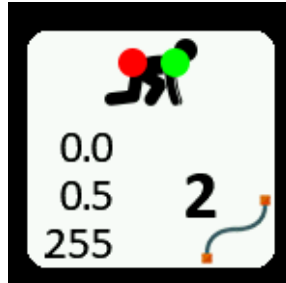


screencap1702387379_clicks.png

LRUD (Cave Profile description)

You can enter LRUD (Left-Right-Up-Down) measurement (or estimation) values to describe the corridor section of the cave at each station.

- In Verbose survey mode this is done by going to
OPTIONS > SETTINGS > LRUD(LIST or INC)

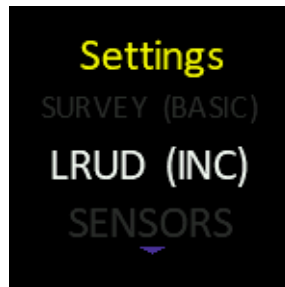


screencap1702472663.png

- **INC:** In this mode the numerical value will increase gradually. It is the slowest of the two modes but allows to enter precise values
- **LIST:** In this mode the numerical value will increase according to a predetermined set of lengths. It's the fastest mode and typically the one used when value are estimated rather than measured.
- In BASIC Mode, you enter the LRUD menu when you are on the READY screen (the one with WHITE background) with a click combination:


LEFT-RIGHT-LEFT-RIGHT

Once you are on the LRUD entry screen you increase the value moving the cursor left and go to the next value moving it right.

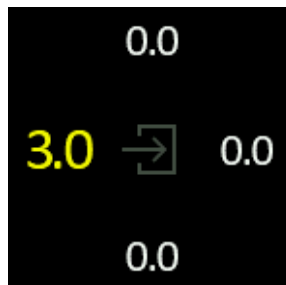

screencap1702472741.png

Finally you exit the screen by selecting the button in the middle :

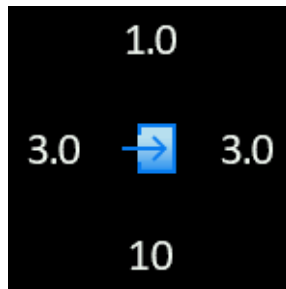

screencap1702472758.png

About Stabilization

In which ever survey mode you use the Mnemo the **stabilization** phase is indicated by **RED background color**.

If during stabilization the red background starts flashing, that means the device is not flat enough (ie. rolling too much on one side or the other). In this case rotate the device around the line until the blinking stops, then stay stable and the measure will be taken.

The rotation tolerance is quite large (about 30° on each side of the line) so this should not be a major issue.

Interference Marker

During your survey, if you see an icon of a magnet flashing on your screen, that means the device has detected a magnetic interference.



magnet.png

That flashing will only last for 5s, when it stops it doesn't mean the problem is gone, just that you were warned. In such a case make sure that no part of your equipment has magnets or other elements that could strongly interfere with the compass.

Surveying - The big picture -


An important thing to remember is that once you are using MNemo it is not necessary to read the display for each operation. The color will indicate the operational phase. Familiarity with MNemo allows your focus to be on the safety of your dive and a global cave/environment awareness. BASIC mode makes it even easier, we recommend that mode for all your surveys.

With a bit of practice you can survey at the same speed you'd normally swim in a cave (15-20m/min).

Survey History and Direct View


You can access the history of your surveys on the device in the Menu in

OPTIONS > HISTORY It will display a list of all teh surveys on your device. By selecting one of those surveys you'll get access to a map of that survey as well as some basic statistics.

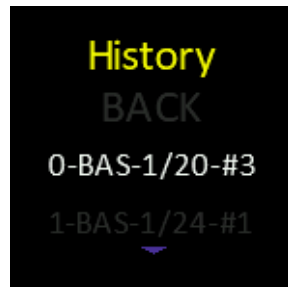


screencap1702463019.png

At any time, you can access the latest survey, or the survey being done by double taping the back of your Mnemo. It will display a map that will orientate according to the orientation of the device if you are in survey mode, otherwise oriented north.

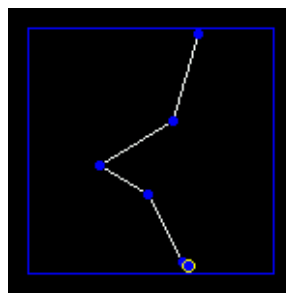


screencap1702463128.png

Give an impulse left to the slider button and you will have a screen displaying info on the current survey.

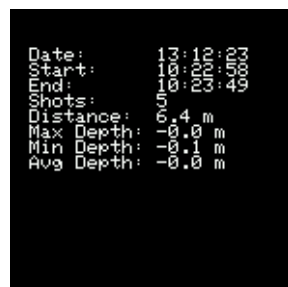

screencap1702463138.png


One more slide and you are back where you started from. This feature can be deactivated and its sensitivity adjusted with the “Double Tap” setting in MNemoLink.

 In BASIC mode, you can also access the current survey map and info by using clicks (details here ([BASIC Mode Click Commands](#)))

Memory management

Mnemo can save around 5000 measures. You can see the amount of memory used on the bottom bar in the main menu.

You can erase the memory by going to: **OPTIONS > SETTINGS > MEMORY**

 We recommend downloading the data from the MNemo after each survey session, backing up the data as DMP and erasing the data from the device in order to start next session with an empty memory.

Display Settings

You can adjust the orientation of the display by going to :

OPTIONS > SETTINGS > LCD ORIENT.(X)

Each time you click on the menu entry the screen will rotate 90 degrees.


Below that setting you'll find the display contrast adjustment, its value goes from 2 to 16, 16 being the brightest.

Battery

- The Mnemo contains a 2S - 450 mAh sealed lipo battery.
- The Mnemo can be recharged using either the USB port of your computer or a dedicated charger. It requires no more than 150mA charging current.
- The red LED indicates that the charge is in progress. It will turn off when the charge is complete.



It is recommended to have the Mnemo turned OFF before connecting for a charge.

 Note that if the device is ON and connected to a charger, it will not turn off when you select EXIT in the main menu but simply go into Energy Saver mode (Blinking Battery on the screen)


Extras

Navigate to : **OPTIONS > EXTRAS**

You'll find a list of Tools

- **GAUGE:** A depth gauge indicating depth and absolute pressure
- **TEST:** A mode to test the reading of all sensors, pressure, magnetometer, inclinometer etc
- **ONE-GO(OFF):** *NOT DOCUMENTED, leave on OFF*
- **WIFI_AP(OFF):** When turned on the device will create a Wireless Access Point (*SSID: **Mnemo** Passord: **password***) to directly read the data on the Mnemo without the need of a local wireless network.
- **MAGNETO:** Magnetic analysis tool

You can use the Magneto feature to analysis how strongly your dive equipment affects magnetic reading.

 The earth magnetic fields goes from 25uT to 65uT depending on your location.

By moving the Mnemo closer or further from your equipment you'll get a reading of the strength of the magnetic field that is created.

- Here you can see that the magnetic field is between 32.92 and 33.44 when the device is left without any outside disturbance<



20221008_162530.jpg

- When we move a dive light around the Mnemo the magnetic field is this time fluctuating between 30.55 and 37.49 which is a huge difference !



20221008_162632.jpg

MnemoLink - Data Transfer

The Mnemo v2 is supported on Microsoft Windows(>7), Apple Mac OSX (>10.6) and Linux (Kernel >5.0.0)


Currently there's no driver installation required for the Mnemo v2 on any of the supported operating system.

MNemoLink is the software that interfaces your Mnemo v2 with your computer, allows the download of the data as well as the visualization of the survey. It also allows to adjust certain settings that are not available on the Mnemo menu.

You can download the software here (<https://www.arianesline.com/mnemo/>)

Connection

Connect the USB cable to the device as shown on the picture and then to your computer. The order is important.

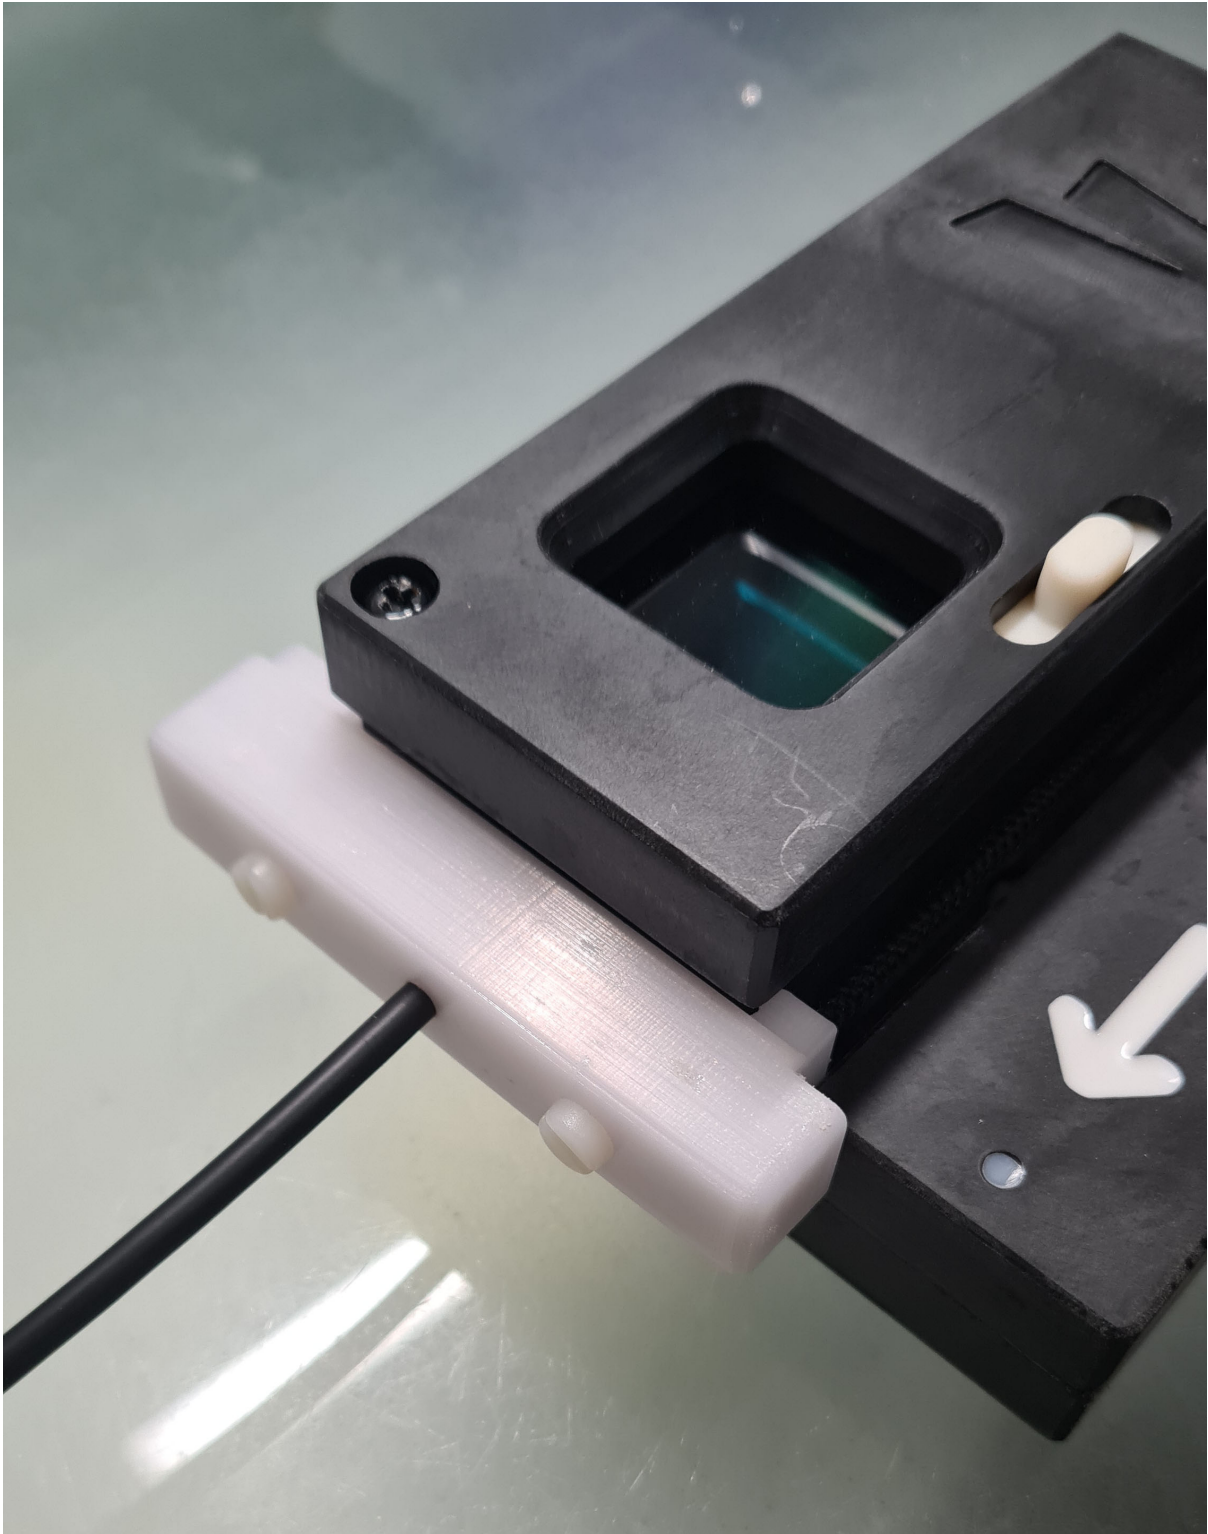

20221002_111940.jpg


The blue led indicates that the connection to the computer/charger was successful.



Turn on MNemo. At that point your computer should have recognized the device.

Launch MNemoLink

You can now launch MnemoLink application on your computer.

 If “Mnemo not detected” appears in the right corner, make sure the connector is properly placed on the Mnemo and the device is turned ON than press the refresh button in the middle of MNemoLink's window.

If the connection is successful, you should have the serial number of your device displayed in the upper right corner.

The **Data** tab will give you options to *download* and *save the survey data contained* on the MNemo as DMP and various other formats that you can use in your favorite survey software.

The **Setting** tab will give you access to different settings of the Mnemo that are not accessible through the settings Menu. Most of those are self explanatory. The ones locked are factory settings that should not be modified. MNemoLink will save the data on the device in an Excel sheet. You can then copy-paste it in your favorite mapping software.


The **CLI** tab is for advanced command line based interaction with the MNemo.

Wireless Data transfer

Local Network


- Connect your Mnemo to your computer and open MNemoLink.
- In the Settings Tab you can manage the known wireless networks.
- Click Get Current to get the list of the current networks. (This list is empty when you buy the device)
- Enter the name and the password of your network
- Press Add New and the network will appear in the list

⚠ The network name and password should not contain |Space| characters and be on 2.4GHz.

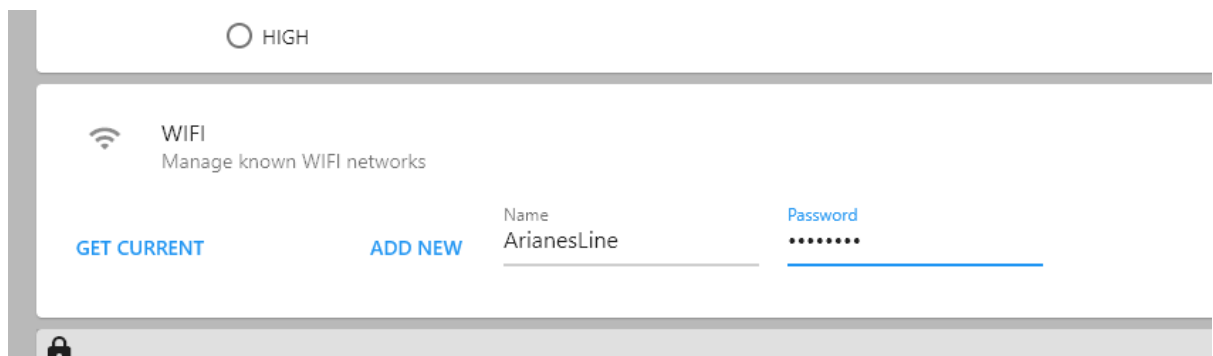

mnemolink-wifi.png

- On your Mnemo navigate to **OPTIONS > WIFI (OFF)**

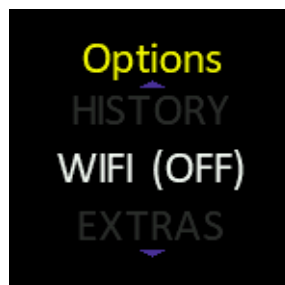

screencap1702387436.png

 
- The Mnemo will then try to connect to the known networks.
- If successful it will come back to main menu and ***display the IP address of the device.***



screencap1702462281_mod.png

⚠ The icon in the top left corner indicates the strength of the wireless connection between the router and the MNemo.

You can now navigate in your favorite internet browser to the displayed IP address and click on the Download DMP link or preview the surveys



MNemo

SN: 009315501C759D60

[Download DMP](#)

[0-BAS-0/8-#2](#)


[1-BAS-0/8-#5](#)

browser_main.png

MNemo

SN: 009315501C759D60

1-BAS-0/8-#5

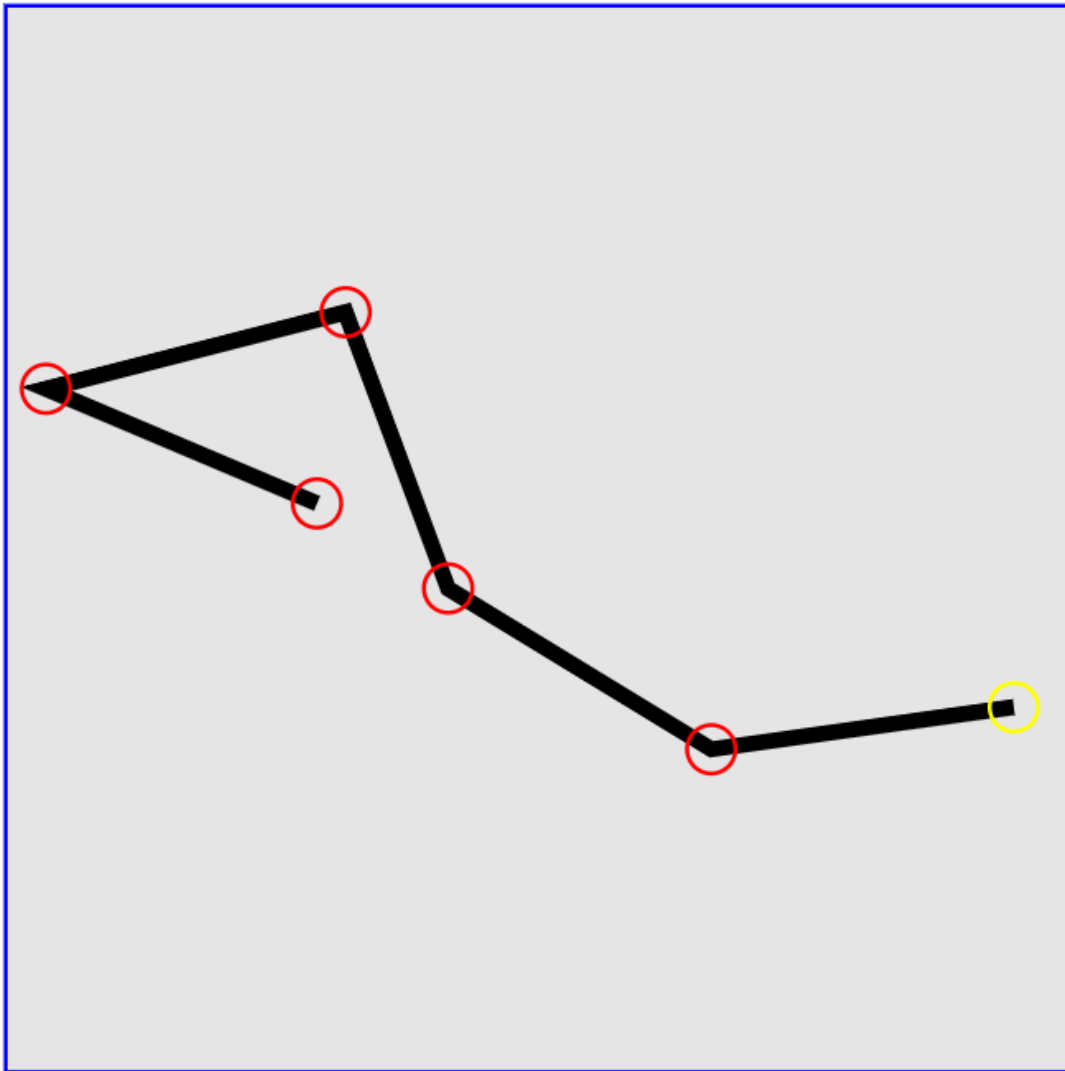

browser_map.png


The Mnemo as Wireless Access Point

If your local network is not accessible you can also configure the MNemo as a Wireless Access Point. Navigate to OPTIONS > EXTRAS > WIFI AP(OFF) and select the entry.

You can then connect your computer (or phone) to the wireless network created (*SSID: Mnemo Passord: password*) and navigate to the displayed IP address as you would do on your local network.

Network Scan and data download with MNemoLink

You can use MNemoLink to scan your Network and find your MNemo.

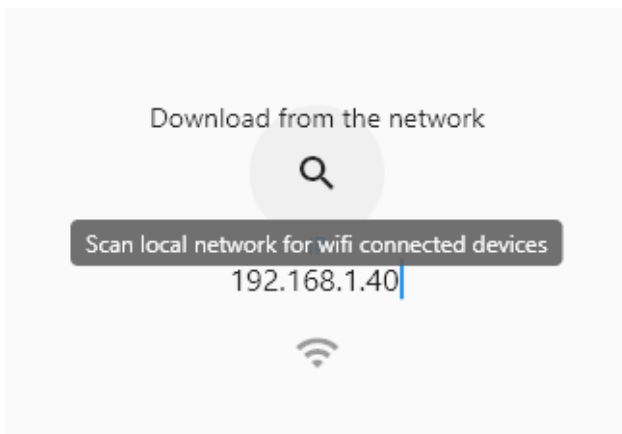

Screenshot 2024-01-25 075328.png

Once it is found you can download the data through the wifi.




Screenshot 2024-01-25 075618.png

Firmware Update

Automatic update

With the introduction of MNemoLink v1.4.0

(<https://github.com/SebKister/MNemoLink/releases/latest>), the firmware process has been simplified. When you connect the device to the computer and open MNemoLink, the application will look if a new version of the firmware is available.

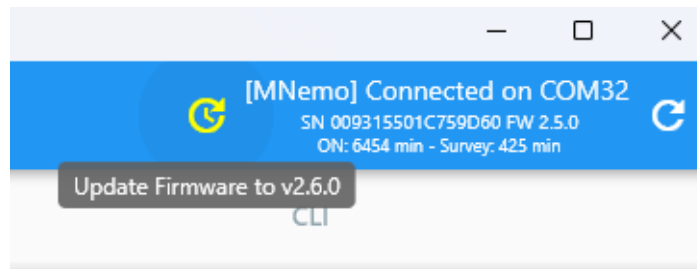

Screenshot 2024-01-01 142739.png

If so, it will allow you to update the firmware automatically to the latest version by pressing the yellow update button.

Manual update

- Download the latest firmware (<https://github.com/SebKister/Mnemo-V2/releases>) on Github (It's a file with a .UF2 extension)
- Connect the device to your computer and go to:

OPTIONS > SETTINGS > UPDATE

⚠ The device should appear in your file explorer as a USB Memory stick would.

- Simply copy the firmware file you downloaded there. That should trigger a reboot of the Mnemo and install the new firmware.
- After updating the firmware, disconnect from the computer and turn off the MNemo.



The next time you turn the Mnemo on the new firmware will be fully functional.

Maintenance

- Do not let the battery drain completely. Put it on charge (leave connected to your computer or other USB charger) once per month even if you don't use the device.
- After each use thoroughly rinse MNemo with fresh water, do not use any other chemical product. Ideally have MNemo clipped on a piece of line and move it forward and backward so that the wheel gets cleaned everywhere as well. Also move the pressure plate lever while washing.
- If you have the feeling there still is sediment trapped in the base of the device or in the screen cover, you can unscrew both parts to clean them directly.

Tips and Tricks

- **Wheel jamming:** This is of course always a possibility with old/dirty line and the main contributing factor will be the lack or little tension of that line. If you notice the wheel is not spinning first check if the line has enough tension and if possible, adding an extra wrap on a tie off to increase the tension often solves the problem. Otherwise, a way of unblocking the wheel is to hold the line in a hand, increase the tension and then swiftly roll back and forth the mnemo to clean the wheel, that should do the trick probably in 90% of the cases. Of course, after that you'll have to resurvey that shot.
- **Obstacles on the line :**It is important to know that the device measures distance whether you move it forward or backward. This is done intentionally. In case you have an obstacle on the line (thick knot, arrow etc ..) , roll the mnemo all the way to the obstacle, then back the length of the obstacle plus the size of the Mnemo. Unclip it from the line (do not stop the survey or add a station) and clip it on again after the obstacle. Resume rolling the device until you reached the next station. Like this there is no loss of time to rearrange the line.
- **Compensation for thick tie wraps:** You can compensate the loss in measurement of the round part of a large tie wrap by rolling back the device the estimated distance that is missing.
- **Display or not display :**We recommend all user of Mnemo to get familiar enough with the device to use only the colors of the screen and not read the menu at each station. This will increase the smoothness of the process and allows them to focus on stabilizing and clipping on and off the device.
- **Opening the pressure plate (gate):** If you have difficulty manipulating the pressure plate, brute force won'T help, simply hold the lever between thumb and index, apply a rotational force forward and THEN pull backward.
- **Organizing work, multiple sections:** I personally call all my section AA1 or use BASIC mode. In most cases I can remember what I survey and in which order. In more complex scenario you can either take the time to change the name of the section or write on a slate complementary information.