



## MIDI NOTE NUMBERS AND CENTER FREQUENCIES

The following table summarizes the MIDI note numbers as defined in the MIDI standard and matched to the Middle C (note number 60) as C4.

The formula connecting the MIDI note number and the base frequency - assuming equal tuning based on A4=a'=440 Hz - is:

$$f = 440 \cdot 2^{(n-69)/12}$$

MIDI note number	Key number (Organ)	Key number (Piano)	Note names (English)	Note names (German)	Frequency (Equal tuning at 440 Hz)
top of MIDI tuning range			G#9/Ab9	gis''''/ges''''	13289.75
127			G9	g''''	12543.85
126			F#9/Gb9	fis''''/ges''''	11839.82
125			F9	f''''	11175.30
124			E9	e''''	10548.08
123			D#9/Eb9	dis''''/es''''	9956.06
122			D9	d''''	9397.27
121			C#9/Db9	cis''''/des''''	8869.84
120			C9	c''''	8372.02
119			B8	h''''	7902.13
118			A#8/Bb8	ais''''/b''''	7458.62
117			A8	a''''	7040.00
116			G#8/Ab8	gis''''/ges''''	6644.88
115			G8	g''''	6271.93
114			F#8/Gb8	fis''''/ges''''	5919.91

MIDI note number	Key number (Organ)	Key number (Piano)	Note names (English)	Note names (German)	Frequency (Equal tuning at 440 Hz)
113			F8	f''''	5587.65
112			E8	e''''	5274.04
111			D#8/Eb8	dis''''/es''''	4978.03
110			D8	d''''	4698.64
109			C#8/Db8	cis''''/des''''	4434.92
108		88	C8	c''''	4186.01
107		87	B7	h''''	3951.07
106		86	A#7/Bb7	ais''''/b''''	3729.31
105		85	A7	a''''	3520.00
104		84	G#7/Ab7	gis''''/ges''''	3322.44
103		83	G7	g''''	3135.96
102		82	F#7/Gb7	fis''''/ges''''	2959.96
101		81	F7	f''''	2793.83
100		80	E7	e''''	2637.02
99		79	D#7/Eb7	dis''''/es''''	2489.02
98		78	D7	d''''	2349.32
97		77	C#7/Db7	cis''''/des''''	2217.46
96	61	76	C7	c''''	2093.00
95	60	75	B6	h'''	1975.53
94	59	74	A#6/Bb6	ais'''/b'''	1864.66
93	58	73	A6	a'''	1760.00
92	57	72	G#6/Ab6	gis'''/as'''	1661.22
91	56	71	G6	g'''	1567.98
90	55	70	F#6/Gb6	fis'''/ges'''	1479.98
89	54	69	F6	f'''	1396.91

 ASK US

MIDI note number	Key number (Organ)	Key number (Piano)	Note names (English)	Note names (German)	Frequency (Equal tuning at 440 Hz)
88	53	68	E6	e'''	1318.51
87	52	67	D#6/Eb6	dis'''/es'''	1244.51
86	51	66	D6	d'''	1174.66
85	50	65	C#6/Db6	cis'''/des'''	1108.73
84	49	64	C6	c'''	1046.50
83	48	63	B5	h''	987.77
82	47	62	A#5/Bb5	ais''/b''	932.33
81	46	61	A5	a''	880.00
80	45	60	G#5/Ab5	gis''/as''	830.61
79	44	59	G5	g''	783.99
78	43	58	F#5/Gb5	fis''/ges''	739.99
77	42	57	F5	f''	698.46
76	41	56	E5	e''	659.26
75	40	55	D#5/Eb5	dis''/es''	622.25
74	39	54	D5	d''	587.33
73	38	53	C#5/Db5	cis''/des''	554.37
72	37	52	C5	c''	523.25
71	36	51	B4	h'	493.88
70	35	50	A#4/Bb4	ais'/b'	466.16
69	34	49	A4 concert pitch	a' Kammerton	440.00
68	33	48	G#4/Ab4	gis'/as'	415.30
67	32	47	G4	g'	392.00
66	31	46	F#4/Gb4	fis'/ges'	369.99
65	30	45	F4	f'	349.23
64	29	44	E4	e'	329.63

 ASK US

MIDI note number	Key number (Organ)	Key number (Piano)	Note names (English)	Note names (German)	Frequency (Equal tuning at 440 Hz)
63	28	43	D#4/Eb4	dis'/es'	311.13
62	27	42	D4	d'	293.66
61	26	41	C#4/Db4	cis'/des'	277.18
60	25	40	C4 (middle C)	c' (Schloss-C)	261.63
59	24	39	B3	h	246.94
58	23	38	A#3/Bb3	ais/b	233.08
57	22	37	A3	a	220.00
56	21	36	G#3/Ab3	gis/as	207.65
55	20	35	G3	g	196.00
54	19	34	F#3/Gb3	fis/ges	185.00
53	18	33	F3	f	174.61
52	17	32	E3	e	164.81
51	16	31	D#3/Eb3	dis/es	155.56
50	15	30	D3	d	146.83
49	14	29	C#3/Db3	cis/des	138.59
48	13	28	C3	c	130.81
47	12	27	B2	H	123.47
46	11	26	A#2/Bb2	Ais/B	116.54
45	10	25	A2	A	110.00
44	9	24	G#2/Ab2	Gis/As	103.83
43	8	23	G2	G	98.00
42	7	22	F#2/Gb2	Fis/Ges	92.50
41	6	21	F2	F	87.31
40	5	20	E2	E	82.41
39	4	19	D#2/Eb2	Dis/Es	77.78

MIDI note number	Key number (Organ)	Key number (Piano)	Note names (English)	Note names (German)	Frequency (Equal tuning at 440 Hz)
38	3	18	D2	D	73.42
37	2	17	C#2/Db2	Cis/Des	69.30
36	1	16	C2	C	65.41
35		15	B1	H1	61.74
34		14	A#1/Bb1	Ais1/b1	58.27
33		13	A1	A1	55.00
32		12	G#1/Ab1	Gis1/As1	51.91
31		11	G1	G1	49.00
30		10	F#1/Gb1	Fis1/Ges1	46.25
29		9	F1	F1	43.65
28		8	E1	E1	41.20
27		7	D#1/Eb1	Dis1/Es1	38.89
26		6	D1	D1	36.71
25		5	C#1/Db1	Cis1/Des1	34.65
24		4	C1	C1	32.70
23		3	B0	H2	30.87
22		2	A#0/Bb0	Ais2/B2	29.14
21		1	A0	A2	27.50
20					25.96
19					24.50
18					23.12
17					21.83
16					20.60
15					19.45
14					18.35

[ASK US](#)

MIDI note number	Key number (Organ)	Key number (Piano)	Note names (English)	Note names (German)	Frequency (Equal tuning at 440 Hz)
13					17.32
12					16.35
11					15.43
10					14.57
9					13.75
8					12.98
7					12.25
6					11.56
5					10.91
4					10.30
3					9.72
2					9.18
1					8.66
0					8.18

Your purchase helps preserve world heritage.



© INSPIRED ACOUSTICS, A DIVISION OF ENTEL | [PRODUCTS](#) | [TERMS OF USE](#) | [PRIVACY POLICY](#) | [ABOUT US](#) | [CONTACT](#)

ASK US