



- GBA_A_BTN_TP0 ○ TP0 TestPoint
- GBA_B_BTN_TP1 ○ TP1 TestPoint
- GBA_SELECT_BTN_TP2 ○ TP2 TestPoint
- GBA_START_BTN_TP3 ○ TP3 TestPoint
- GBA_RIGHT_BTN_TP4 ○ TP4 TestPoint
- GBA_LEFT_BTN_TP5 ○ TP5 TestPoint
- GBA_UP_BTN_TP6 ○ TP6 TestPoint
- GBA_DOWN_BTN_TP7 ○ TP7 TestPoint
- GBA_R_BTN_TP8 ○ TP8 TestPoint
- GBA_L_BTN_TP_9 ○ TP9 TestPoint