



Restore or Update Main Board

Once you've programmed your Main Board using Microsoft MakeCode, you'll need to **restore or update*** it to make it **'Plug and Play' and work with Module Matcher again**. Follow the instructions below to restore or update your Main Board.


1. Download the '**mainboard_PnP_v1.6.0.uf2**' file at www.seeedstudio.com/edu/grove-zero

* The version may be updated to a different name.



mainboard_PnP_v1.6.0.uf2


3. Double-press the '**RESET**' button, then you'll find a removable disk named 'Grove Zero'.

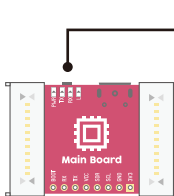

RESET

- Double-press '**RESET**' Button
- 'RX' and 'L' keep flashing rapidly

2. Connect your Main Board to your computer with a micro-USB cable.

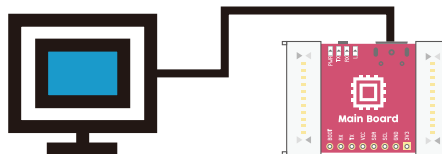

4. Now simply move the '**uf2**' file to the removable disk to restore or update your Main Board.



* The 'Plug and Play' program of Main Board will occasionally be updated to support the latest Grove Zero modules.