


C.4.2 OUTLINES AND DIMENSIONS

C.4.2.1 Inverter Heat Pump

MXZ-2F33VF3	MXZ-2D33VA	MXZ-2DM40VA
MXZ-2F42VF3	MXZ-2D42VA2	MXZ-2HA40VF
MXZ-2F53VF3	MXZ-2D53VA2	MXZ-2HA50VF
MXZ-2F53VFH3	MXZ-2D53VAH2	

OUTDOOR UNIT

Unit: mm

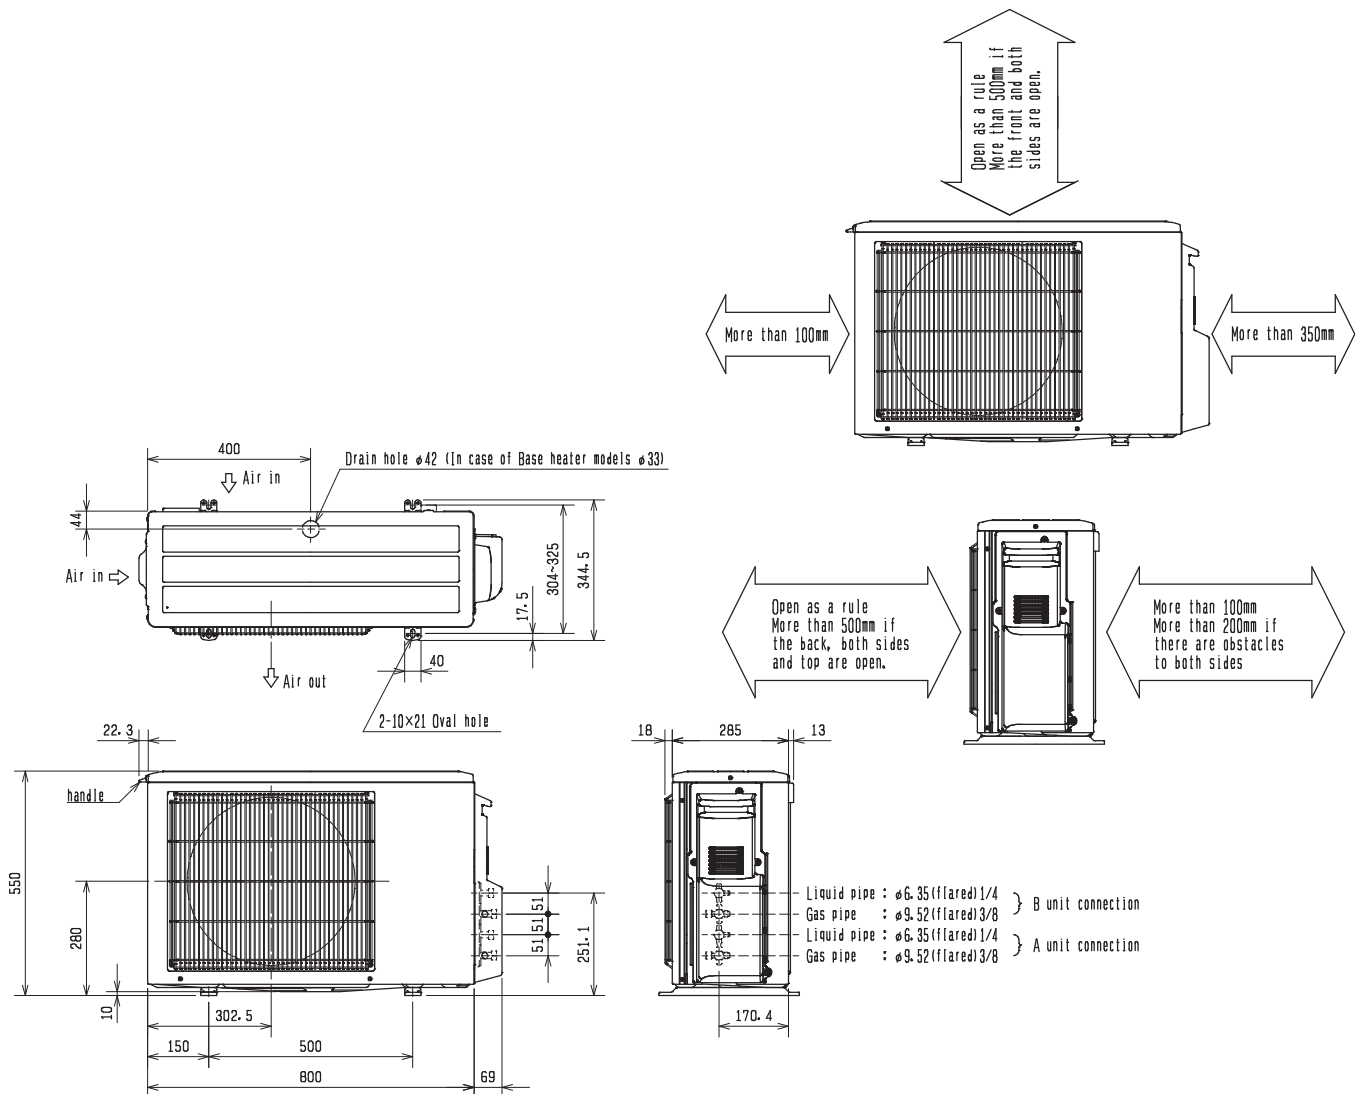


MXZ-3F54VF3
MXZ-3F68VF3

MXZ-3E54VA
MXZ-3E68VA

MXZ-3HA50VF


OUTDOOR UNIT

Unit: mm

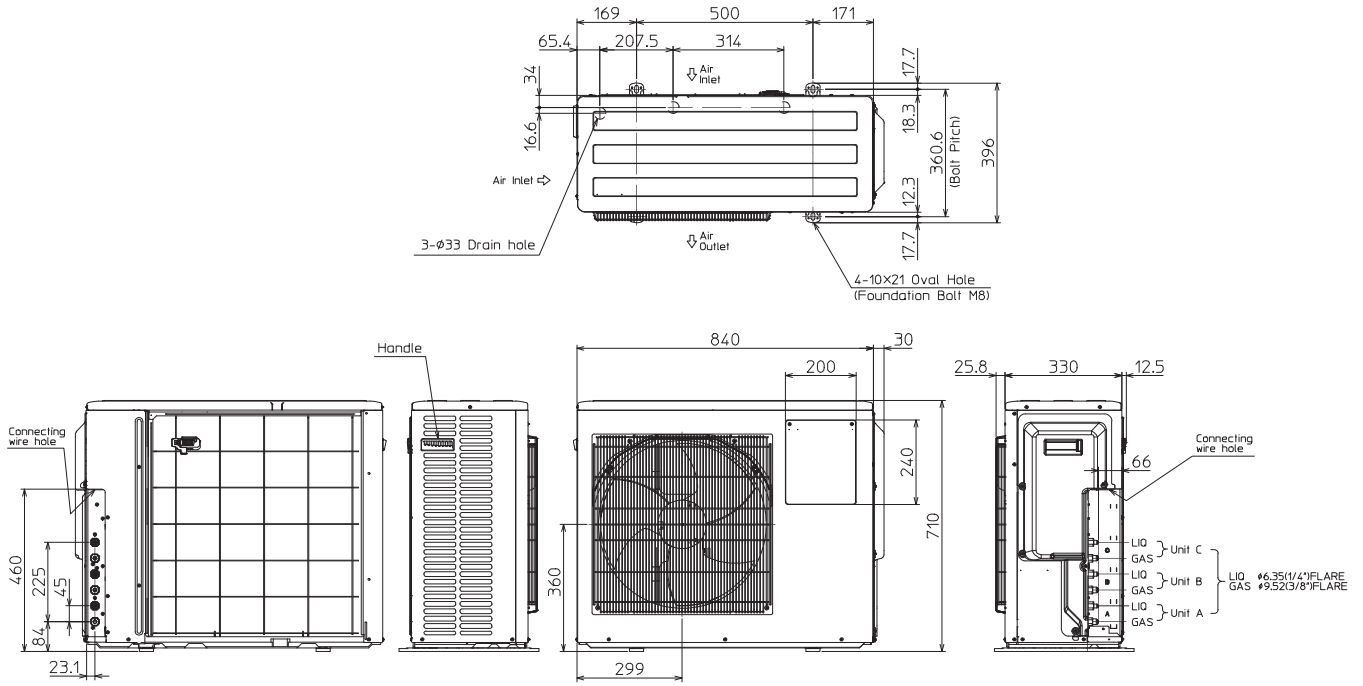


1. Installation space


Note : Leave front and both sides free of obstruction.

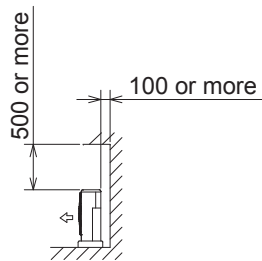


Note : Leave front and overhead free of obstruction.

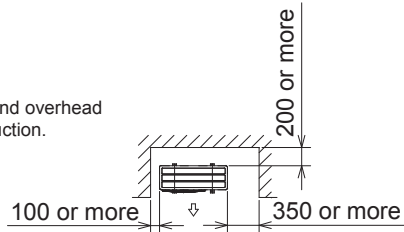

Note : Leave rear, overhead and both sides free of obstruction.

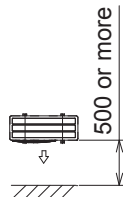

2. Service space

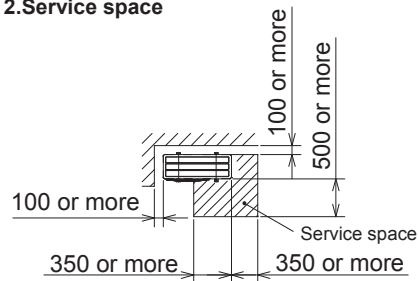


MXZ-4F72VF3

MXZ-4F80VF3


MXZ-4E72VA

OUTDOOR UNIT


Unit: mm

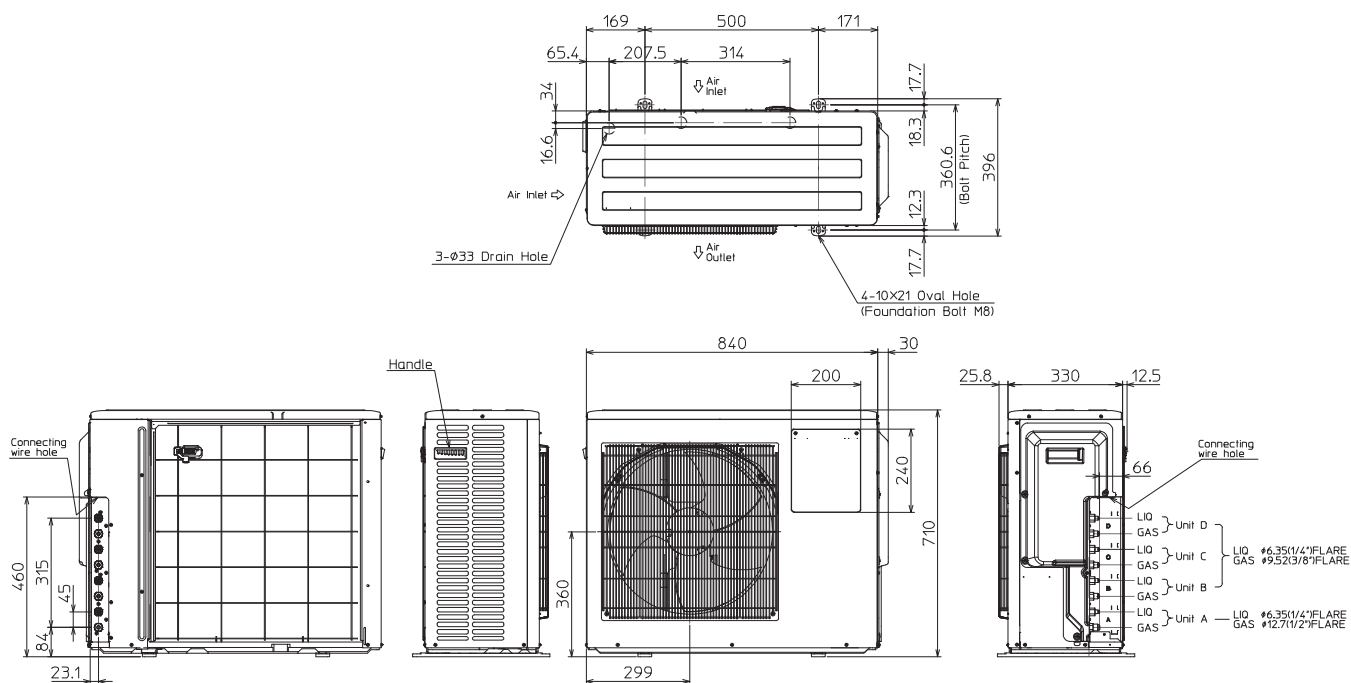**1. Installation space**



Note : Leave front and both sides free of obstruction.

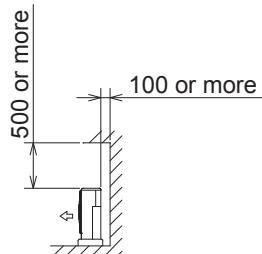

Note : Leave front and overhead free of obstruction.

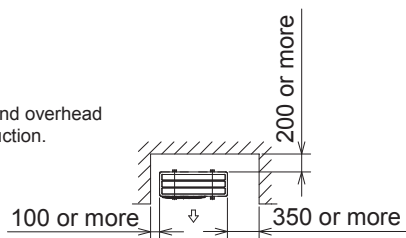


Note : Leave rear, overhead and both sides free of obstruction.

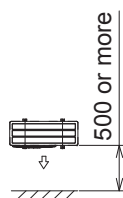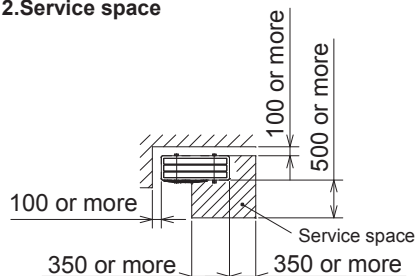**2. Service space**


MXZ-4F83VF

OUTDOOR UNIT

Unit: mm

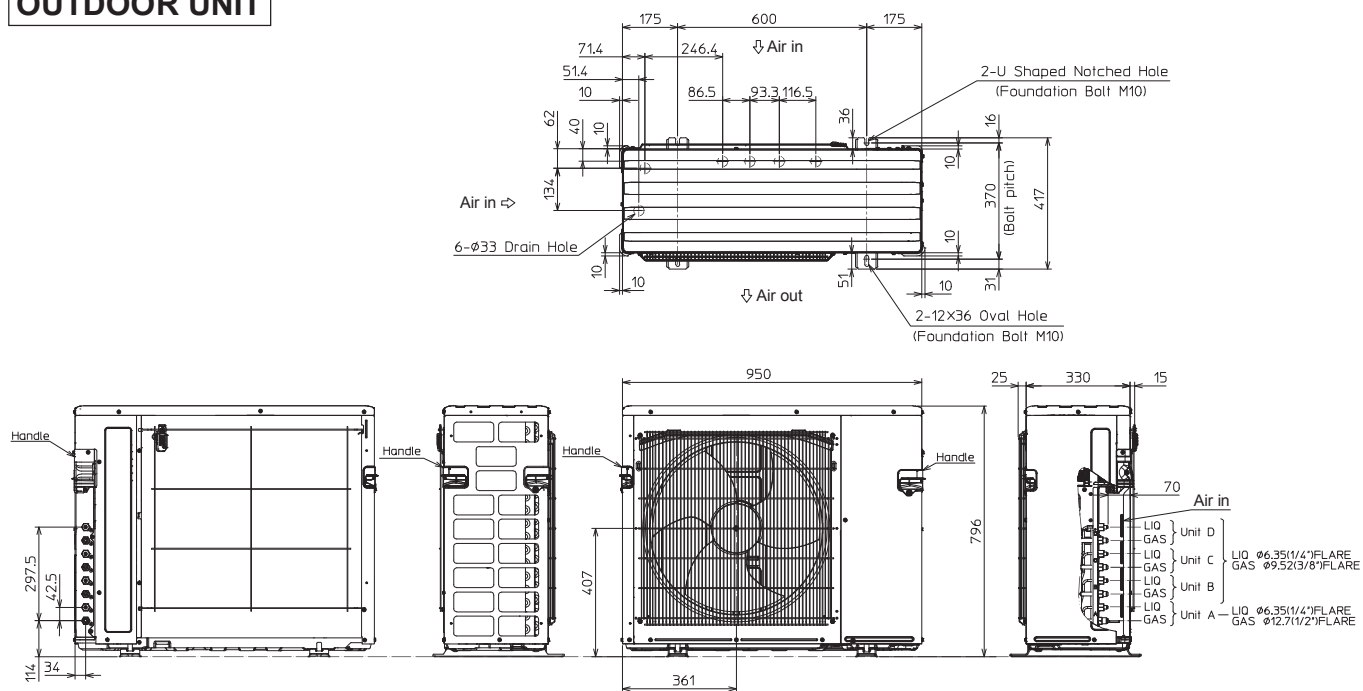

1.FREE SPACE

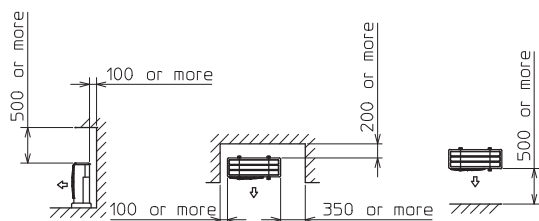

2.SERVICE SPACE

