

Pump Maintenance Manual

Maintenance Procedure for Pumps:

1. Check oil levels and refill if below minimum.
2. Inspect seals and replace if damaged.
3. Measure vibration levels, should not exceed 0.5 mm/s.
4. Clean filters every 30 days.
5. Record maintenance in logbook.