

Public Outreach Radio Telescope (PORT)

Graphical User Interface User Manual

Document Number: 3000

Revision: draft-0.3

Team 21039

Spring 2021

Contents

1	Revision History	2
2	Graphical User Interface (GUI) Overview	2
3	Dependency	2
4	GUI Layout	2
5	Main Control Function	3
5.1	Menu Bar	3
5.2	Three Main Buttons	3
5.2.1	Start Calibration	3
5.2.2	Telescope Stop	3
5.2.3	Stow Telescope	4
5.3	Coordinate Entry	4
5.4	System Status	4
5.5	Jogging	4
5.6	System Settings	4
5.7	Data Output	5
6	Operating Procedure	5

1 Revision History

- 2021-04-28: Draft created
- 2021-05-09: Draft edited

2 Graphical User Interface (GUI) Overview

The Public Outreach Radio Telescope (PORT) Graphical User Interface (GUI) is the front-end for interfacing and controlling the PORT.

As of writing this manual, the GUI only has capability to perform basic telescope movement. Tracking and other improvement are future goals and were outside the requirement/scope of the Team 21039.

As of most other Capstone projects, this GUI is written in **Python** for simplicity and fast deployment. The GUI toolkit is **PySimpleGUI**, probably the easiest one to get started comparing to others.

Python3.7 was used during the development, newer version might be used but they are not tested and verified.

The GUI was developed under a Debian 10 GNU/Linux environment, so the rest of this manual assumes such. Since Python and the GUI toolkit are cross-platform, there should be no problem to fork the software to other platforms; only slight modification are needed such as the name of the USB-Serial port.

3 Dependency

The GUI is mainly written in Python, and Python3 and newer is required. To install python3 on Debian 10: `sudo apt install python3.7`

To install other dependencies, Python's pip is recommended. To install pip on Debian 10: `sudo apt install python3-pip`

With pip installed, check if package **PySimpleGUI** and **pyserial** exists using: `pip3 list`

If not, install them using: `pip3 install PySimpleGUI pip3 install pyserial`

As of writing this manual, PySimpleGUI is on 4.30.0, and pyserial sits on 3.5

In an GNU/Linux environment, and after cloning the repo, the GUI can be opened via command line: `python3.7 main.py`

4 GUI Layout

If the GUI is opened correctly, there are should be four windows, the main control, two position dials, and a output window.

The main control is where essential operations take place; position dials simply keeps track of the position of the telescope in a visual way. The output window shows (error) messages generated by the software for debugging.

Despite the output window mostly provides informational messages, it does output error and debug messages. Keep in mind that currently the outputs will not be saved upon exiting the GUI.

5 Main Control Function

This section documents the various functions of the main control GUI window. This window has the title: *Public Outreach Radio Telescope Control*

5.1 Menu Bar

The menu bar contains three buttons: File, Edit, and Help.

From the file button you can exit the GUI.

The Edit button has the subbuttons of Edit, Copy, and Paste, which you can use when entering in coordinates.

The Help button will will show a link to this instruction manual.

5.2 Three Main Buttons

The three main buttons at the top of the GUI are *Start Calibration*, *Telescope Stop*, and *Stow Telescope*.

5.2.1 Start Calibration

The *Start Calibration* button should be used after *Enable Telescope* and *Enable Servomotors* are selected. This button runs a function which moves the telescope from its stow position to zenith.

The idea is that, since the dish is off-axis, it's easy to find a spot on the counter-weight arm or the ALT arm and calibrate it to zenith using a level or angle meter.

After the ALT arm is calibrated to zenith, the software can simply move it 30° over and the telescope dish will point straight up to zenith, and therefore the ALT servomotor can be zeroed and use that position as its absolute zero.

5.2.2 Telescope Stop

The Telescope Stop button is available for users if wrong coords are entered, or if there is a need for the telescope to be stopped immediately. This does not take the place of the emergency stop button. If a hard stop is needed, the physical E-STOP should be used to disable the servomotor drive and interrupt the motion.

However, in the case of an incorrect coord. entry, or any other reason, one can user the Telescope Stop button to stop the telescope immediately without shutting off the power or the GUI.

5.2.3 Stow Telescope

Once the user has finished using the PORT, they must stow the telescope by clicking this button before shutting down the GUI. This button takes in the current position of the telescope and moves the telescope to the stow position, 30 degrees past zenith.

5.3 Coordinate Entry

The coordinate entry inputs are in terms of ALT/AZ. Therefore, the user must input only azimuthal and altitudinal values. The user simply has to enter a value between 15-120 degrees for the altitude, and a value between 0-360 for the azimuth axis. Then, you click the read button. The PORT then moves to the inputted coordinates. If the user enters a value that exceeds the mechanical limit, there is a software limit which will not allow the telescope to move past either 120 degrees altitudinally (stow position), or past horizon.

5.4 System Status

The system operator shall be able to know the current status of the telescope in order to perform the current operation. The System Status section fulfills such requirements. The Current/Target Position indicates telescope position in Az-Alt coordinates. Wind Speed is an important parameter, because the telescope needs to be stowed when the operating wind speed limit is exceeded. If the wind speed is above 5 m/s, a warning is shown. If the wind speed exceeds 25 m/s, a text is shown to stow the telescope immediately. The voltage display of both servo motors gives the operator insight of the power supply. The motion accuracy of servo motors deteriorates as the operating voltage drops, which is why when voltage starts to drop, troubleshooting is advised.

5.5 Jogging

Jogging is a convenient way to position the telescope for small movements, as it is often required when performing maintenance/troubleshooting. The operator must click the Enable Jogging button in the System Settings section before the user can jog the telescope. The operator can choose one of the four available jogging steps for each axis, ranging from a half-degree to ten degrees each time the corresponding button is clicked. This is useful if the telescope position is needed to be adjusted in small increments, especially when stowing the telescope. Simply click which axis you wish to move, and then click the increment (in degrees) that you want to move. It is advised to click the Disable Jogging feature when not in use to avoid accidental movement of the PORT.

5.6 System Settings

It was decided to include the System Settings feature to prevent unintentional movement or use of the PORT. To be able to move the telescope in the first place, the user must enable that specific feature on the GUI, such as jogging. This design was included because this telescope will be used by the public, so any additional layer of protection is seen as beneficial. The Enable Telescope and Enable Servomotors options must be clicked to operate the PORT.

5.7 Data Output

The Data Output feature is a placeholder for future teams so that they can save data and create graphs for future information received from the PORT.

6 Operating Procedure

For the GUI to run correctly, the user must turn on the telescope in a specific order. The following outlines the steps needed to turn on the telescope correctly.

1. First, ensure that the power supply is plugged in.
2. Check to make sure the USB to DB9 cables are plugged in. They are labelled Servo-AZ and Servo-ALT. If they are not plugged in, make sure to plug in the Servo-AZ cable in first, followed by the Servo-ALT cable.
3. Next, unlock the disconnect switch, ensuring you are following the LOTO procedure.
4. Then, on the command line, enter the following lines of code:
5. You should now see the GUI. If you do not, go back over the steps and make sure you did not miss any connections.
6. Once operating the GUI, the first action is to click the Enable Telescope, Enable Servomotors, and Enable AFE in the System Settings section of the GUI.
7. Next, click the Start Calibration button.
8. You are now free to operate the PORT as you wish.
9. Once you are done using the PORT, you must stow the telescope. Do this by clicking the Stow Telescope button.
10. After stowing the PORT, you can now exit the GUI.
11. Ensure the disconnect switch is turned off and LOTO procedure is followed.