

MC Mode





Bank | Shift



ON/OFF ON/OFF ON/OFF	TRESHOLD TRESHOLD LowCut ON/OFF	MODE RATIO LowCut FREQ	RANGE GAIN MODE	ATTACK ATTACK GAIN	HOLD HOLD FREQ	RELEASE RELEASE Q	BAND							
FADER	GAIN	PAN	GATE	COMP	EQ	DCA	TAP							
◀ Tab			Select		FX1			FX2	FX3	FX4				
Dca1		MC	Dca2		Dca3		Dca4							
Main			MGrp1	Bus1	MGrp2	Bus2	MGrp3	Bus3	MGrp4	Bus4	Bus5	Bus6	Main	
1 - 8 - 15		2 - 9 - 16		3 - 10 - Aux		4 - 11 - FX1		5 - 12 - FX2		6 - 13 - FX3		7 - 14 - FX4		M - B