

Andrómeda
by Easy Laundry

Instructions

LOAD / DRYING

- **LOAD**
The dryer and all close the door
- **PAY**
Pay by card at the payment center or by app or token in the machine
- After making the payment, please check the status on the dryer
- At any time during the drying cycle, the dryer door can be opened

Emergency telephone
@fitradslaundry.com

Andrómeda
by Easy Laundry

Instrucciones / Instructions

LAVADO / WASHING

- 1**
Cargar
Load
- 2**
Pagar
Pay
- 3**
Iniciar
Start

1 Cargar / Load
• Coloque la ropa en la cesta
• No exceda la capacidad máxima
• Cierre la puerta antes de iniciar

2 Pagar / Pay
• Coloque el pago: efectivo o tarjeta
• El pago se procesa automáticamente
• El tiempo de lavado se inicia al pagar

3 Iniciar / Start
• Presione el botón de inicio
• El ciclo de lavado se inicia
• El tiempo de lavado se muestra en la pantalla

• LOAD
The machine and close the door

• PAY
Pay by card at the payment center or by app or token in the machine

• After making the payment, please check the status on the dryer

• At any time during the drying cycle, the dryer door can be opened

Información sobre el lavado

Teléfono de emergencia / Emergency telephone
680 01 03 37 pedidos@fitradslaundry.com

