


Owner's Manual

D2026-B

6 RPM Speed ratio setting

6.1 Select the corresponding speed ratio according to your engine type

Diesel Engine		Outboard		Inboard Gas Engine		
Gear Number	Speed Ratio	Poles	Speed Ratio	Cylinder	Cycle	Speed Ratio
Speed Ratio = Gear Number		4	2	4	4	2
		6	3	6	4	3
		8	4	8	4	4
		10	5	10	4	5
		12	6	12	4	6

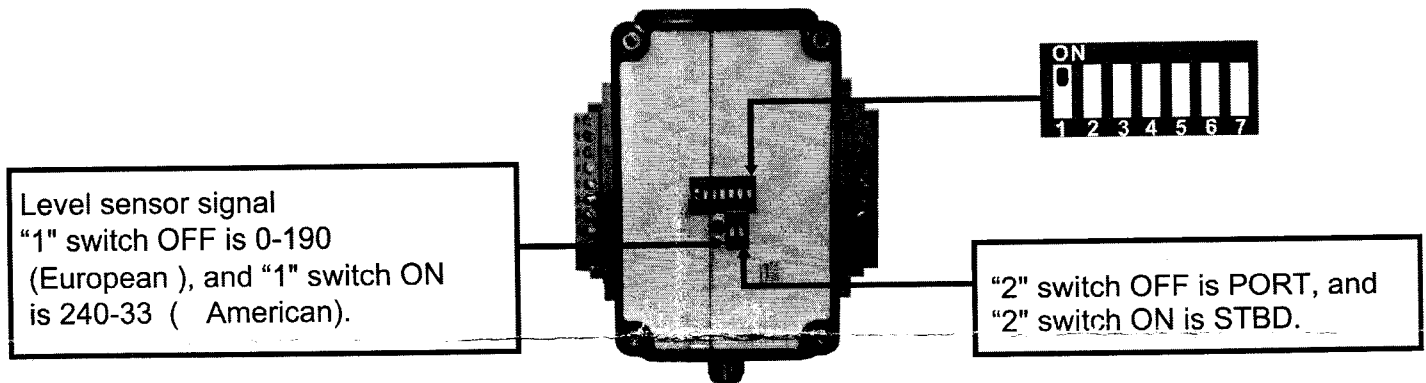

6.2 Toggle switch setting ratio(ratio range 1~127)

ratio	Switch position	ratio	Switch position	ratio	Switch position	ratio	Switch position
1		2		3		4	
5		6		7		8	
9		10		11		12	
13		14		15		16	
⋮		⋮		⋮		⋮	
125		126		127		128	

1. Mechanical

1.1 Size 100mm*68mm*50mm

2.Features

2.1 Acquisition of sensor parameters and convert to NMEA2000 parameters

2.2 Up to 13 sensors can be collected

3. Environmental

3.1 Operating Voltage 9 to 32 Volts(DC)

3.2 Power Consumption <120mA

3.3 Operating Temperature -30~75degrees

3.4 Storage Temperature -40~85degrees

3.5 Degree of Protection Ip67

4. Connection

4.1 Connect to "Micro-C" NMEA 2000 interface

4.2 Connect the corresponding interface according to the functional requirements

