



LUXURY TELEVISIONS
CALIFORNIA



Vu 109 cms (43") LED TV

Model: 43S6535

English

USER GUIDE

Before using the TV, please read this manual thoroughly and retain it for future reference. For more detailed instructions, please see the User Manual.

www.vutvs.com

Warning



WARNING:

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

REGULATORY INFORMATION

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or experienced radio/TV technician for help.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

DO not attempt to modify this product in any way without written authorization from supplier. Unauthorized modification could void the user's authority to operate this product.

It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen.

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Warning

WARNING

To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

The Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.

When you install your TV, maintain a distance of at least 4 inches between the TV and other objects (walls, cabinet sides, etc.) to ensure proper ventilation. Failing to maintain proper ventilation may result in a fire or a problem with the product caused by an increase in its internal temperature.

No naked flame sources, such as lighted candles, should be placed on the apparatus;

To prevent the spread of fire, keep candles or other open flames away from this product at all times.

The device may be malfunction when under electrostatic discharge. It can be manually resumed by power off and power on again.

To avoid any injury caused by overturn of the product, please always ensure the whole product was placed within the table surface in horizontal.

CAUTION connecting the Power Cord

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and its if appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Operating Temperature: 5°C to 35°C

Storage Temperature: -15°C to 45°C

Operating Humidity: ≤80%

Storage Humidity: ≤90%



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

 
Safety instructions

IMPORTANT SAFETY INSTRUCTIONS


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.



5. Do not use this apparatus near water.
8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

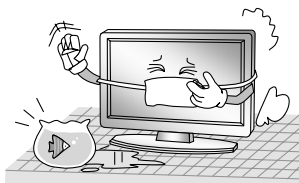

6. Clean only with a dry cloth.

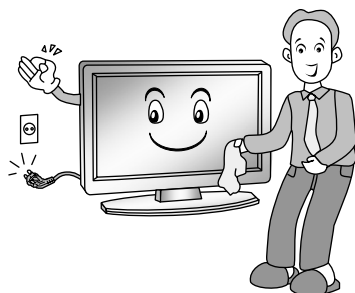


9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Safety instructions

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.

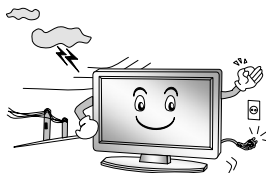

11. Only use the attachments/ accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.



14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



ON DISPOSAL



- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to the regulations of your local authority.

NOTE


- If the TV feel cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with TV.
- Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However there has no adverse effect on the monitor's performance.
- Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effect on the screen.

Getting Started


Stand Installation

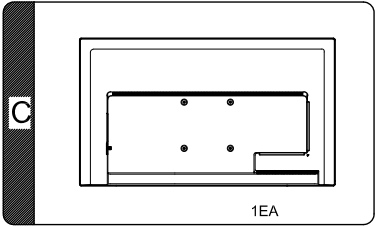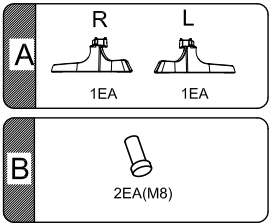

1

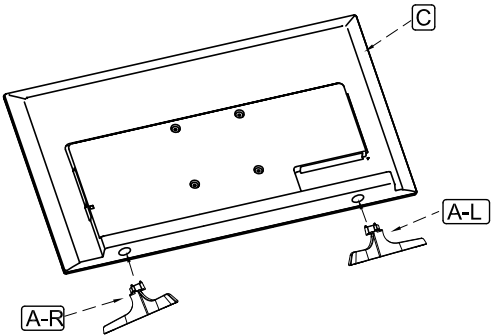

2

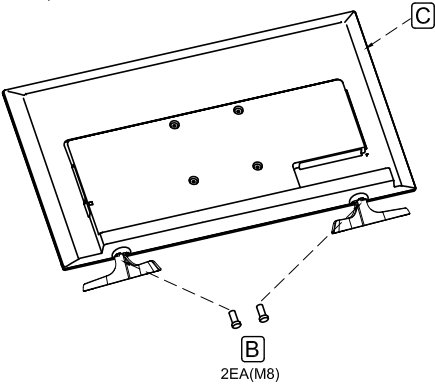

Getting Started


Using the Remote Control

When using the remote control, aim it at remote sensor on the television. If there is an object between the remote control and the remote sensor on the unit, the unit may not operate.

- Point the remote control at the REMOTE SENSOR located on the television.
- When using this television in a very brightly lit area, the infrared REMOTE CONTROL SENSOR may not work properly.
- The recommended effective distance for using the remote control is about 7 meters.

Installing Batteries in the Remote Control

1. Open the cover at the back of the remote control.
2. Install two AAA size batteries. Make sure to match the “+” and “-” ends of the batteries with the diagram inside the compartment.
3. Replace the cover.

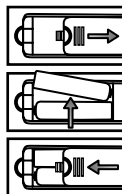

Battery Replacement

You will need to install the batteries into the remote control to make it operate following the instruction below.

When the batteries become weak, the operating distance of the remote control will be greatly reduced and you will need to replace the batteries.

Notes on Using Batteries:

The use of the wrong type of batteries may cause chemical leakage and/or explosion. Please note the following:

- Always ensure that the batteries are inserted with the + and - terminals in the correct direction as shown in the battery compartment.
- Different types of batteries have different characteristics. Do not mix different types.
- Do not mix old and new batteries. Mixing old and new batteries will shorten battery life and/or cause chemical leakage.
- Replace batteries as soon as they do not work.
- Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately with a dry cloth.
- The batteries may have a shorter life expectancy due to storage conditions. Remove the batteries whenever you anticipate that the remote control will not be used for an extended period.
- The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION:

- It may result in an explosion if batteries are replaced incorrectly.
- Only replace batteries with the same or equivalent type.

Connection and Setup

Cable Installation

Before the installation and use, please read carefully the relevant content in “Warning and Safety instructions”.

1. Take out the TV from the wrapping package and put it in a drafty and flat place.

NOTE:

- When you plug or unplug the TV, computer or other equipments, you must make sure that the AC power has been already shut down;
- When unplugging the power cable or signal cable, please hold the plug (the insulated part), do not draw the body of the cable.

2. **LAN:** Use a network cable to connect the interface and the broadband network interface.

3. **DIGITAL AUDIO OUT:** Sending the TV's digital audio signal to external audio equipment via the Digital Audio Output port.

4. **AV OUT:** The monitoring signal output of the TV set can be used as the signal source.

NOTE:

- AV OUT can output only TV/AV channels' audio/video signal.

5. **COMPONENT(YPbPr)** :The output COMPONENT(YPbPr) terminal of DVD can be connected with the COMPONENT(YPbPr) input port of the TV through AV cable.

6. **PC:** Connect one end of the VGA cable with the VGA port on computer, connect the other end of the VGA cable with the VGA port on the TV, and tighten the bolts clockwise on the each end of VGA cable.

NOTE:

- VGA shares the audio input port with components.
- While connecting the 15-pin VGA, please do not insert the plug overexertedly, for fear the pin might be broken.

7. **AV IN:** The output AV terminal of DVD can be connected with the AV input port of the TV through AV cable.

8. **ANT:** Used to connect the antenna or the cable TV network, and receive outdoor antenna signals or closed circuit TV signals.

9. **USB 1, USB 2, and USB 3:** Used to connect USB devices, such as USB Disk, wireless network card, etc.

USB 3 (3.0) is an ultra high speed blue USB3.0 interface, which can provide 5V and 1A output to drive external storage devices, and is compatible with USB2.0 and USB1.1 external storage devices.

10. **HDMI 1, HDMI 2, HDMI 3:** Support AV devices with an HDMI connector (such as set top box,DVD player, digital TV set, etc.).HDMI is also called as high definition multimedia interface, and it can transmit digital audio and video signal with one cable.

11. **SD:** SD card (Secure Digital Memory Card) insertion interface

12. Connect the AC power cable with 100-240V AC power supply.


NOTE :


- The range of power input for the TV is 100-240V~, 50/60Hz, do not connect the TV power input port with the AC power out of the above range.
- Please hold the insulated part of the plug when you are unplugging the power cable, do not touch directly the metallic part of the cable.
- Before connecting to an external device, please firstly make sure that the TV set and the external device have been turned off. When connecting, please make reference to the interface name and the interface color to connect the signal cable.
- The unit has a built-in wireless network card, and can directly receive network signals from wireless router through WIFI antenna.

Remote Control

The unit uses a RF remote control. When the unit is turned on for the first time and if code pairing is not performed for the TV set, the screen will pop up the code pairing prompt for the remote control.




Please follow the following methods to perform code pairing operations.

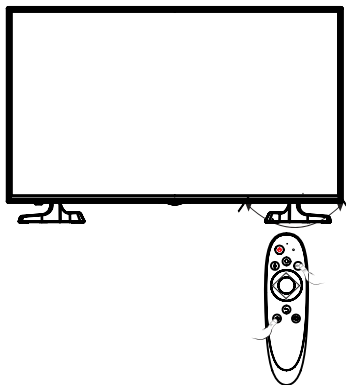When the TV set is turned on, simultaneously press the MENU button and the  button on the remote control for over one second, and the red indicator will flash fast, and the remote control will enter into the code pairing mode, and then put the remote control near the right speaker on the back of the TV set as close as possible, and the red indicator will remain on and then go out, and then the TV screen will display a prompt box "Match Code tips", indicating that the code pairing is successful. Then you can use the remote control to conveniently operate the TV set. In case that the code pairing fails, please repeat the code pairing operations.




- This manual mainly focuses on the operations of the remote control.
- The figures are for reference only, and for the specific appearance and model, the actual ones shall govern.

The buttons of the original remote control are as following:

1. : Power, switch on or off TV set.
2. Indicators on the remote control:
 1. The red indicator flashes slowly: It indicates that the code pairing is not performed for the remote control or the receiving terminal is not within the scope.
 2. The red indicator flashes fast: It indicates that code pairing is being performed for the remote control.
 3. The red indicator remains on: It indicates that the voice function is enabled.
 4. The green indicator remains on: It indicates that the motion sensing function is enabled.
3. MIC: Microphone hole on the remote control (Note: Do not block this hole)
4. : Accesses the main scene interface.
5. : Press the button to turn on the voice function, and the red indicator on the remote control will go on, and the microphone will be turned on; follow the prompt of the unit to input voice, and to input for many times, press the button repeatedly.
The Voice Control function only supports the Xbrowser, and the MIC function could support Third-Party voice chat software.

Remote Control

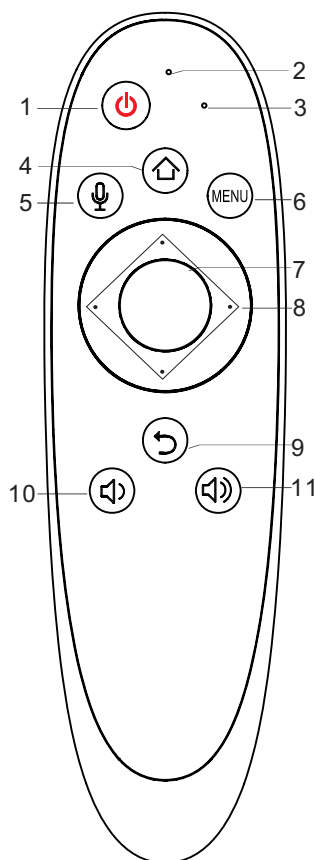


6. MENU: Open / close the menu in the current scene.
7. ENTER: a. Have the functions of selecting current item or enter next Menu;
b. Press this key to transfer out the play control menu when playing movies and TV plays or picture;
c. Within program source channel, press this key to display relevant information;
d. When it is necessary to input number, letter and symbol, press this key to open the big soft keyboard, for specific operations, see the •Use Instructions for Big Soft Keyboard Input in the electronic specification.
8. ▲/▼/◀/▶: In menu display, they are the up/down/left/right button for the menu; In media play with no menu, execute the functions defined by the functions. ENTER: Select the current item or enter into the function of the menu of the next level; When playing movies and pictures, press the button to invoke the play control menu; In program source channel, press the button to display the relevant information; Press to open the soft keyboard in some input box.
9. ↶: Return to the previous program.
10. VOL+/VOL-: Adjusts the volume level.

NOTE: • All pictures in this manual are examples, only for reference, actual product may differ from the pictures.

• The buttons not mentioned here are not used.

Main Unit Control

Front & Sides Panel

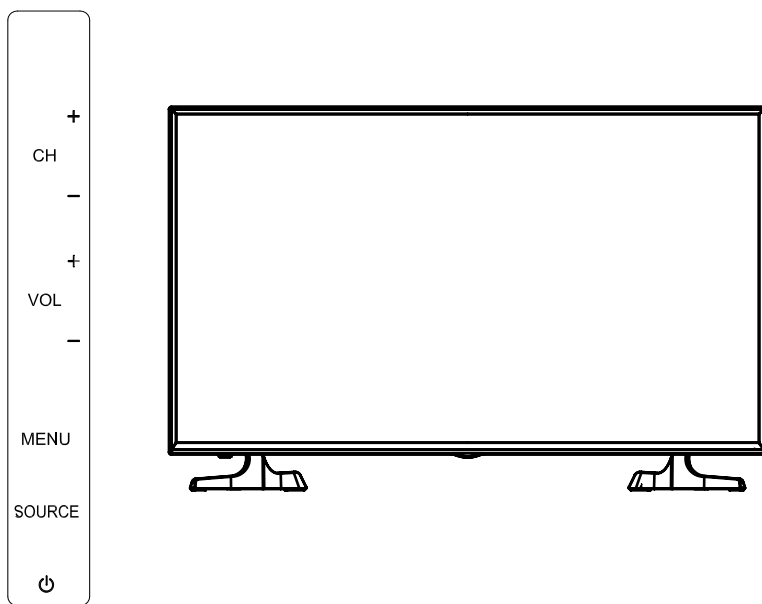

CH+/CH-: Change the TV channels.

VOL+/VOL-: Adjust the volume level.


MENU: Open the menu.

SOURCE: To switch among the signal source.

⏻: Turns the unit on and off.

Main Unit Control

Rear Panel

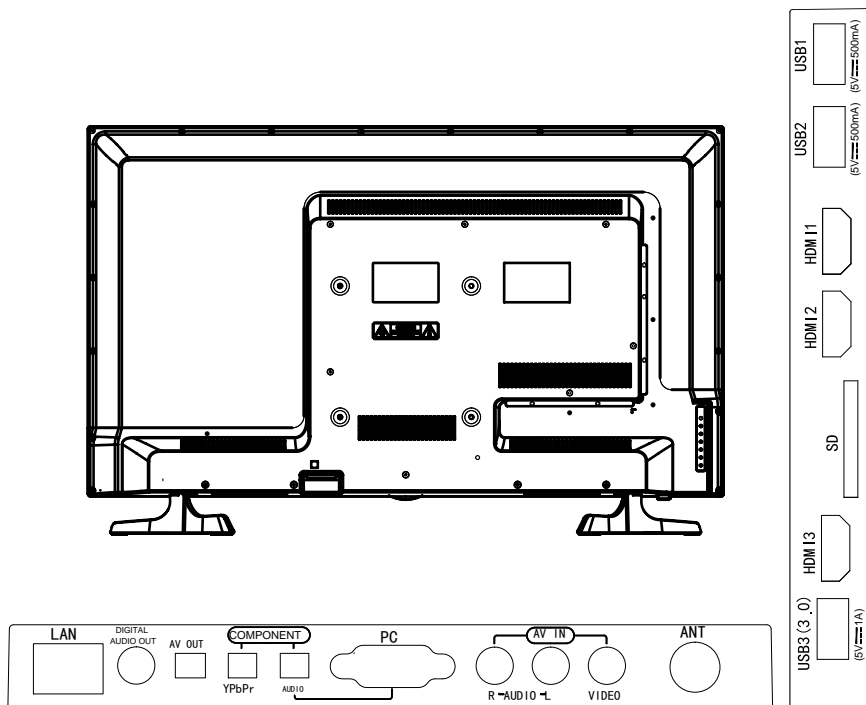

LAN: LAN port.

DIGITAL AUDIO OUT: Digital audio output.

AV OUT: AV audio/video signal output.

COMPONENT: Component input.

PC: PC input.

AV: AV audio/video signal input .

ANT: Antenna input.

USB: USB port.


HDMI: HDMI input.

SD: SD port.

Basic Operation

Turning on and off the TV

■ Turn on the TV

Connect the AC input cable, if TV has a power switch, turn it on firstly. Press the  button on remote control can turn on TV from standby mode.

■ Turn off the TV

Press the  button on the remote control to enter standby mode.

Do not leave your set in standby mode for long periods of time. It is best to unplug the set from the mains and aerial. When there is an accident power off, it is recommended to unplug the power cable from the power socket.

■ No signal (In ATV mode)

When there is no signal and no button operation, the TV set will automatically enter into the standby status after about 15 minutes. In PC-RGB mode, the TV set will automatically turn off in 1 minute if no input signal. When VGA cable is connected, the TV turns on automatically.

Programme Selection

■ Using the CH+/CH- on the panel of TV or on the remote control.

Press CH+ to increase channel number.

Press CH - to decrease channel number.

■ Using 0- 9 Digital Buttons.

You can select the channel number by pressing 0 to 9. (In ATV mode)


Example:

To select - channel (e.g. Channel 5): Press 5.

To select -- channel (e.g. Channel 20): Press 2 and 0 in a short time.


■ Quick switch


When there is no menu displayed while the television signal on, press the **ENTER** button to enter Quick switch interface, the screen will display a list of existing programs logo (or name) order.

Press the arrow buttons to quickly select a program, press <◀/▶> button to turn the page, when need select a wanted program, press the **ENTER** button to the selected program, or press the  button to exit the fast tapping interface, then watch the program.

Volume Adjustment

■ Press the **VOL+/-** button to adjust the volume.

■ If you want to switch the sound OFF, press the .

■ You can release mute by pressing the  or increase the volume.

Basic Operation

Smart Wizard

When the TV is initially powered on, a sequence of on-screen prompts will assist in configuring basic settings.

NOTE: Make sure that the antenna or cable TV system connection is made.

■ Set you desired language.

Press the arrow buttons to select the Menu Language, and then press the **ENTER** button.

Press the ▼ button to select “Next” go to next step.

■ Select your time zone.

Press the arrow button to select a time zone, and then press the **ENTER** button.

Press the ▼ button to select “Next” go to next step.

■ Select your TV environment.

Press the arrow button to select an Environment, and then press the **ENTER** button.

Press the ▼ button to select “Next” go to next step.

※Store mode is intended for in-store display.

■ Network connection (Wired/Wireless)

Press the up / down key to select “LAN” or “WiFi”, and wired and wireless network is enabled respectively. (for details on connection, please refer to the “Network settings”.)

NOTE:

If you select exit the network connection, follow the menu prompt to operate, the TV will begin automatically scans and store all available channels.

Changing the Input Source

1. You can select the input source by pressing the **SOURCE** button on the remote control.


Press the ◀/▶ button to cycle through the input source, and press the **ENTER** button to confirm your choice.

2. You can also press 🏠 button to open “Home” interface, press ▲/▼ button to select the Source, then press **ENTER** button to enter.

User Interface Introduction

Setting and tuning of many functions of this machine start from user interface.

Press **MENU** button on ATV signal source to open “Setting” menu, press ▲/▼ button to select the desired sub item , press the **ENTER** or ▶ button to access the menu of the next level.

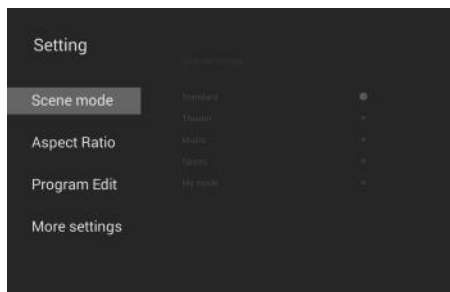

Basic Operation

Press **MENU** button under the current scenario to open menu under the current scenario.


After completing the required operation, press the ↺ key to return level by level to the interface of the previous level.

NOTE:

- When remote is missed or invalid, use buttons of this machine to carry out operations on some menus, when there's a menu display, CH+/CH-, VOL-/VOL+ and ↻ buttons on this machine are similar to ▲/▼, ◀/▶ and **ENTER** buttons on remote; when there's a menu display, press **MENU** button on this machine to exit menu.
- Partial options in user interface will be unselect able, auto display or hidden according to different machine types, signal sources or statuses.
- User interface could be updated via software, if there's any difference between instruction manual and final products, please refer to actual display.

Program Edit

Press **MENU** button on ATV signal source to open “Setting” menu, press ▲/▼ button to select “Program Edit”, Press **ENTER** or ▶ button to enter the next menu.

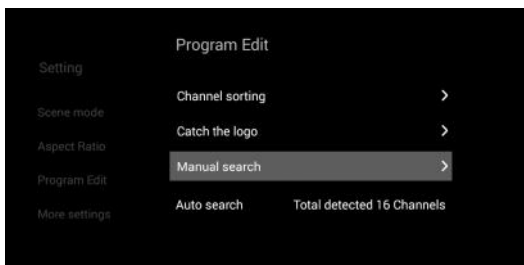

Auto search

In the “Program Edit” submenu, when “Auto search” is selected, press the **ENTER** button, and a message is displayed. Select “Yes”, the TV will begin scanning all the channels available in your area. After searching, you can watch TV programs.

NOTE:

- Depending on the reception condition the progress bar may not advance for several minutes complete channel scan, please be patient.

Catch the logo


When entering “Setting” → “Program Edit” → “Catch the logo”, press the left / right key to select the corresponding channel, press the **ENTER** key to confirm, press the direction key to move the rectangle box, and press the **ENTER** key to set the picture in the current rectangle box as the station symbol of the program, so as to replace the previous station symbol.

Basic Operation

 
Channel sorting

When entering “Setting”→ “Program Edit”→“Channel sorting”, press the direction key to select the program to be firstly sequenced, and press the **ENTER** key to list the selected program into the sequencing list. When the sequencing is completed, select and click “Save and exit”, and then you can watch programs in accordance with the sequence you want.

All settings


Press the  key on the remote control to enter “All settings” interface, press the up / down key to selecting the corresponding options.


 
 
(Options: Picture, Sound, Network, System, Language, Support)

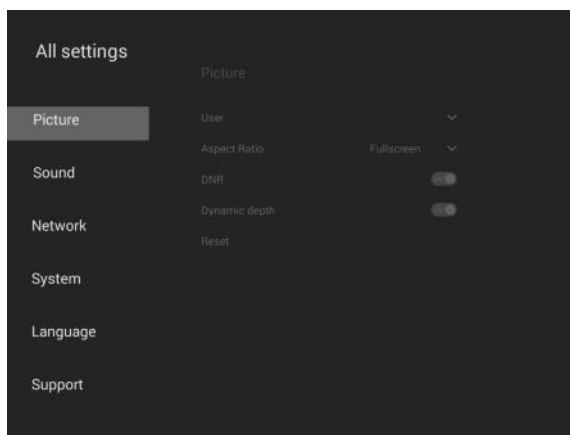

Manual

User could further understand functions of the machine via reading electronic instruction manual.

Press  button to open “All settings” interface, then press up/down key to selecting the Support.

Press / button to select “Manual”, then press **ENTER** button to enter, and click to view corresponding function introduction according to requirements. After that, repeatedly press  button to exit.

NOTE:

Screen display and illustration in user manual and electronic instruction manual is only an example, please refer to actual object.

Network settings


You can set up your TV so that it can access the Internet through your local area network (LAN) using a wired or wireless connection.

■ Connecting to a Wired Network


- You can attach your TV to your LAN using cable in three ways:

Basic Operation


You can attach your TV to your LAN by connecting the LAN port on the back of your TV to an external modem using a Cat 5 cable. See the diagram below.

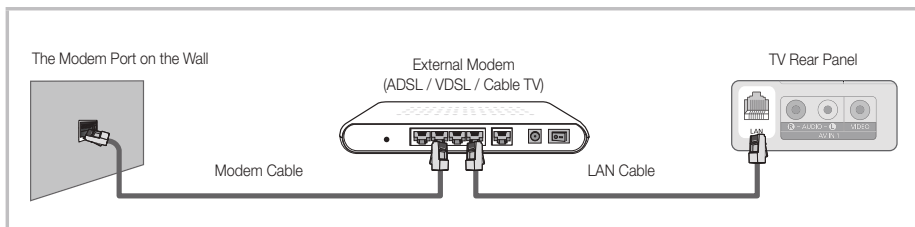

- You can attach your TV to your LAN by connecting the LAN port on the back of your TV to an IP Sharer which is connected to an external modem. Use Cat 5 cable for the connection. See the diagram below.

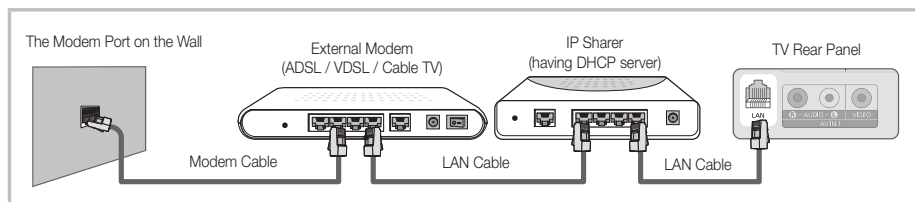

- Depending on how your network is configured, you may be able to attach your TV to your LAN by connecting the LAN by port on the back of your TV directly to a network wall outlet using a Cat 5 cable. See the diagram below. Note that the wall outlet is attached to a modem or router elsewhere in your house.

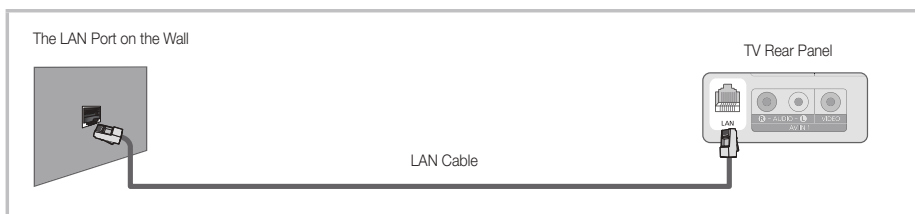


If you have a Dynamic Network, you should use an ADSL modem or router that supports Dynamic Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS values your TV needs to access the Internet so you don't have to enter them manually. Most home networks are Dynamic Networks. Some networks require a Static IP address. If your network requires a Static IP address, you must enter the IP address, subnet mask, gateway, and DNS values manually on your TV's Cable Setup Screen when you set up the network connection. To get the IP address, subnet mask, gateway, and DNS values, contact your Internet Service Provider (ISP). If you have a Windows computer, you can also get these values through your computer.


Basic Operation


To set up the Cable Network settings:


Step 1: Press  button to open “**All settings**” interface, press  button to select **Network**, then press **ENTER** button to enter.

Step 2: Press  button to select “**Cable**”.


Auto: press  button to select “**Connect**”, system will obtain IP address automatically.

Manual: Press  button to select **Advanced Settings**, then press **ENTER** button to enter the next menu.

Press  button to select **Manual IP**, press the **ENTER** button.


press  button to select **Manual Setting**, When this option is set to

“ON”. input the network parameters, such as IP Address, Subnet Mask, Gateway, DNS1 and DNS2 etc. when done, select the **Connect** and press the **ENTER** button to connect the network.

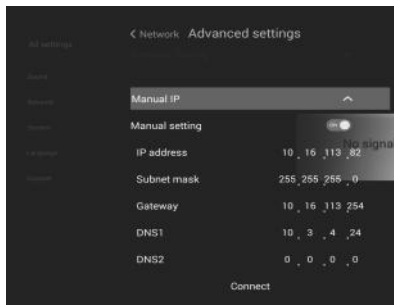

■ Connecting to a Wireless Network

You can connect your TV to your LAN through a standard wireless router or modem.

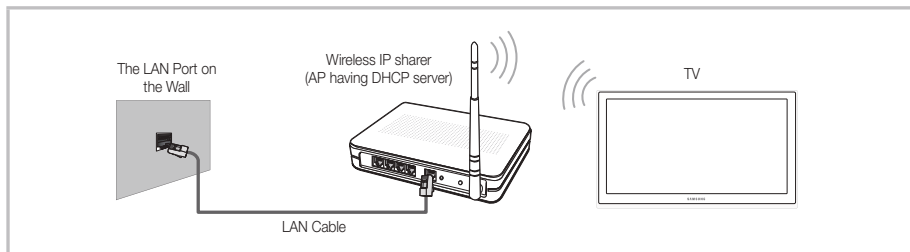


Most wireless network systems incorporate a security system that requires devices that access the network through an access point or wireless router (typically a wireless IP Sharer) to transmit an encrypted security code called an access key.


To set up the Wireless settings:

Step 1: Press  button to open “**All settings**” interface, press  button to select **Network**, then press **ENTER** button to enter.

Step 2: Press  button to select “**WiFi**”.

 Auto : The Network function searches for available wireless networks. When done, it displays a list of the available networks.

In the list of networks, press the  button to select a network, then press the **ENTER** button. input the correct Password and select the **Connect** and press the **ENTER** button to connect the network.

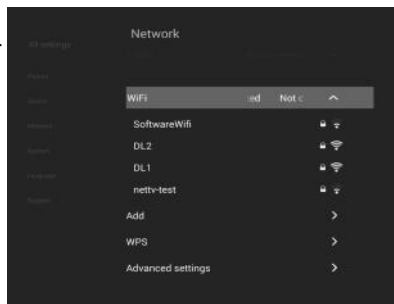

Basic Operation

Add: You can also add a WiFi network manually by selecting Add others.

WPS: Press ▲/▼ button to select **WPS**, then press **ENTER** button, follow the menu prompt to operate.

NOTE:

As there are many brands of routers and the performances, the network signal reception effects of a device directly influences your experience to use a smart network TV.

■ Network Testing

When entering “Network”→“Network testing”, the current network connection is tested.

■ Wi-Fi Hotspot and Settings

Wi-Fi Hotspot: By default it is disabled, when it is enabled, At this time the TV set can be used as a simple router, and the other devices can access the network via the hot spot name and the hot spot password prompted by the system;

Wi-Fi Hotspot Settings: The user can customize to set the hotspot name and password;

NOTE:

The password shall have at least 8 characters

 
When the WiFi hot spot is enabled, the wireless network is disabled, and if it is required to use the TV set to access the Internet, connect the wired network.

Home Operation Introduction

Home is an entry interface for all the other functions, which could enter from this interface layer by layer.

Via using home menu function, different needs of users could be met, making them fully enjoy video and audio effects brought by the machine.

Press ⏠ button to open home interface, as shown in the following figure.

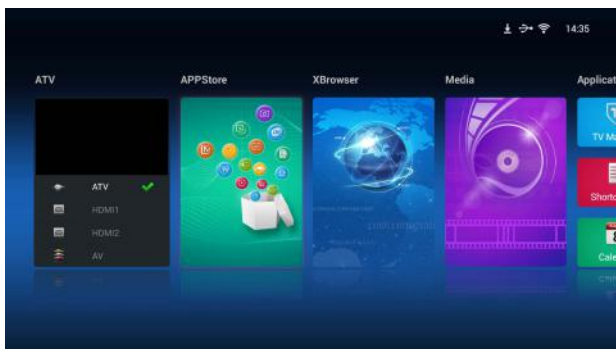


Home interface layout methods:

On the left of the screen is the input source.

In the middle of the screen is the APPStore, XBrowser, Media.

Basic Operation

On the right of the screen are the Applications.


Press arrow buttons to cyclically select all options. Press **ENTER** button to enter a small window for selection. Press  button to exit home interface.

App Store



Step 1: Press  (home) button to enter home interface.

Step 2: Press /  button to select App Store, then press **ENTER** button.

Step 3: Press arrow buttons to select options, press **ENTER** button to enter the selected option, and then please carry out subsequent operations according to hints on menu.



When entering "App Store" for the first time, if network connection is normal, system pops up a disclaimer, then press /  to read carefully, if you agree with terms in this agreement, please press /  button to select "Agree", and press **ENTER** button to sign an App Store Service Agreement; otherwise, please select "Disagree", and press **ENTER** button to exit.


After signing of the service agreement, a one-click installer list will display, containing applications recommended to you for installing.

Step 4: Press  or  (home) button to return to home interface.

■ Application

While entering "Home"→"APPStore", the focus is on the application type label by default, on the top is the search box, and on the bottom displays the corresponding content list of the current application. The two buttons on the bottom are download management and update management.

Press the direction key to move the focus, and press the **ENTER** key to click various buttons to perform the corresponding operations. In case of multi-page display, press the /  key to page up/down.

Press the  key to return to the type of the previous level or return to the main scene interface.



Basic Operation

■ Application Downloading

While entering “Home”→“APPStore”, when the focus is on the application list, use the prompt below the menu to select and click “Free”; or select and click the “Check” button to enter “Application detailed display”, and then select and click the “Free” button, and the system will start the background download into the local or USB storage device.

Note: When downloading application programs, you should ensure that the network works properly, and the USB storage device is not be removed, and the power supply is not shut off, otherwise downloading fails.

■ Application Rating

When entering “Home”→“ APPStore”→ “Check”, use the prompt below the menu to select and click the “Mark” button.

When entering, please follow the screen prompt to operate.

■ Application Download Management

When entering “Home”→“APPStore”→ “Download”, the status of the application being downloaded can be viewed, including the progress, name, and size of the application being downloaded and installed.

Press the down button or the **ENTER** button to enter the detailed list interface being downloaded, and use the prompt below the menu to select and click the “Start/Pause” or the “Delete” button to perform the corresponding operation.

The three buttons on the bottom are: Start all, pause all, and delete all, and you can select and click the buttons to perform the corresponding operation.

■ Application Update

If there is any updated application, the “Update” prompt displays the number of updates, and you can select and click the “Update” button for the corresponding item, or directly click the “Update all” button on the bottom, and the system performs the updating operation.

 
■ Search

You can enable this function to perform the fuzzy search of an application, and the system automatically prompts you the relevant information about the hot searches. When entering “Home”→“ APP Store”→ “Search”, input some or all of the words of the application in the text input box (for the input operations, refer to “Operating Instructions With Soft Keyboard Input” for details), and below the menu, the hot searches are displayed at the same time, and then you can press the **ENTER** key to start searching. When the searching is completed, press the down key to enter the search result list interface, press the direction key to select the required search result, and then press the **ENTER** key to start downloading.

Basic Operation

■ Enter/Exit the local media

When the USB storage device is correctly inserted into the USB interface of this unit and is automatically detected, the system displays the option menu. Press the left / right key to select, and press the **ENTER** key to confirm whether to enter or not.

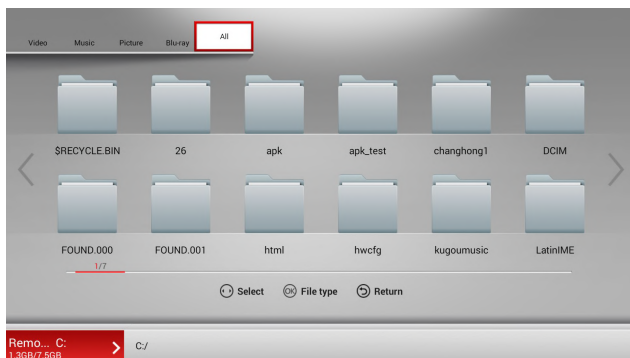

You can also enter the “Media” through the main scene.

When entering, please follow the menu prompt to operate. Press the ↻ key to perform the return operation.

■ Safely Unload USB

To ensure the security of the USB storage device and the saved data, before removing the device from this unit, please manually unload it.

When entering “Media”→“Menu”→“Uninstall USB Device”, select the disk to be unloaded, press the **ENTER** key, and the system will display the prompt, and at this time press the left /right key to select “Confirm”, and press the **ENTER** key to unload, and then the USB storage device can be removed.

NOTE:

※ If the disk is currently being read and written, unloading can be performed only after stopping operation.

※ Press the power button to power off and this unit will automatically perform disk unloading before powering off;

※ Never directly pull out the power plug to power off the unit when the disk is being read and written, so as to avoid file or disk damage.

Multi-screen Sharing

■ Introduction of Applications

Multi-screen sharing application realizes sharing Apple mobile devices as well as devices supporting DLNA or media resources such as video/audio and pictures to be demonstrated and played on smart TV set, making sharing of digital media content easy to use.

Using Multi-screen sharing applications requires TVs that have been installed with Multi-screen sharing applications, devices providing media resources to be shared(such as, Apple mobile devices, PC installed with Windows Media Player 11 or other DMC applications), and mobile phones with DMC function to be connected in the same local area network.

Basic Operation

■ Introduction of Functions

Introduction of functions for application settings

Step 1: Press  (home) button to enter home interface.

Step 2: Press arrow button to select **Mult...aring**, then press **ENTER** button.

This section is an introduction of the functions and basic operations of user settings of Multi-screen sharing.

1. Turning on of Interactive Service

Once Interactive Service is turned on, you can find the service in the player list of DMC or AirPlay device list of Apple devices.

2. Startup

If both Interactive Service and Startup are turned on, Interactive Service will be started automatically before the TV is powered off.


If Startup is turned off, Interactive Service won't be started automatically after the TV is powered on.




■ Introduction of AirPlay Sharing Functions


This section mainly introduces how to share the images, audios and videos in Apple devices through AirPlay with TVs.


1. Image Sharing

Single image sharing: open the image viewing application in an Apple device to view one image, and select the Multi-screen sharing service name in the list of icon , then the image will be displayed on the TV; slide to switch images in an Apple device and the image displayed in the Apple device will be displayed on TV.

PowerPoint sharing: open the image viewing application in an Apple device to view one image, and select the Multi-screen sharing service name in the list of icon , start the PowerPoint presentation in the Apple device, then the image will be displayed on the TV.

2. Audio Sharing

Open the local audio player application in an Apple device to play the audio, and select the Multi-screen sharing service name in the list of icon  to share the audio with a TV.


Internet resources sharing: open the internet audio player application in an Apple device, to play the audio, and select the Multi-screen sharing service name in the list of icon  to share the audio with a TV.


During audio sharing, the Apple device can control the audio play, such as pause, play and volume adjustment, and etc..

3. Video Sharing

Open the local video player application in an Apple device to play the video, and

Basic Operation

select the Multi-screen sharing service name in the list of icon  to share the video with a TV.

Internet video sharing: run the internet video player application to play the video and select the Multi-screen sharing service name in the list of icon  to share the internet video with a TV.

During video sharing, the Apple device can control the video play, such as pause, play and volume adjustment, and etc..

During video sharing, fast forward and rewind can be achieved through the left and right arrow buttons on remote control or the Apple device.

■ Introduction of DMR Sharing Functions

This section mainly introduces the ways to share the images, audios and videos in devices supporting DLNA through DLNA with TVs.

1. Image Sharing

Single image sharing: open the Windows Media Player in PC, and select the Multi-screen sharing service name under the “Play” item by right click, then the image will be displayed on the TV.

PowerPoint sharing: open the Windows Media Player in PC, and select multiple images, and select the Multi-screen sharing service name under the “Play” item by right click, then the images will be displayed on the TV.

During image sharing, pause, play and stop can be realized by DMC terminal;

2. Audio Sharing

Open the Windows Media Player in PC, choose one audio, and select the Multi-screen sharing service name under the “Play” item by right click, then the audio will be played on the TV.

During audio playing, play control, such as pause, play, stop and volume adjustment can be achieved by DMC or TV remote control.

During audio playing, fast forward and remind can be realized through DMC progress and the left and right arrow buttons on remote control.

Other DMC applications: open a DMC application, select the Multi-screen sharing service name in the player, then the audio can be played on TV.

3. Video Sharing

Open the Windows Media Player in PC, choose one video, and select the Multi-screen sharing service name under the “Play” item by right click, then the video will be played on the TV.

During video playing, play control, such as pause, play, stop and volume adjustment can be achieved by DMC or TV remote control.

During video playing, fast forward and remind can be realized through DMC progress or the left and right arrow buttons on remote control.

Other DMC applications: open a DMC application, select the Multi-screen sharing service name in the player, then the video can be played on TV.

■ FAQ

1. Occasionally failing to find multi-screen interactive service.

Answer: Make sure LAN network for device works normally; try reconnecting

Basic Operation

wireless LAN, and restart multi-screen sharing service.

2. Multiple DMCs could control the same DMR.

Answer: Multiple DMCs controlling the same DMR is not restricted by DLNA protocol actually.

Detailed instructions are as follows:

When the first DMC device is connected to TV set, and the second DMC device is also connected to play any resource during playing, at this time, status of the first DMC is also under playing, which could control playing status of the current TV set.

3. DMC status fails to update after reverse controlling on playing status at TV set.

Answer: No update on DMC after reverse controlling on playing status may be caused by failing to realize status synchronization on DMC or related bugs.

4. If any other DMC or AirPlay attempts to control playlist of Windows Media Player, playlists of theirs will be controlled instead.

Answer: When Windows Media Player is being controlled, it will find the next resource after stopping, so it will access to TV set and play.

5. After some DMC control terminals exit, multimedia content accessed could still be played on TV set.

Answer: When applications of some DMC control terminals exit, they will not notify DMR to stop playing, so after DMC exiting, playing on TV set will continue.

Basic Operation

iSmart TV

Installation and connection

 
1. In order to allow you experience iSmart TV function, you can download application by scan the QR code from the home interface or App store, which can be installed to your Android or IOS mobile device, like smart phone or tablet.

2. Your TV and mobile phone must be connected in the same network, and the network needs Internet access. Open the application installed on your handheld device after the device access to the network; select the TV in the device list to connect.

Enter iSmart TV

Open the iSmart TV application, Desktop is divided into three main modules:

“Mine”, “Remote”, “Game”. As shown below:

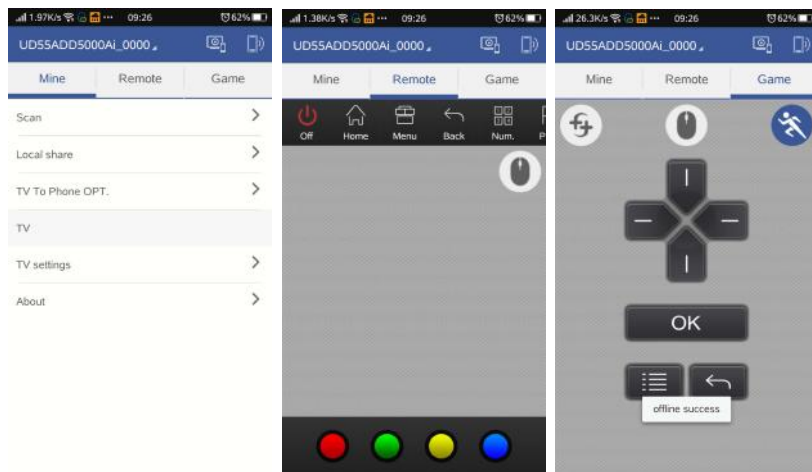

Mine function:

Click and open Mine function, the screen will display mine page contents. Such as “Scan”, “Local share”, “TV To Phone OPT.”, “TV settings”, “About” etc.

Scan: you can by scan the QR code to download application.

Local share: iSmart TV will find multimedia files on your mobile phone and help you to categorize files. You can share these multimedia files to the TV easily by clicking the file. You can experience excitement and pleasure from the big-screen!

TV To Phone OPT.: select “Default”, “High Quality” and “Fluent” to adjust program picture quality.

TV settings: can set up the TV function, such as “Network”, “Scene mode”, “Source”, “Channel”, “Volume” etc.




Basic Operation

About: view the application version and updates the application.

Remote(Control by Virtual buttons)

 
Your cell phone can be a TV remote control. You can use Virtual Buttons to control the TV in the application, such as Off, Home, Menu, Back, Prog+/-, Vol+/-, etc. In order to achieve the function of arrow keys that right and left, up and down, you just need to slide in the blank interface of the middle screen. Let you control the TV without remote.


Game(Game remote controller)

-  Click to active sport ++game pad.
-  Click to active touch game pad.
-  Click to active standard G-sensor game.

Click the four direction keys, Ok key, Menu key, Back key to Executive game-related operations.

TV to phone and Sound to phone

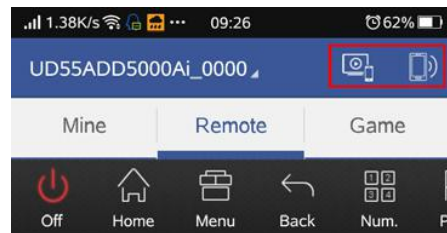

 Click to copy from TV screen and choose the streaming quality.

 Click to get sound from the TV.

Note:

- ※ If there is a mobile version problem cause the application install fails, please upgrade your phone version.
- ※ In case of functional changes in the application side, application side shall prevail.

Troubleshooting Guide

Troubleshooting

Before contact the service technician, perform the following simple checks. If any program still persists, unplug the TV and calling for serving.

PROBLEM	POSSIBLE SOLUTION
No sound and picture	<ul style="list-style-type: none"> - Check whether the main plug has been connected to a wall let. - Check whether you have pressed the POWER button on the front of TV set. - Check the picture contrast and brightness settings.
Normal picture but no sound	<ul style="list-style-type: none"> - Check the volume. - Sound muted? Press the MUTE button. - Try another channel, the problem may be with the broadcast. - Are the audio cables installed properly?
The remote control does not work	<ul style="list-style-type: none"> - Check to see if there any object between the product and remote control Causing obstruction. - Are batteries installed with correct polarity (+ to +, - to -)? - Correct remote operating mode set: TV, VCR etc.? - Install new batteries
Power is suddenly turned off	<ul style="list-style-type: none"> - Is the sleep timer set? - Check the power control settings. Power interrupted. - No broadcast on station tuned with auto activated.
Picture appears slowly after switching on	<ul style="list-style-type: none"> - This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.
No or poor color or poor picture	<ul style="list-style-type: none"> - Adjust the color in menu option. - Keep a sufficient distance between the product and the VCR. - Try another channel, the problem may be with the broadcast. - Are the VIDEO cables installed properly? - Activate the any function to restore the brightness of the picture.
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> - Check for local interference such as an electrical appliance or power tool.
Poor reception on some channels	<ul style="list-style-type: none"> - Station or cable product experiencing problems. Tune to another station. - Station signal is weak, reorient antenna to receive weaker station. - Check for sources of possible interference.
Lines or streaks in pictures	<ul style="list-style-type: none"> - Check the antenna (Change the direction of the antenna).
No output from one of the speakers	<ul style="list-style-type: none"> - Adjust balance in menu option.

Troubleshooting Guide

NOTE: There is a problem in VGA mode (Only VGA mode applied).

PROBLEM	POSSIBLE SOLUTION
The signal is out of range.	<ul style="list-style-type: none">- Adjust resolution, horizontal frequency, or vertical frequency.- Check it whether the signal cable is connected or loose.- Check the input source.
Vertical bar or stripe on back ground & Horizontal Noise & Incorrect position.	<ul style="list-style-type: none">- Work the auto configure or adjust clock, phase, or H/V position.
Screen color is unstable or single color.	<ul style="list-style-type: none">- Check the signal cable.- Reinstall the PC video card.

Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then used it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

Extended Absence



If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

Disposal of old electrical appliances



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Main Unit Control

Model Name		43S6535
Dimension	Without Stand (mm)	Width: 658.8 Height: 564.4 Depth: 82.7
	With Stand(mm)	Width: 968.8 Height: 622.4 Depth: 173.4
Weight	Without Stand (kg)	8.4
	With Stand(kg)	8.9
Active Screen Size(Diagonal)		43inches
Screen resolution		3840 x 2160
Audio power		8W+8W
Power consumption		Please refer to the rating label (95W)
Power supply		100-240v~ 50Hz/60Hz
Receiving systerr	Analog	PAL-D/K,B/G,I NTSC-M/N
Environmental conditions		Temperature:5℃-45℃ Humidity:20%-80% RH Atmospheric pressure:86kPa-106 kPa
Component Input		480 I/60Hz, 480 P/60Hz, 576I/50HZ, 576P/50Hz,720P/50Hz,720p/60Hz,1080 I/50Hz, 1080 I/60Hz,1080P/50Hz,1080P/60Hz
HDMI Input		60 Hz (640x480,800x600,1024x768) 60Hz(480 I,480P,720P,1080I,1080P) 50Hz(576I,576P,720P,1080I,1080P) 24Hz 30Hz (3840x2160 HDMI1,2) 24Hz 30Hz 50Hz 60Hz (3840x2160 HDMI3)

ACCESSORIES:

1. LED TV	x1	4. User Manual	x1
2. Remote Control	x1	5. Stand Setting Paper	x1
3. Stand	x1		

Note: Specifications to change without notice. Pictures for reference only, the products are subject to material object, the power of interpretation belongs to our company.



LUXURY TELEVISIONS
C A L I F O R N I A

Vu 109 cms (43") LED TV
Model: 43S6535

Vu Technologies Pvt. Ltd.

Vu Center, 29 MIDC Central Road, Andheri (E), Mumbai - 400 093. Maharashtra. India
Helpdesk: Landline: +91-22 - 28305930 • Mobile No: +91 - 9322999917 • Toll Free No.: 1-800-22-8455
Email: warranty@vutvs.com

www.vutvs.com