 


# User Manual

Model:A315

**Smart Warmer for Coffee, Candles, Tea, Milk, Cocoa**

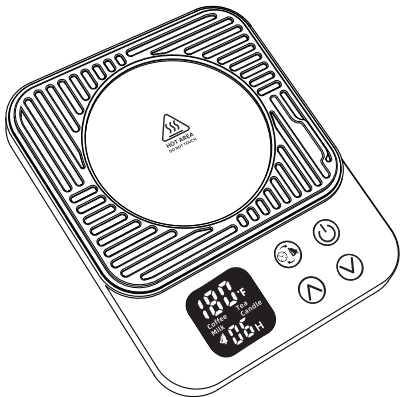

**READ AND SAVE THE INSTRUCTION**

Not 100% Happy with Your Order?

Contact us ✉ [home-better@outlook.com](mailto:home-better@outlook.com)

## WITH HEARTFELT THANKS

Thank you for purchasing a new **Smart Warmer by HOSCARER**. We're looking forward to keeping many cups of coffee warm for you. Our helpful Customer Support Team is available at **home-better@outlook.com**. We're here to listen to your questions, concerns, or joy over long-lasting warmth. Happy drinking!

## Table of Contents

Package Contents .....	1
Specifications .....	1
Important Safeguards.....	3
Product Diagram.....	4
Operation .....	5

## Package Contents

- 1 x Smart Warmer
- 1 x Silicone Pad
- 1 x Reusable Fastening Cable Tie
- 1 x User Manual

## Specifications

<b>Product Model:</b> A315	<b>Rated Power:</b> 36W
<b>Voltage:</b> 110V~120V 60Hz	<b>Waterproof Grade:</b> IP53
<b>Temp Range:</b> 105-180°F	<b>Auto-Off:</b> 8 hours
<b>Heating Area:</b> 4.6*4.06in	<b>Dimension:</b> 6.22*4.92*0.91in

# IMPORTANT SAFEGUARDS






 



**Follow basic safety precautions when using your smart warmer.  
Read all instructions.**

- **CAUTION HOT SURFACE!** Please do not touch it immediately during or after use.
- To protect against electric shock, **do not** immerse the smart warmer or adapter in water or other liquid.
- Close supervision is necessary when children are using or near the smart warmer.
- This smart warmer is not intended for use by persons(including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction by a person responsible for their safety.
- Please **switch off** and **unplug** the smart warmer when it is not being used.
- Allow the smart warmer to completely **cool** down before **cleaning** or **storing**.
- If the cord, plug, or the smart warmer itself is **damaged** in any way, please **don't** use it, and **do not** attempt to repair or disassemble the device on your own. Please contact **Customer Support** for proper disposal.
- Always use **extreme caution** when moving cups containing hot liquids.


- **Do not** cook food on the smart warmer.
- The smart warmer is **not intended for outdoor use**.
- **Do not** place the smart warmer near a hot gas or electric stove or inside a heated oven.
- **Do not** let the cord hang over the edge of a table or counter or near a hot surface.
- **Do not** place this smart warmer on leather surfaces while it is operating.
- **Only** use the smart warmer as directed in this manual.
- Household use **only**.

## ATTENTION!

This smart warmer should **only** be used to keep drinks warm and does not boil liquids, it can only heat liquids to **(180°F)**. The warming effect is different on different materials, for best results, use heat-safe cups that are thin and have a flat bottom. Please **avoid** using plastic cups, vacuum cups, cups with thick bottoms or double bottoms, and paper cups.

 	 	 	 	 
Flat Bottom	Recessed Bottom	Thick Bottom	Double Bottom	Hot Heat-safe


## GETTING TO KNOW YOUR SMART WARMER

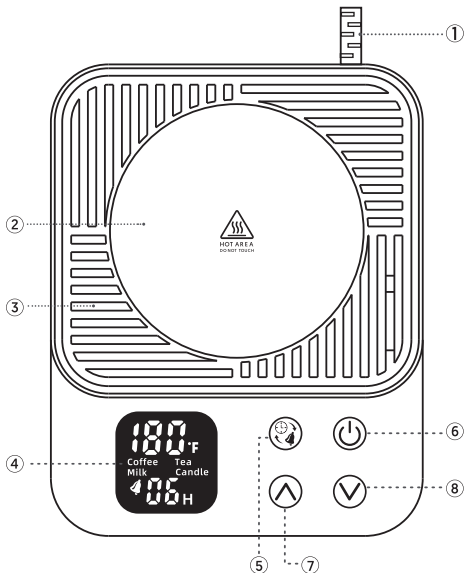

- |                           |                                     |
|---------------------------|-------------------------------------|
| ① Power Cord              | ⑤ Drink Water Reminder/Timer Switch |
| ② Heating Plate           | ⑥ ON/OFF Button                     |
| ③ Anti-scald Silicone Pad | ⑦ Increase Temperature              |
| ④ Digital Display         | ⑧ Decrease Temperature              |

## HOW TO USE YOUR SMART WARMER?



1. Place the warmer on a **flat surface**, and plug in the power plug. The smart warmer will beep once.



2. Long press the power button  to turn it on. After turning it on, the digital display will show the default temperature mode (coffee, 150°F) and default shutoff time (8H).

### 3. Temperature Control

#### a. Temperature Range

Milk	105°F-115°F-130°F-140°F-150°F
Candle	105°F-125°F-145°F-160°F-180°F
Tea	115°F-130°F-150°F-170°F-180°F
Coffee	115°F-130°F-150°F-170°F-180°F

b. There are 4 temp modes settings, to change temperature modes, press and hold  and  at the same time for 3 seconds, it will change from "Coffee" to "Milk" to "Candle" to "Tea".


c. Each mode has 5 temperature options from 105°F to 180°F for your like, please tap  or  to set a custom temperature from 105°F to 180°F. Once you set the temperature, the display will flash 3 times and the warmer will heat up.

d. **Note:** The temperature on the display shows the temperature of the heating plate, not the temperature of the liquid in your cup. Set the display temperature higher than the temperature you want for your drink.


### 4. Time Setting

a. **Time range:** 1H- 12H

### b. Scheduled Shutoff

When **powered on**, **short press** the timer button  to choose the custom shutoff time. By default, it is set to **8 hrs**. Each press increases the time by 1 hr, cycling through in sequence. Once you stop pressing the button, the scheduled shutoff time will be set, when the warmer reaches the set time, it will automatically shut off to ensure safety.





### c. Scheduled Start-up

When **powered off**, **short press** the timer button  to choose the custom start-up time. By default, it is set to **6 hrs**. Each press increases the time by 1 hr, cycling through in sequence. Once you stop pressing the button, the scheduled start-up time will be set, when it reaches the set time, it will automatically heat up.

## 5. Auto-Memory Function

The smart warmer will **remember the last temperature** you set before turning it off, maintaining your perfect temperature so you never have to memorize it. It will recall your last choice when you **turn it on** and also when it is **scheduled for start-up**.

## 6. Drink Water Reminder Switch

**Long press** the drink water reminder switch button , and the display will appear icon , is turned on successfully, **it will remind you once an hour**. **Long press** the switch button  again, and the display icon  disappears and is off successfully.

7. Tap at  any time to turn off the coffee warmer.

**Note:** If you remove your cup from the smart warmer, the heating plate will hold its temperature for 10 minutes before turning off automatically.

