




# Multifunctional climbing frame

## User's Manual

*Congratulations for choosing this product.*

*Before using this product for the first time, please read the manual carefully and use the equipment only as described in the manual to avoid hazards and personal injury.*

*Please retain this manual for future reference.*

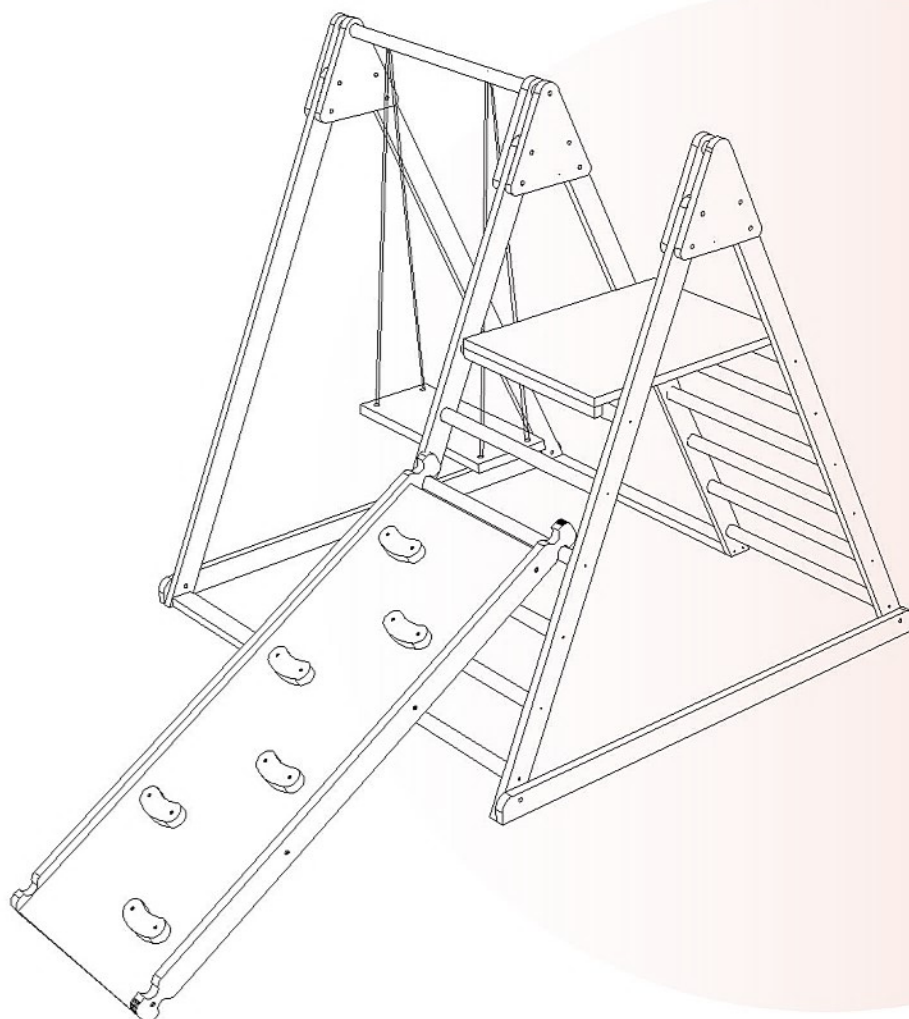

### CAUTION

**Read all precautions and instructions in this manual before using this equipment.**

**If you have any questions about this product, please consult your supplier in time.**

# Contents

1.	BEFORE YOU BEGIN .....	2
1.1	WARNINGS .....	2
1.2	PRECAUTIONS .....	2
2.	PART LIST .....	3
3.	INSTALLATION INSTRUCTION .....	4
4.	MAINTENANCE INSTRUCTIONS .....	8

# 1. BEFORE YOU BEGIN

## 1.1 Warnings

**Warning.** The minimum user age is 3 years old; the maximum user age is 6 years old.

**Warning.** This activity toy is for indoor use.

**Warning.** The maximum user weight is 30kg.

 

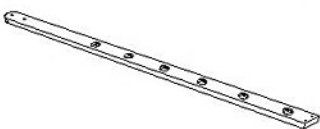
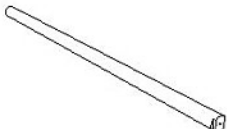

 
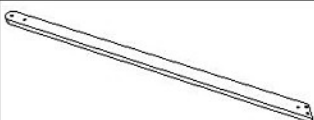






 






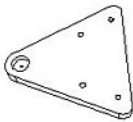

 
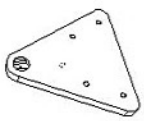



 
**Warning.** Only for domestic use.

## 1.2 Precautions

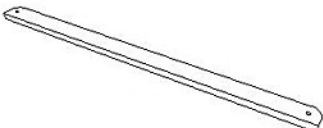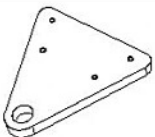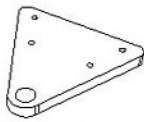- 1) It is recommended to place the activity toy on a level surface at least 2 m from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
- 2) This activity toys shall not be installed over concrete, asphalt or any other hard surface.
- 3) Please do not turn slide toward sun to avoid prolonged direct sunlight.
- 4) It is not recommended that more than one user use the device at the same time, otherwise it may cause danger.
- 5) Please keep the assembly and installation instructions for further reference.
- 6) Do not make modifications to the structure of the toy or add accessories easily. For special requirements, please consult your supplier.
- 7) Contains small parts, the toy must be assembled by an adult, then use by children.
- 8) Toys must be used under the direct supervision of an adult.
- 9) Toys are for household use only.
- 10) The packaging part is not a toy, please do not take it out to play to avoid danger.


**FAILURE TO ABIDE BY THIS INSTALLATION STEPS MAY CAUSE INCORRECT INSTALLATION. THUS, NEED TO RE-INSTALL, OR EVEN CAUSE THE DEVICE TO BE UNSTABLE, RESULTING IN MORE SERIOUS CONSEQUENCES.**

## 2. Part list

A		1PCS	I		2PCS
B		1PCS	J		1PCS
C		1PCS	K		1PCS
D		1PCS	K1		2PCS
E		1PCS	L		1PCS
F		1PCS	M		2PCS
G		2PCS	N		1PCS
G1		2PCS	a	M6*50 	12PCS
					2PCS
O		1PCS	b	M5*35 	32PCS
					1PCS
G2		1PCS	c		2PCS
				M3*15 	4PCS
G3		1PCS	d	M6*30 	4PCS
H		12PCS	e	M6*30 	2PCS
			f	M5*10 	8PCS


### 3. Installation instruction

#### STEP 1

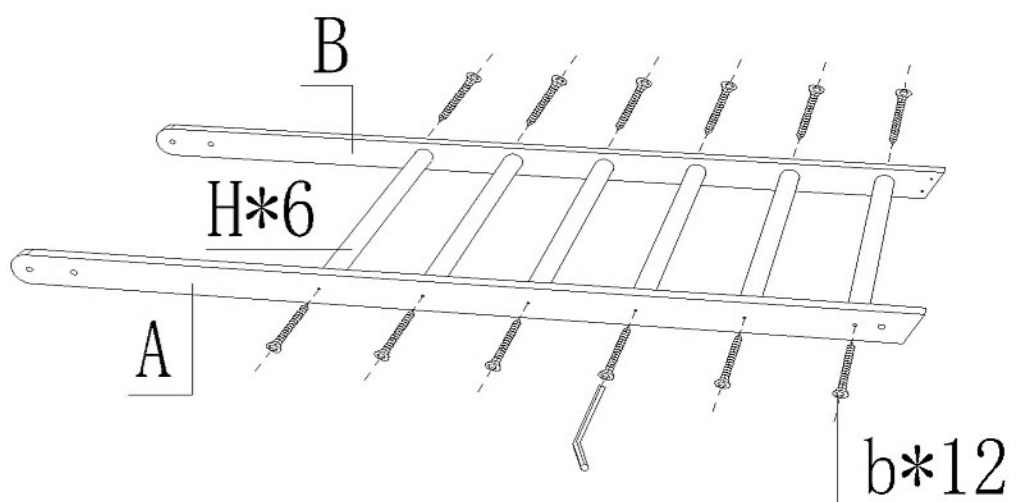


Connect A and B with 6 pieces of H and connect them with 12 pieces of M5\*35.

#### STEP 2

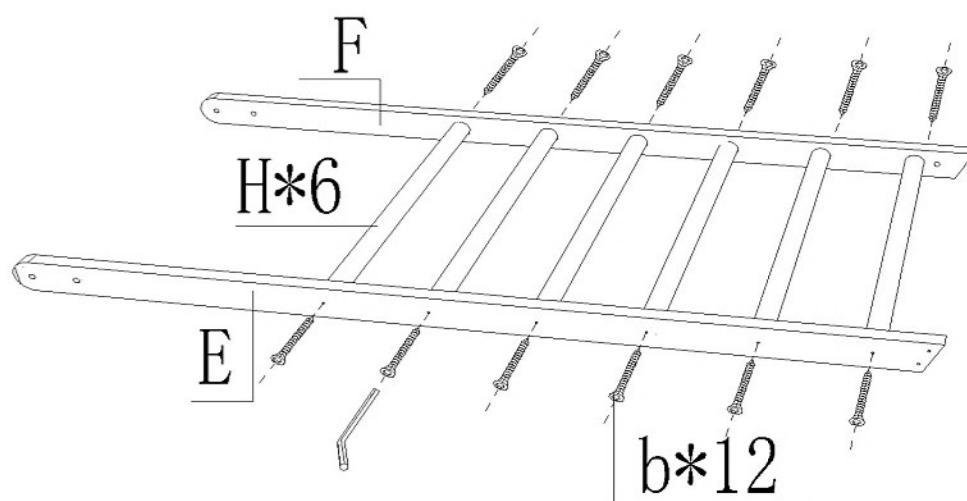


Connect E and F with 6 pieces of H and connect them with 12 pieces of M5\*35.

## STEP 3

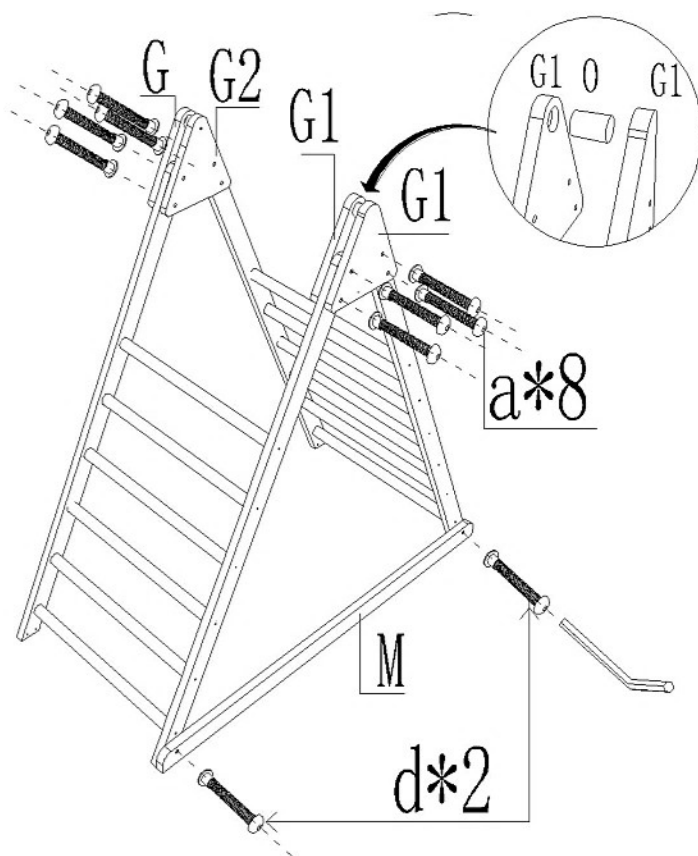

Connect the parts installed in the first and second steps with G, G1, G3, then put the matching decorative block with G1 between the two G1 triangular plate and fix them with 8 pieces of M6\*50. Then, fix the bottom bracket M with 2 pieces of M6\*30 at the bottom of the triangle. Then put it aside for later use.


## STEP 4

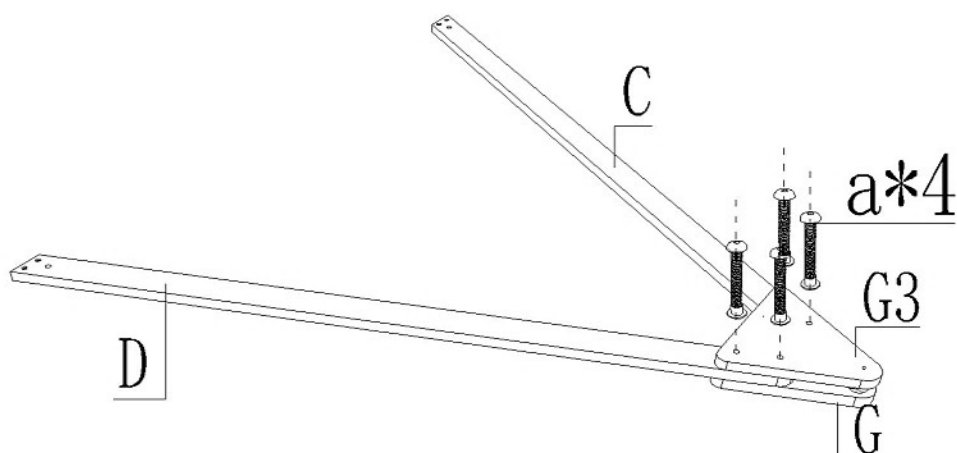

Connect C and D through G and G2 and fix them with 4 pieces of M6\*50. Then put it aside for later use.




## STEP 5

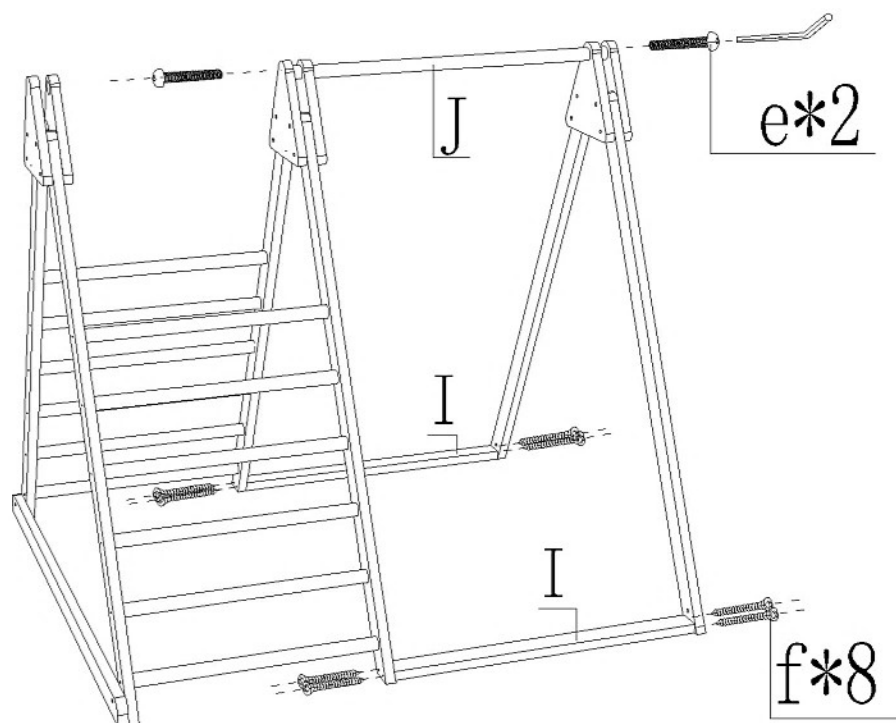

Connect the parts installed in the 3 and 4 steps with 2 pieces of M6\*30. and with 8 of M5\*40


## STEP 6

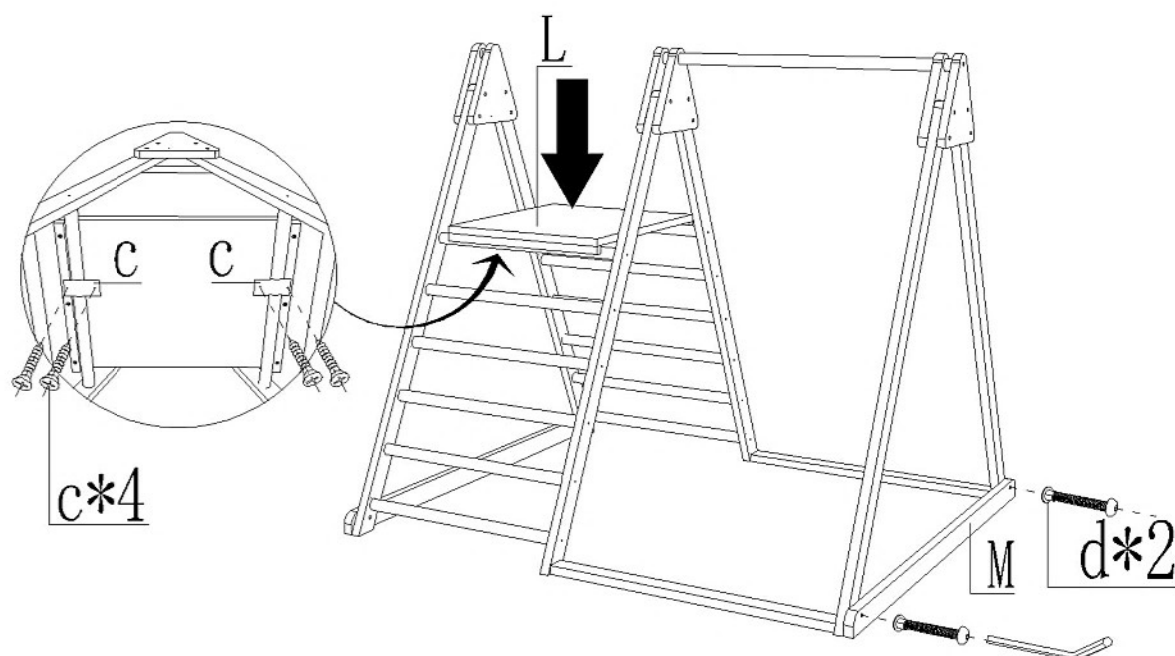

Install the L board on the climbing ladder, and add the M bottom bracket to the bottom of the tripod as shown in the figure, and connect them with two pieces of M6\*30.


And use 4 pieces of M3\*15 to fix the rewind tape of C part.

## STEP 7

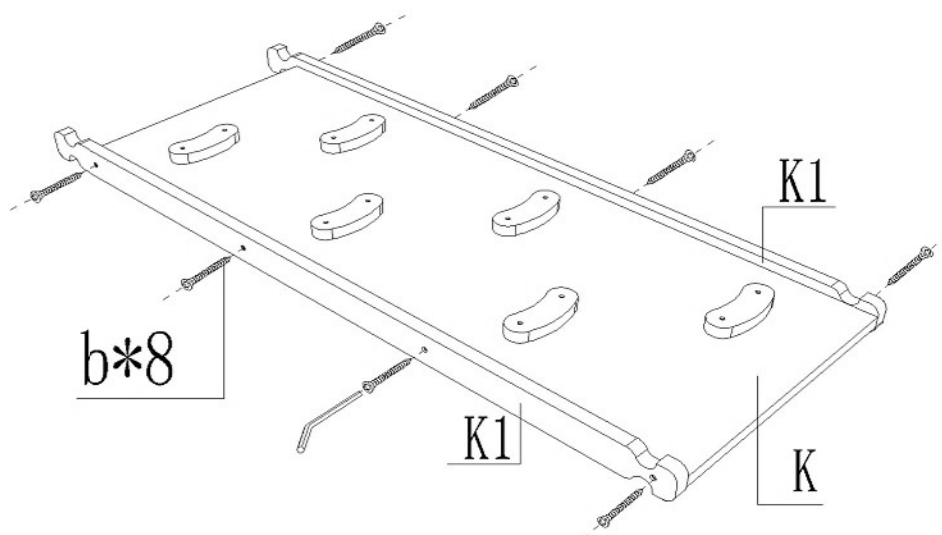

Connect two slide side panels K1 to slide K with 8 M5\*35.

## STEP 8

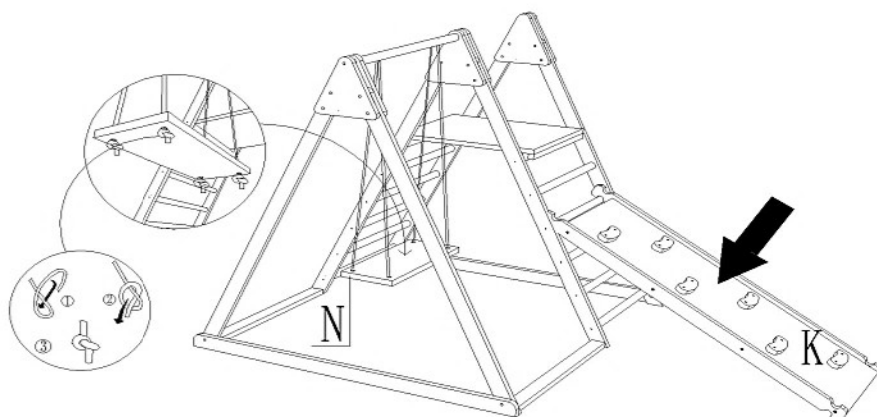

Install the swing into Corresponding position. and place the slide on the first or second round stick of the main body, and the whole installation procedure is complete (**please do not place it on the third or upper round stick, otherwise it will cause danger due to the excessive inclination angle**)

All ropes are the same, minimum diameter of rope: 10mm. The swing rope length: 1.76m.



## 4. Maintenance instructions

At the beginning of each season as well as at regular intervals during the usage season, Product should be checked and you should follow maintenance instructions:

- check all nuts and bolts for tightness and tighten when required;
- oil all metallic moving parts;
- check swing seats, chains, ropes and other means of attachments for evidence of deterioration;
- replace defective parts in accordance with the manufacturer's instructions.

The main parts should be checked and maintained at regular intervals.

If checks are not carried out, the activity toy could overturn or become a fall off hazard.