



AVR32-BYPASS


see doc32090 section 2.1

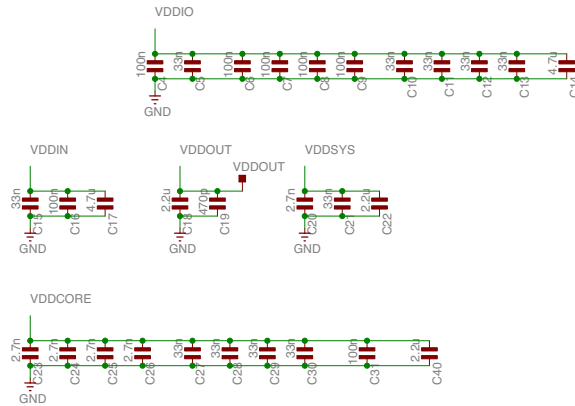


AVR32-POWER

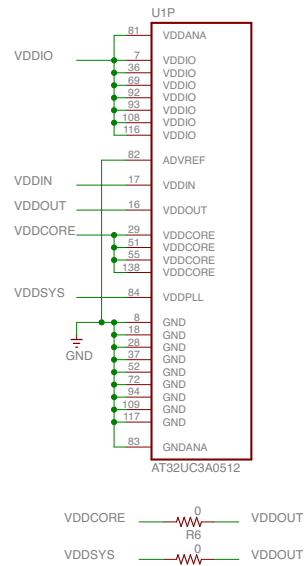

 BF-IO




BF-SPI

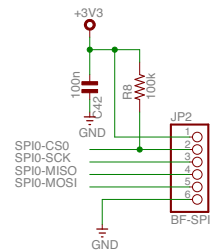

AVR32-PINOUT



JTAG

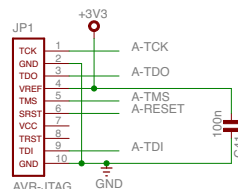

note: pin7 used to supply power to JTAG ICE (n/a here)
doc2475.pdf page 2-2

TITLE: avr32break

Document Number:

REV:

Date: 8/28/12 1:22 PM

Sheet: 1/3