


## Using the Controller

You can operate the product using one of the following methods.

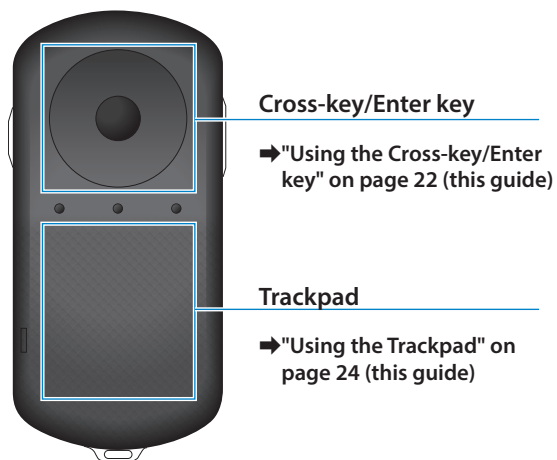

The controller may vibrate depending on the operation being performed.

### Using the Cross-key/Enter key

#### ■ Cross-key

The Cross-key is an electrostatic touch sensor, and will react to the lightest of touches.

The selection moves when you select icons or displayed items. When you hold down one direction, the selection moves continuously in that direction.

When you have not selected icons or displayed items, you can scroll the screen.

