



CNC XPRO QUICK START GUIDE

Powering with ATX supply:

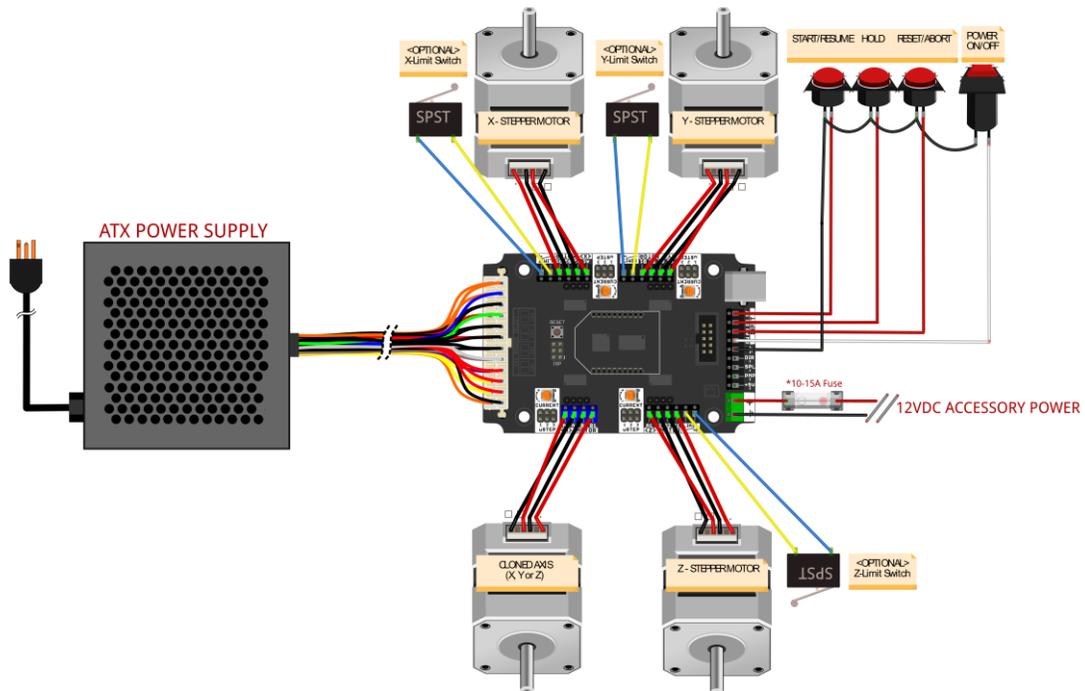

* Fuse REQUIRED if connecting to 12VDC accessory output terminal (w/ ATX supply)

Powering with 12-24V (DC) supply:

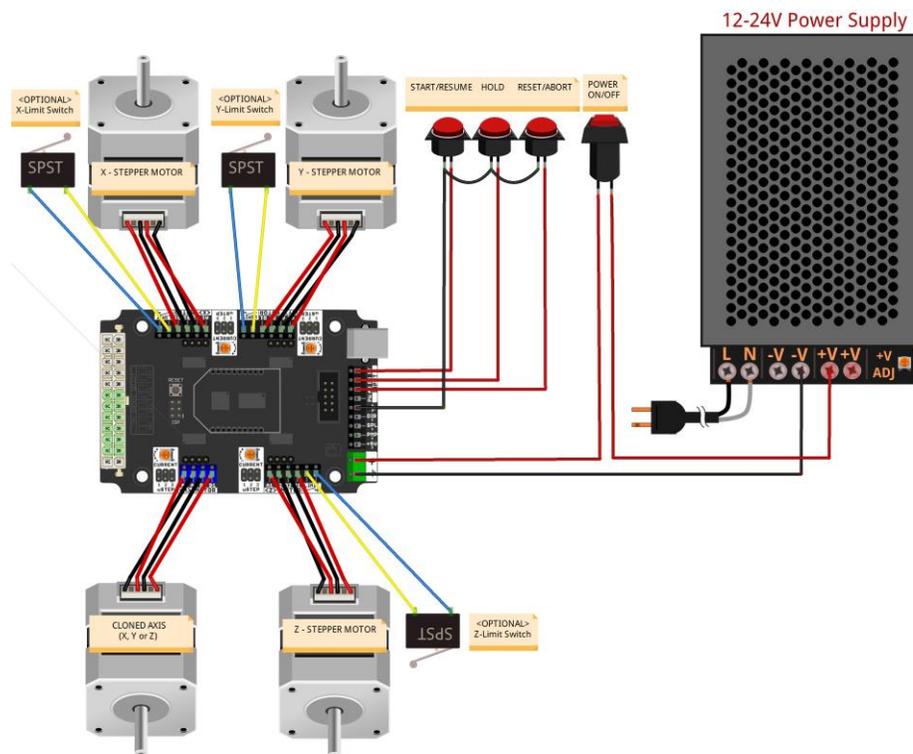

NOTE: Please refer to your motor diagram for winding layout