



RH40 Data Logger Reader Quick Start

1. Open RW.exe. Set up COM port, baud rate, and parity to match with settings in RH40. Then click on “Open”.

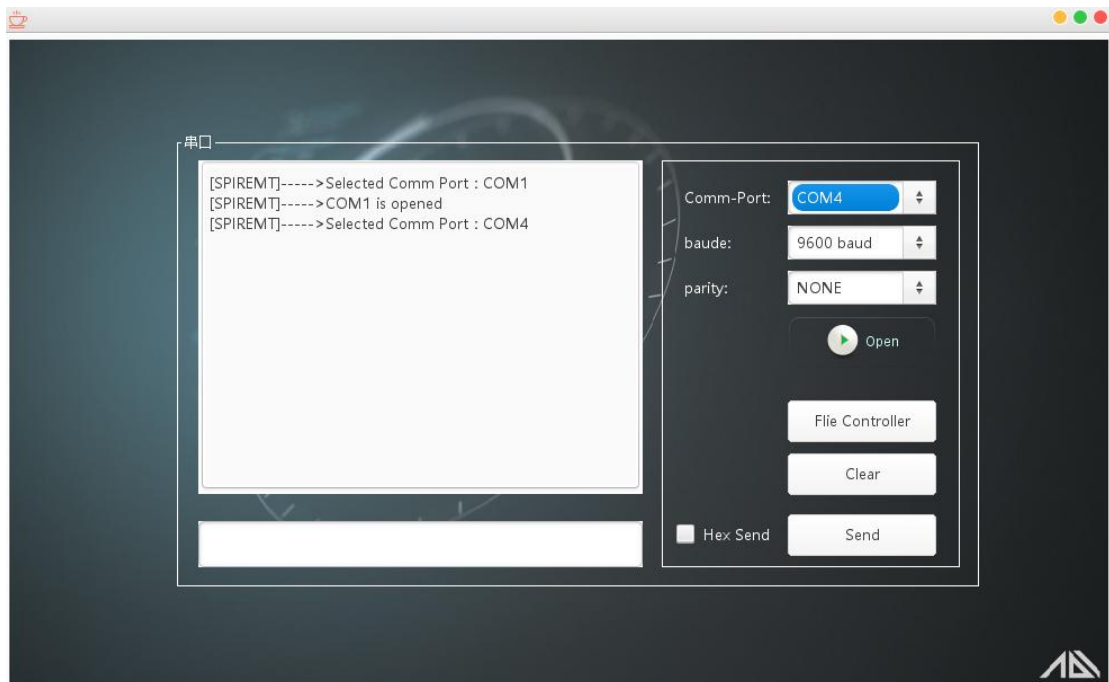

2. Click on “File Controller” to enter data reading interface.

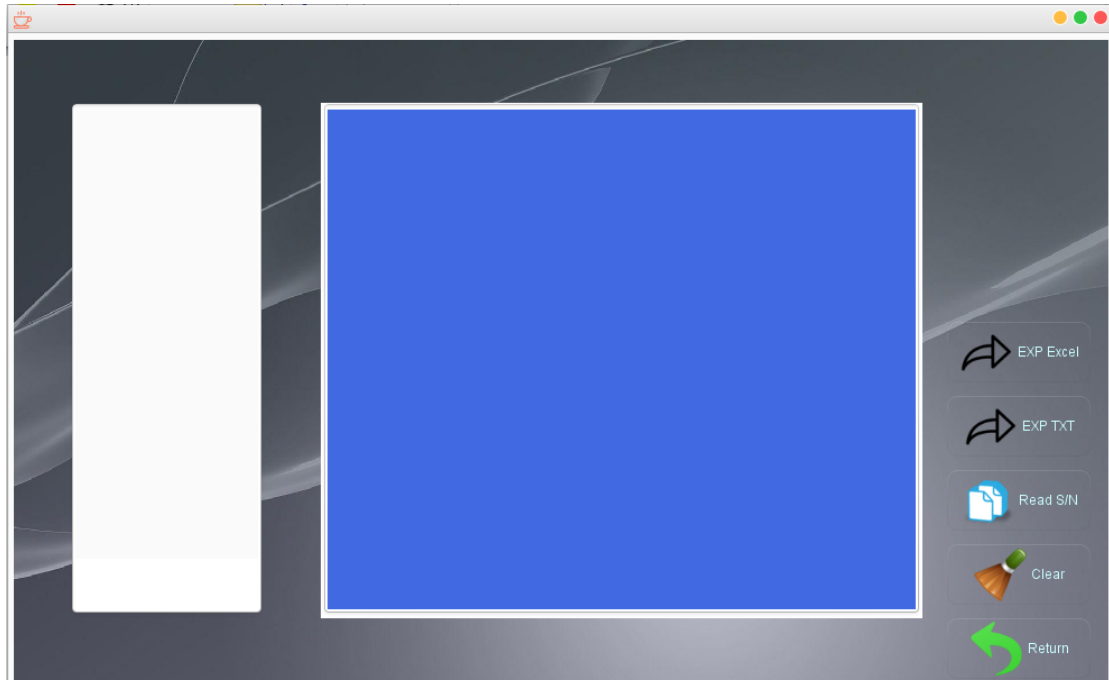

3. Click on “Read SN”, and file names saved in data logger will show up in the white column on the left. Right click on the file to be read, and select “Read”. Logged data will show up in the blue column on the right.
4. Click on “EXP EXCEL” or “EXP TXT” to save/export the data as Excel file or TXT file.