
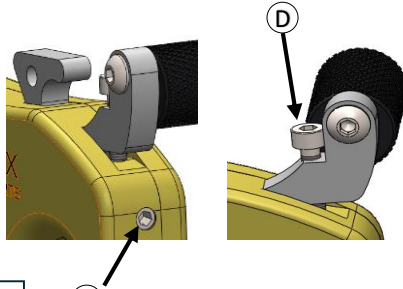


KNOW YOUR THUMB RELEASER

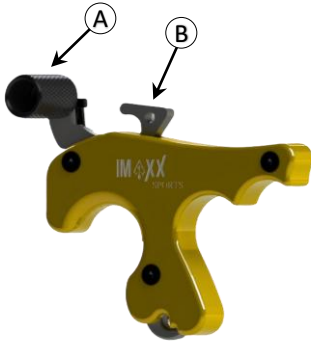



USER INFORMATION - GUIDE

STEP - 1

PUSH "B" IN TO LOAD

STEP - 2

ATTACH HOOK TO D-LOOP
PRESS HOOK TO LOCK

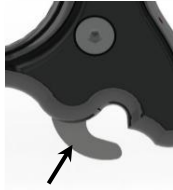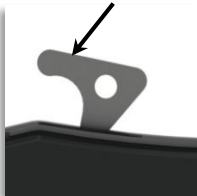

(C)

(A) - TRIGGER

(B) - LOCK

(C) - SENSITIVITY ADJUSTMENT

(D) - TRIGGER TRAVEL ADJUSTMENT

- ❖ USE 2mm ALLEN KEY FOR TRIGGER TRAVEL.
- ❖ USE 2.5mm TO ADJUST "C" FOR SENSITIVITY ADJUSTMENT. HIGH PRESSURE, TURN CLOCKWISE, LOWER PRESSURE, TURN ANTI-CLOCKWISE.
- ❖ ADJUST "D" FOR TRIGGER TRAVEL.

LIMITED WARRANTY:

- WARRANTY AGAINST DEFECTS IN MATERIAL FOR 12 MONTHS.
- WARRANTY IS VOID IF FOUND THAT THE RELEASE HAS BEEN DISASSEMBLED, ABUSED, MODIFIED, OR SUBJECT TO ABNORMAL CONDITIONS (DENTS OR BENDS).
- ALL RETURNS WILL BE SUBJECT TO SCRUTINY.
- THE COMPANY IS NOT LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OCCURRING DUE TO IMPROPER USAGE OF THE PRODUCT.

WARNING:

- NEVER DRAW THE BOW WITHOUT AN ARROW.
- INSPECT EQUIPMENT BEFORE USE TO ENSURE PROPER OPERATING CONDITIONS.
- IN CASE OF ANY DEFECT KINDLY CONTACT THE RETAILER OR THE COMPANY.
- ENSURE PROPER SHOOTING & SAFETY REGULATIONS ARE IN PLACE.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN EQUIPMENT DAMAGE OR INJURY.

NOTE: FOR MAINTENANCE, KINDLY CONTACT THE COMPANY

IMAXX SPORTS CHENNAI-600098.

www.imaxxsports.com